


## EN Quick Start Guide

## FR Guide de démarrage rapide

## ES Guía rápida de inicio

WC768101  
1AG6P1P6925-

## Checking the contents of the box / Vérifier le contenu de la boîte / Comprobación de los contenidos de la caja

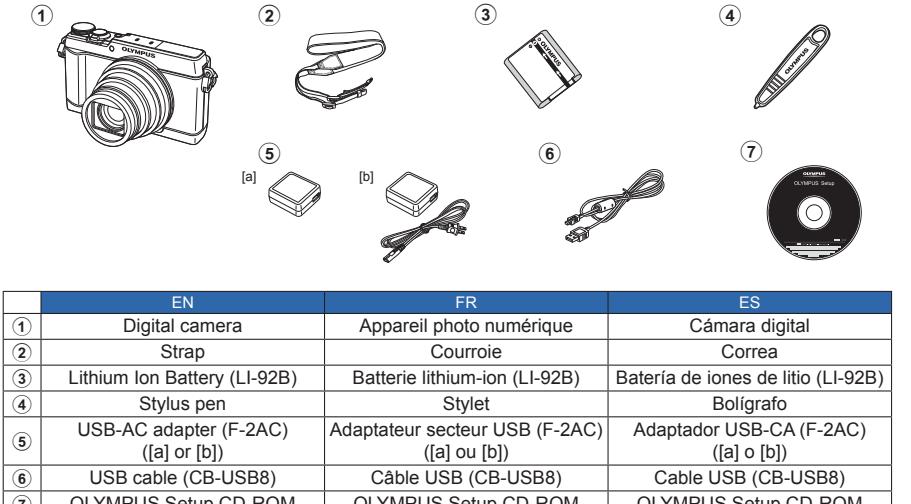

EN Other accessories not shown: Warranty card

Contents may vary depending on purchase location.

FR Autres accessoires non illustrés: Carte de garantie

Le contenu est susceptible de varier en fonction du lieu d'achat.

ES Otros accesorios no mostrados: Tarjeta de garantía

Los contenidos pueden variar dependiendo del lugar de la compra.

date of issue 2014.12.

**Technical Support (U.S.A. / Canada)**  
24/7 online automated help:  
http://www.olympusamerica.com/support  
Phone customer support:  
Phone 1-800-260-1625 (Toll-free)

## Service Centers

U.S.A.: Pennsylvania Olympus Imaging America Inc.  
6500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610  
Phone: (800) 260-1625

Our phone customer service is available from 9 am to 5 pm  
(Monday to Friday) ET

To find the nearest Service Centers, please visit:  
http://www.olympusamerica.com/digital

Adobe Reader is required to view the manual of instructions.

and click on the Worldwide Warranty icon at the bottom of the page.

**Latin America:**

Argentina: AM Services S.A.  
Súplica 199/2 piso oficina 205 (C1008AAQ)  
Cuidad Autónoma de Buenos Aires - Argentina

Phone: (011)-4326-8596

E-mail: info@amservice.com.ar

www.amservice.com.ar

Brazil: Olympus Office do Brasil Ltda.

SAC: 0 800 72 68 72 0

E-mail: sac@olympus.com.br

Colombia: OLYMPUS SA

Calle 68 No 12-32, Bogotá

Phone: (0571) 235-7265/348-1573

Fax: (0571) 348-1574

E-mail: olytronica@oltronic.com

© 2014 OLYMPUS IMAGING CORP.

Printed in Indonesia

## EN

Thank you for purchasing an Olympus digital camera.  
Please read these instructions carefully.

 
The camera you purchased is provided with the CD-ROM Instruction Manual.  
For detailed information on all features and Provisions of warranty, please refer to the CD-ROM.  
Adobe Reader is required to view the Instruction Manual.

## Inserting and removing the battery and card

## 1 Follow Steps ① and ② to open the battery/card compartment cover.

- Turn off the camera before opening the battery/card compartment cover.
- Always use the specified cards with this camera. Do not insert other types of memory cards.


Battery/card compartment lock



## 2 Insert the battery while sliding the battery lock knob in the direction of the arrow.

- Insert the battery as illustrated with the mark toward the battery lock knob.
- When using the camera, be sure to close the battery/card compartment cover.

Battery lock knob

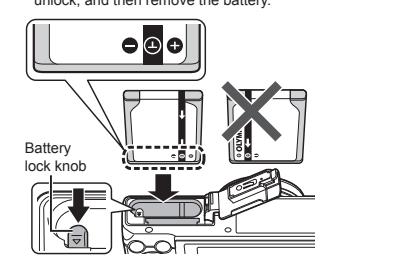

## 3 Insert the card straight until it clicks into place.

- Do not touch the metallic parts of the card directly.
- Always use the specified cards with this camera. Do not insert other types of memory cards.


Write-protect switch



## 4 Follow Steps ① and ② to close battery/card compartment cover.

- Do not touch the metallic parts of the card directly.
- Always use the specified cards with this camera. Do not insert other types of memory cards.

Battery lock knob

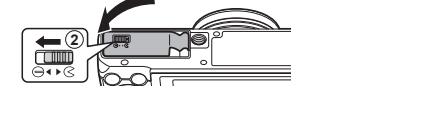

## Charging the battery

## 1 Check that the battery is in the camera, and connect the USB cable and USB-AC adapter.

- The battery is not fully charged at shipment. Before use, be sure to charge the battery until the indicator lamp turns off (up to 4.5 hours).

Indicator lamp  
On: Charging  
Off: Charged

AC outlet

Multi-connector

USB cable (supplied)

Connector cover

Never use any cables other than supplied or Olympus-designed USB cable. This may cause smoking or burning.

The included F-2AC USB-AC adapter (hereafter referred to as USB-AC adapter) differs depending on the region where you purchased the camera. If you received a plug-in type USB-AC adapter, plug it directly into AC outlet.

If the indicator lamp does not light, check the USB cable and USB-AC adapter connections.

If "No Connection" is displayed on the back monitor, disconnect the USB cable and set [Storage] in [USB Connection] before connecting the cable again.

The camera was unable to focus if the AF target mark flashes red. Try focusing again.

The shutter speed and aperture value are displayed in red if the camera is unable to achieve optimal exposure.

To take the picture, gently press the shutter button all the way down while being careful not to shake the camera.

You can also take photographs using the touch screen.

## Turning on the camera and making the initial settings

## 1 Press the ON/OFF button to turn on the camera, press to select your language and press the button.

- Your most recent photograph is displayed.
- Press to select an image.

2 Press to select the year for [Y].

3 Press to save the setting for [Y].

4 As in Steps 2 and 3, press to set [M] (month), [D] (day), [Time] (hours and minutes), and [Y/M/D] (date order), and then press the button.

For precise time setting, press the button as the time signal strikes 00 seconds.

5 Use to select the time zone and then press the button.

Use to turn daylight saving time (ISummer) on or off.

6 Use to select the time zone and then press the button.

Use to turn daylight saving time (ISummer) on or off.

7 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

8 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

9 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

10 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

11 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

12 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

13 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

14 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

15 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

16 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

17 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

18 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

19 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

20 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

21 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

22 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

23 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

24 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

25 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

26 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

27 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

28 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

29 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.


30 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

31 Use to select the date and then press the button.

Use to turn daylight saving time (ISummer) on or off.

32 Use <img alt="arrow

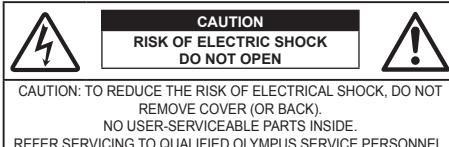**SAFETY PRECAUTIONS**

**CAUTION:** TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE.

REFER SERVICING TO QUALIFIED OLYMPUS SERVICE PERSONNEL.

An exclamation mark enclosed in a triangle alerts you to important operating and maintenance instructions in the documentation provided with the product.

If the product is used without observing the information given under this symbol, serious injury or death may result.

If the product is used without observing the information given under this symbol, injury or death may result.

If the product is used without observing the information given under this symbol, minor personal injury, damage to the equipment, or loss of valuable data may result.

**WARNING!** TO AVOID THE RISK OF FIRE OR ELECTRICAL SHOCK, NEVER DISASSEMBLE, EXPOSE THIS PRODUCT TO WATER OR OPERATE IN A HIGH HUMIDITY ENVIRONMENT.

**General Precautions**

**Read All Instructions** — Before you use the product, read all operating instructions. Save all manuals and documentation for future reference.

**Cleaning** — Always unplug this product from the wall outlet before cleaning. Use only a damp cloth for cleaning. Never use any type of liquid or aerosol cleaner, or any type of organic solvent to clean this product.

**Attachments** — For your safety, and to avoid damaging the product, use only accessories recommended by Olympus.

- Water and Moisture** — For precautions on products with weather-proof designs, read the weatherproofing sections.
- Location** — To avoid damage to the product, mount the product securely on a stable tripod, stand, or bracket.
- Power Source** — Connect this product only to the power source described on the product label.
- Lightning** — A lightning strike may occur while using a USB-AC adapter. Remove it from the wall outlet immediately.
- Foreign Objects** — To avoid personal injury, never insert a metal object into the product.
- Heat** — Never use or store this product near any heat source such as a radiator, heat register, stove, or any type of equipment or appliance that generates heat, including stereo amplifiers.

**DANGER****Handling the Battery**

**Follow these important guidelines to prevent batteries from leaking, overheating, burning, exploding, or causing electrical shocks or burns.**

The camera uses a lithium ion battery specified by Olympus. Charge the battery with the specified USB-AC adapter or charger. Do not use any other USB-AC adapters or chargers.

Never use or store the camera in microwaves, on hot plates, or in proximity to other electronic devices. This may cause overheating, burning, or exploding.

**Do not connect terminals with any metallic objects.**

**Take precautions when carrying or storing batteries to prevent them from coming into contact with any metal objects such as jewelry, pins, fasteners, keys, etc.**

The short circuit may cause overheating, exploding, or burning.

**Never store batteries where they will be exposed to direct sunlight, or subjected to high temperatures in a hot vehicle, near a heat source, etc.**

**To prevent causing battery leaks or damaging their terminals, carefully follow all instructions regarding the use of batteries. Never attempt to disassemble a battery or modify it in any way; solder, etc.**

**If a battery fluid gets into your eyes, flush your eyes immediately with clear, cold running water and seek medical attention.**

**WARNING!** TO AVOID THE RISK OF FIRE OR ELECTRICAL SHOCK, NEVER DISASSEMBLE, EXPOSE THIS PRODUCT TO WATER OR OPERATE IN A HIGH HUMIDITY ENVIRONMENT.

**General Precautions**

**Read All Instructions** — Before you use the product, read all operating instructions. Save all manuals and documentation for future reference.

**Cleaning** — Always unplug this product from the wall outlet before cleaning. Use only a damp cloth for cleaning. Never use any type of liquid or aerosol cleaner, or any type of organic solvent to clean this product.

**Attachments** — For your safety, and to avoid damaging the product, use only accessories recommended by Olympus.

- If you cannot remove the battery from the camera, contact an authorized distributor or service center.**
- Do not try to remove the battery by force.**
- Damage to the battery exterior (scratches, etc.) may produce heat or an explosion.**
- Always store batteries out of the reach of small children and pets.** If they accidentally swallow a battery, seek medical attention immediately.

**WARNING****Handling the Camera**

**Do not touch the camera near flammable or explosive gases.**

**Do not use or store the camera in dusty or humid places.**

**Do not use the flash and LED (including AF illuminator) on people (infants, small children, etc.) at close range.**

**You must be at least 1 m (3 ft.) away from the faces of your subjects.**

**Firing the flash too close to the subject's eyes could cause a temporary loss of vision.**

**Do not look at the sun or strong lights with the camera.**

**Keep the camera away from strong light sources.**

**Always use and store the camera out of the reach of young children and infants to prevent the following dangerous situations which could cause serious injury:**

**Becoming entangled in the camera strap, causing strangulation.**

**Accidentally swallowing the battery, cards or other small parts.**

**Accidentally firing the flash into their own eyes or those of another child.**

**Accidentally being injured by the moving parts of the camera.**

**The short circuit may cause overheating, exploding, or burning.**

**Never store batteries where they will be exposed to direct sunlight, or subjected to high temperatures in a hot vehicle, near a heat source, etc.**

**To prevent causing battery leaks or damaging their terminals, carefully follow all instructions regarding the use of batteries. Never attempt to disassemble a battery or modify it in any way; solder, etc.**

**Do not cover the flash with a hand while firing.**

**Using the wireless LAN function**

**Turn off the camera in hospitals and other locations where medical equipment is present.**

**The use of wireless devices may adversely affect medical equipment, causing a malfunction in an accident.**

**Turn off the camera when onboard aircraft.**

**Using wireless devices onboard may hinder safe operation of the aircraft.**

**CAUTION****Handling the Camera**

**Stop using the camera immediately if you notice any unusual noise, smoke, or smoke around it.**

**Never remove the batteries with bare hands, which may cause a fire or burn your hands.**

**Never hold or operate the camera with wet hands.**

**This may cause overheating, exploding, burning, electrical shocks, or malfunctions.**

**Be careful with the strap when you carry the camera. It could easily catch on structures and cause serious damage.**

**Do not store the camera in places where it may be subject to extreme high temperatures.**

**Doing so may cause parts to deteriorate and, in some circumstances, cause the camera to catch fire. Do not use the camera or USB-AC adapter if it is covered (such as a blanket). This could cause overheating, resulting in fire.**

- Insert the battery carefully as described in the operating instructions.**
- If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.**
- Do not use batteries with scratches or damage to the casing, and do not scratch the battery.**
- Never expose the battery to strong shocks or continuous vibration by dropping or hitting.**
- This may cause exploding, overheating, or burning.**
- If a battery leaks, has unusual odor, becomes discolored or deformed, or becomes abnormal in any other way during operation, stop using the camera, and keep away from fire immediately.**
- If a battery leaks fluid onto your clothing or skin, remove the clothing and flush the affected areas with clean, running cold water immediately. If the fluid burns your skin, seek medical attention immediately.**

**WARNING****Handling the Camera**

**Do not use the camera near flammable or explosive gases.**

**Do not use or store the camera in dusty or humid places.**

**Do not use the flash and LED (including AF illuminator) on people (infants, small children, etc.) at close range.**

**You must be at least 1 m (3 ft.) away from the faces of your subjects.**

**Firing the flash too close to the subject's eyes could cause a temporary loss of vision.**

**Do not look at the sun or strong lights with the camera.**

**Keep the camera away from strong light sources.**

**Always use and store the camera out of the reach of young children and infants to prevent the following dangerous situations which could cause serious injury:**

**Becoming entangled in the camera strap, causing strangulation.**

**Accidentally swallowing the battery, cards or other small parts.**

**Accidentally firing the flash into their own eyes or those of another child.**

**Accidentally being injured by the moving parts of the camera.**

**The short circuit may cause overheating, exploding, or burning.**

**Never store batteries where they will be exposed to direct sunlight, or subjected to high temperatures in a hot vehicle, near a heat source, etc.**

**To prevent causing battery leaks or damaging their terminals, carefully follow all instructions regarding the use of batteries. Never attempt to disassemble a battery or modify it in any way; solder, etc.**

**Do not cover the flash with a hand while firing.**

**Using the wireless LAN function**

**Turn off the camera in hospitals and other locations where medical equipment is present.**

**The use of wireless devices may adversely affect medical equipment, causing a malfunction in an accident.**

**Turn off the camera when onboard aircraft.**

**Using wireless devices onboard may hinder safe operation of the aircraft.**

**CAUTION****Handling the Camera**

**Stop using the camera immediately if you notice any unusual noise, smoke, or smoke around it.**

**Never remove the batteries with bare hands, which may cause a fire or burn your hands.**

**Never hold or operate the camera with wet hands.**

**This may cause overheating, exploding, burning, electrical shocks, or malfunctions.**

**Be careful with the strap when you carry the camera. It could easily catch on structures and cause serious damage.**

**Do not store the camera in places where it may be subject to extreme high temperatures.**

**Doing so may cause parts to deteriorate and, in some circumstances, cause the camera to catch fire. Do not use the camera or USB-AC adapter if it is covered (such as a blanket). This could cause overheating, resulting in fire.**

- Handle the camera with care to avoid getting a low-temperature burn.**
- When the camera contains metal parts, overheating can result in a low-temperature burn. Pay attention to the following:**
  - When used for a long period, the camera will get hot. If you hold on to the camera in this state, a low-temperature burn may occur.**
  - In places subject to extremely cold temperatures, the temperature of the camera's body may be lower than the environmental temperature. If possible, wear gloves when handling the camera in cold temperatures.**
- Before transporting the camera, remove a tripod and all other non-Olympus accessories.**

**Using a separately sold USB-AC adapter**

The camera uses a lithium ion battery specified by Olympus. Charge the battery with the specified USB-AC adapter or charger. Do not use any other USB-AC adapters or chargers.

Never use or store the camera in microwaves, on hot plates, or in proximity to other electronic devices. This may cause overheating, burning, or exploding.

**Do not connect terminals with any metallic objects.**

**Take precautions when carrying or storing batteries to prevent them from coming into contact with any metal objects such as jewelry, pins, fasteners, keys, etc.**

The short circuit may cause overheating, exploding, or burning.

**Never store batteries where they will be exposed to direct sunlight, or subjected to high temperatures in a hot vehicle, near a heat source, etc.**

**To prevent causing battery leaks or damaging their terminals, carefully follow all instructions regarding the use of batteries. Never attempt to disassemble a battery or modify it in any way; solder, etc.**

**Do not cover the flash with a hand while firing.**

**Using the wireless LAN function**

**Turn off the camera in hospitals and other locations where medical equipment is present.**

**The use of wireless devices may adversely affect medical equipment, causing a malfunction in an accident.**

**Turn off the camera when onboard aircraft.**

**Using wireless devices onboard may hinder safe operation of the aircraft.**

**CAUTION****Handling the Camera**

**Stop using the camera immediately if you notice any unusual noise, smoke, or smoke around it.**

**Never remove the batteries with bare hands, which may cause a fire or burn your hands.**

**Never hold or operate the camera with wet hands.**

**This may cause overheating, exploding, burning, electrical shocks, or malfunctions.**

**Be careful with the strap when you carry the camera. It could easily catch on structures and cause serious damage.**

**Do not store the camera in places where it may be subject to extreme high temperatures.**

**Doing so may cause parts to deteriorate and, in some circumstances, cause the camera to catch fire. Do not use the camera or USB-AC adapter if it is covered (such as a blanket). This could cause overheating, resulting in fire.**

- Handle the camera with care to avoid getting a low-temperature burn.**
- When the camera contains metal parts, overheating can result in a low-temperature burn. Pay attention to the following:**
  - When used for a long period, the camera will get hot. If you hold on to the camera in this state, a low-temperature burn may occur.**
  - In places subject to extremely cold temperatures, the temperature of the camera's body may be lower than the environmental temperature. If possible, wear gloves when handling the camera in cold temperatures.**
- Before transporting the camera, remove a tripod and all other non-Olympus accessories.**

**Using a separately sold charger**

A charger (UC-90; sold separately) can be used to charge the battery.

**Handling the Battery**

For loading, always inspect the battery carefully for leaks, discoloration, warping, or any other abnormality.

The battery may become hot during prolonged use. To avoid minor burns, do not remove it immediately after using the camera.

Always unload the battery from the camera before storing the camera for a long period.

When storing the battery for a long period, select a cool location for storage.

This camera uses one Olympus lithium ion battery. Use the specified genuine battery.