



## ENGLISH



**Charging:** Whenever your ARCHOS is connected to a running computer, it will charge automatically.

**Connecting:** When you connect the USB cable to a computer, the ARCHOS will connect as an external hard drive. Windows® Explorer will show it as **ARCHOS (E:)** for example. For Mac® computers, it will also appear as an external hard drive.



In the Music menu, songs are displayed by artist, album, genre, etc. Press : Play/Pause/Select

**Long press**  to see options available for the displayed screen (shuffle, equalizer, repeat mode, ...)

**Short press** : Back button.



Opening the photo browser will allow you to view the stored photos one by one or as an automatic slide show. Highlight the desired photo file, then press to view it. Press the Right and Left buttons to view the next or previous photo. Press to start a slideshow. Press again to stop the slideshow. **Long press** : to see options available for the displayed screen. **Short press** : Back button.



The video player requires that your video file be of a specific format in order to be able to play. A converter application for Windows® computers is available in the folder 'Software' on the ARCHOS that can be installed on your computer. Convert your video files to a resolution of 160x128. The ARCHOS will not play files purchased on-line. **Long press** : to see options available for the displayed video. **Short press** : Back button.



Make audio recordings.  
Press to start/pause.  
**Short press**  and select YES : to save file.



To use the radio, you must have headphones plugged in as this acts as your antenna. **Long press** : to create radio presets, scan for stations, or record what is currently playing.



You can transfer your media files to the ARCHOS either by copy/pasting them into the respective folders using Windows® Explorer (or the Finder on a Macintosh), or by using Windows Media® Player. On your computer, start Windows Media® Player. 1) Select the Sync tab. 2) Drag the media files you want to transfer into the sync area in the panel on the right. 3) Click on the Start Sync button. The selected videos, songs or photos will be copied directly into the corresponding Video, Music or Pictures folder of the ARCHOS. See your Windows Media® Player help instructions for more information.

**Display:** Allows you to set the Brightness (the screen brightness), Backlight Time (how long before the screen goes off or dims) and the Backlight Mode (determines if the screen goes dim or off - to save battery power)

**Power Off:** Sets the continuous playing time before the player is turned off automatically.

**Language:** Allows you to set your interface language

**PROBLEM:** The device is frozen and doesn't respond

 
**SOLUTION:** Switch the ON/OFF button to turn off the device.

**PROBLEM:** The video/music file I saved onto the ARCHOS does not play or plays incorrectly. **SOLUTION:** Make sure that it is in a format that is supported by the ARCHOS (visit [www.archos.com](http://www.archos.com) for more information).

**PROBLEM:** I added new music to my ARCHOS but it does not show up in the Music browser. **SOLUTION:** You must place your files in the Music folder on the ARCHOS. Select Update Music Library (bottom item on list) which will update the Library with all the latest added music.

## Register your product!

[www.archos.com/register](http://www.archos.com/register).  
See the Frequently Asked Questions section on [www.archos.com/faq](http://www.archos.com/faq).  
Technical Support Team: Visit [www.archos.com/support](http://www.archos.com/support) for e-mail support. Do not expose the unit to rain or moisture. Use of this product is for personal use only. Loading music, video, or picture files for sale or other business purposes is or may be a violation of copyright law. Copyrighted protection may require authorization to be received. Please be sure to check applicable laws concerning the recording and use of such for your country and jurisdiction. For driver safety, only a passenger should operate the device when the car is in motion and not the driver. Laws governing the usage of electronic device by the driver may be applicable in your jurisdiction and/or country.



## FRANÇAIS

**Charger :** Lorsque votre ARCHOS est connecté à un ordinateur sous tension, il se charge automatiquement.

**Connexion:** Quand vous connectez l'ARCHOS à un ordinateur, il se connecte en mode disque dur. Il apparaît dans l'explorateur Windows® sous le nom **ARCHOS** (avec la lettre E; par exemple). Pour les ordinateurs Mac®, l'ARCHOS apparaît également en tant que disque dur externe.



Dans le menu Musique, les chansons sont classées par artiste, album, genre, etc. Press : Play/Pause/Select

**Long press** : to see options available for the displayed screen (shuffle, equalizer, repeat mode, ...)

**Short press** : Back button.



Opening the photo browser will allow you to view the stored photos one by one or as an automatic slide show. Highlight the desired photo file, then press to view it. Press the Right and Left buttons to view the next or previous photo. Press to start a slideshow. Press again to stop the slideshow. **Long press** : to see options available for the displayed screen. **Short press** : Back button.



The video player requires that your video file be of a specific format in order to be able to play. A converter application for Windows® computers is available in the folder 'Software' on the ARCHOS that can be installed on your computer. Convert your video files to a resolution of 160x128. The ARCHOS will not play files purchased on-line. **Long press** : to see options available for the displayed video. **Short press** : Back button.



Make audio recordings.  
Press to start/pause.  
**Short press**  and select YES : to save file.



To use the radio, you must have headphones plugged in as this acts as your antenna. **Long press** : to create radio presets, scan for stations, or record what is currently playing.

You can transfer your media files to the ARCHOS either by copy/pasting them into the respective folders using Windows® Explorer (or the Finder on a Macintosh), or by using Windows Media® Player. On your computer, start Windows Media® Player. 1) Select the Sync tab. 2) Drag the media files you want to transfer into the sync area in the panel on the right. 3) Click on the Start Sync button. The selected videos, songs or photos will be copied directly into the corresponding Video, Music or Pictures folder of the ARCHOS. See your Windows Media® Player help instructions for more information.

**Display:** Allows you to set the Brightness (the screen brightness), Backlight Time (how long before the screen goes off or dims) and the Backlight Mode (determines if the screen goes dim or off - to save battery power)

**Power Off:** Sets the continuous playing time before the player is turned off automatically.

**Language:** Allows you to set your interface language

## DEUTSCH

**Aufladen:** Wann auch immer Ihr ARCHOS mit einem Computer verbunden ist, wird er automatisch aufgeladen.

**Verbinden:** Wenn Sie das USB Kabel mit Ihrem Computer verbinden, wird der ARCHOS als eine externe Festplatte erkannt. Im Windows® Explorer wird es als **ARCHOS** angezeigt (z.B. E:). Für Mac® Computer wird der ARCHOS ebenfalls als externe Festplatte erkannt.



Dans le menu Musique, les chansons sont classées par artiste, album, genre, etc. Press : Play/Pause/Select

**Long press** : to see options available for the displayed screen (shuffle, equalizer, repeat mode, ...)

**Short press** : Back button.



Opening the photo browser will allow you to view the stored photos one by one or as an automatic slide show. Highlight the desired photo file, then press to view it. Press the Right and Left buttons to view the next or previous photo. Press to start a slideshow. Press again to stop the slideshow. **Long press** : to see options available for the displayed screen. **Short press** : Back button.

The video player requires that your video file be of a specific format in order to be able to play. A converter application for Windows® computers is available in the folder 'Software' on the ARCHOS that can be installed on your computer. Convert your video files to a resolution of 160x128. The ARCHOS will not play files purchased on-line. **Long press** : to see options available for the displayed video. **Short press** : Back button.

Make audio recordings.  
Press to start/pause.  
**Short press**  and select YES : to save file.

To use the radio, you must have headphones plugged in as this acts as your antenna. **Long press** : to create radio presets, scan for stations, or record what is currently playing.

You can transfer your media files to the ARCHOS either by copy/pasting them into the respective folders using Windows® Explorer (or the Finder on a Macintosh), or by using Windows Media® Player. On your computer, start Windows Media® Player. 1) Select the Sync tab. 2) Drag the media files you want to transfer into the sync area in the panel on the right. 3) Click on the Start Sync button. The selected videos, songs or photos will be copied directly into the corresponding Video, Music or Pictures folder of the ARCHOS. See your Windows Media® Player help instructions for more information.

**Display:** Allows you to set the Brightness (the screen brightness), Backlight Time (how long before the screen goes off or dims) and the Backlight Mode (determines if the screen goes dim or off - to save battery power)

**Power Off:** Sets the continuous playing time before the player is turned off automatically.

**Language:** Allows you to set your interface language

## NETHERLANDS

**Opladen:** Wanneer uw ARCHOS met een computer die aan staat wordt verbonden, dan zal de ARCHOS automatisch gaan opladen.

**Verbinden:** Wanneer u de USB-kabel met uw computer verbindt, dan zal de ARCHOS als een externe harde schijf worden verbonden. Zo zal Windows® Verkenner van ARCHOS bijvoorbeeld tonen als ARCHOS (E:). Ook op Macintosh® computers zal de ARCHOS als een externe harde schijf worden getoond.



Dans le menu Musique, les chansons sont classées par artiste, album, genre, etc. Press : Play/Pause/Select

**Long press** : to see options available for the displayed screen (shuffle, equalizer, repeat mode, ...)

**Short press** : Back button.



Opening the photo browser will allow you to view the stored photos one by one or as an automatic slide show. Highlight the desired photo file, then press to view it. Press the Right and Left buttons to view the next or previous photo. Press to start a slideshow. Press again to stop the slideshow. **Long press** : to see options available for the displayed screen. **Short press** : Back button.

The video player requires that your video file be of a specific format in order to be able to play. A converter application for Windows® computers is available in the folder 'Software' on the ARCHOS that can be installed on your computer. Convert your video files to a resolution of 160x128. The ARCHOS will not play files purchased on-line. **Long press** : to see options available for the displayed video. **Short press** : Back button.

Make audio recordings.  
Press to start/pause.  
**Short press**  and select YES : to save file.

To use the radio, you must have headphones plugged in as this acts as your antenna. **Long press** : to create radio presets, scan for stations, or record what is currently playing.

You can transfer your media files to the ARCHOS either by copy/pasting them into the respective folders using Windows® Explorer (or the Finder on a Macintosh), or by using Windows Media® Player. On your computer, start Windows Media® Player. 1) Select the Sync tab. 2) Drag the media files you want to transfer into the sync area in the panel on the right. 3) Click on the Start Sync button. The selected videos, songs or photos will be copied directly into the corresponding Video, Music or Pictures folder of the ARCHOS. See your Windows Media® Player help instructions for more information.

**Display:** Allows you to set the Brightness (the screen brightness), Backlight Time (how long before the screen goes off or dims) and the Backlight Mode (determines if the screen goes dim or off - to save battery power)

**Power Off:** Sets the continuous playing time before the player is turned off automatically.

**Language:** Allows you to set your interface language

## ESPAÑOL

**Carga:** El dispositivo ARCHOS se cargará automáticamente cuando se conecte a un ordenador que esté encendido.

**Conexión:** Cuando conecte el cable USB al ordenador, el dispositivo ARCHOS se conectará como disco duro externo. El Explorador de Windows® lo mostrará como **ARCHOS (E:)**; por ejemplo. En ordenadores Mac®, aparecerá también como disco duro externo.



Dans le menu Musique, les chansons sont classées par artiste, album, genre, etc. Press : Play/Pause/Select

**Long press** : to see options available for the displayed screen (shuffle, equalizer, repeat mode, ...)

**Short press** : Back button.



Opening the photo browser will allow you to view the stored photos one by one or as an automatic slide show. Highlight the desired photo file, then press to view it. Press the Right and Left buttons to view the next or previous photo. Press to start a slideshow. Press again to stop the slideshow. **Long press** : to see options available for the displayed screen. **Short press** : Back button.

The video player requires that your video file be of a specific format in order to be able to play. A converter application for Windows® computers is available in the folder 'Software' on the ARCHOS that can be installed on your computer. Convert your video files to a resolution of 160x128. The ARCHOS will not play files purchased on-line. **Long press** : to see options available for the displayed video. **Short press** : Back button.

Make audio recordings.  
Press to start/pause.  
**Short press**  and select YES : to save file.

To use the radio, you must have headphones plugged in as this acts as your antenna. **Long press** : to create radio presets, scan for stations, or record what is currently playing.

You can transfer your media files to the ARCHOS either by copy/pasting them into the respective folders using Windows® Explorer (or the Finder on a Macintosh), or by using Windows Media® Player. On your computer, start Windows Media® Player. 1) Select the Sync tab. 2) Drag the media files you want to transfer into the sync area in the panel on the right. 3) Click on the Start Sync button. The selected videos, songs or photos will be copied directly into the corresponding Video, Music or Pictures folder of the ARCHOS. See your Windows Media® Player help instructions for more information.

**Display:** Allows you to set the Brightness (the screen brightness), Backlight Time (how long before the screen goes off or dims) and the Backlight Mode (determines if the screen goes dim or off - to save battery power)

**Power Off:** Sets the continuous playing time before the player is turned off automatically.

**Language:** Allows you to set your interface language

## ITALIANO

**Caricamento:** Quando il dispositivo ARCHOS è connesso a un computer in funzione, esso si caricherà automaticamente.

**Connessione:** Quando si collega il cavo USB al computer, il dispositivo ARCHOS si connetterà come disco rigido esterno. Il Exploratore di Windows® lo mostrerà come **ARCHOS (E:)**; per esempio. Anche nei computer Macintosh® apparirà come disco rigido esterno.



Dans le menu Musique, les chansons sont classées par artiste, album, genre, etc. Press : Play/Pause/Select

**Long press** : to see options available for the displayed screen (shuffle, equalizer, repeat mode, ...)

**Short press** : Back button.



Opening the photo browser will allow you to view the stored photos one by one or as an automatic slide show. Highlight the desired photo file, then press to view it. Press the Right and Left buttons to view the next or previous photo. Press to start a slideshow. Press again to stop the slideshow.