

Philips GoGear audio player **EN**

SA0183

Quick start guide



PHILIPS



Charge

- 1 Open Windows Explorer (SA018 appears as a mass storage device).
- 2 Drag and drop your MP3 files into SA018.



Get started

- 1 Connect earphones
- 2 Press for 4 sec. to turn SA018 on/off. (Power LED flashes once.)



Select source /mode

Start play: →
Repeat all:
Shuffle:

LED indicators

Response when pressing a button....

Result:		= action successful
		= action unsuccessful (buttons locked)

Battery info (when turning on SA018):

	> 40 % charged
	10 - 40 % charged
	< 10 % charged
	recharge player

Important notifications:

Alert:		= no audio files on SA018
Error:		= restore software



Play music

- 1 Select
- 2 Press to toggle play/pause.
 - Press and hold to go to first track on SA018.
- 3 Select to play music tracks in random order.



While you listen

- Press to skip to previous / next title.
- Press and hold to skip faster.
- Press twice to skip to previous / next folder (if available).



- Press +/- to increase / decrease the volume. Press +/- together to activate / deactivate FullSound™ .

Register your product

Since it is possible for you to upgrade your product, we recommend that you register your product on www.philips.com/welcome so we can inform you as soon as new free upgrades become available.

Need help?

User Manual

See the user manual stored on this player.

Online

Go to www.philips.com/welcome



Be responsible
Respect copyrights



Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners

© 2011 Koninklijke Philips Electronics N.V.
All rights reserved. www.philips.com

Disposal of your old product and the integrated battery

All our products are designed and manufactured with high quality materials and components, which can be recycled and reused.



The crossed-out wheel bin symbol on a product means that the product is subject to the European Directive 2002/96/EC. This symbol can also be used in combination with a chemical symbol, which means that the product complies with the environmental directive for that chemical.

Never dispose of your product with other household waste. Inform yourself or ask your dealer about local environmentally safe recycling regulations. The correct disposal of your old product helps prevent potentially negative consequences for the environment and human health.



Your product contains a built-in rechargeable battery covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. To safeguard the functionality and safety of your product, always bring your product to an official collection point or service centre where a professional can remove / replace the battery as shown in user manual.

Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.



Printed in China
SA0183_00_QSG_V1.0
wk11131