

Microcassette™-Corder

Operating Instructions
Mode d'emploi (au verso)

M-575V/570V/475/470

©2005 Sony Corporation Printed in China

http://www.sony.net/

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

About This Manual

The instructions in this manual are for 4 models. The M-570V is the model used for illustration purposes. Their differences are shown in the table below:

	M-575V/570V	M-475/470
Tape counter	○	—
BATT lamp	—	○
REC/BATT lamp	○	—
VOR	○	—

 
○: provided or supplied
—: not provided or not supplied

There is no difference between M-575V and M-570V and between M-475 and M-470 except for the supplied accessories. M-575V consists of M-570V Microcassette recorder and accessories. For information about the supplied accessories, see “Specifications” of this manual.

Preparing Power Sources

Choose one of the following power sources.


Dry Batteries

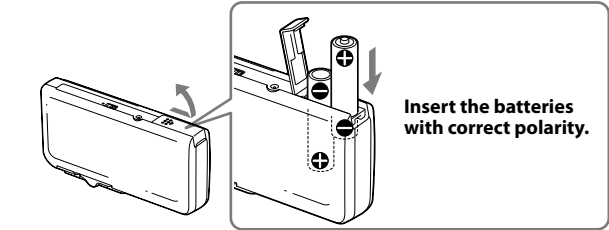


Make sure that nothing is connected to the DC IN 3V jack.

- 1 Open the battery compartment lid.
- 2 Insert two R03 (size AAA) batteries with correct polarity and close the lid.

 To take out the batteries

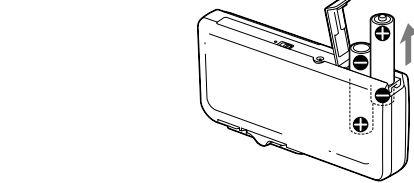

 To attach the battery compartment lid if it is accidentally detached

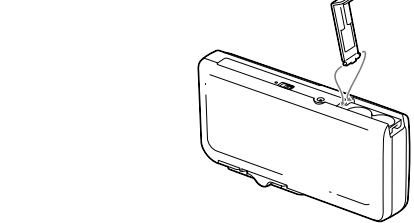

When to replace the batteries

Replace the batteries with new ones of the same kind when the REC/ BATT (M-575V/570V) or BATT (M-475/470) lamp dims.

Notes

- The unit will play back normally for a while, even after the REC/BATT (M-575V/570V) or BATT (M-475/470) lamp flashes. However, replace the batteries as soon as you can. Otherwise, the built-in speaker may emit a loud noise and recordings may not be made correctly.
- In the following cases you do not need to replace the batteries:
 - if the REC/BATT (M-575V/570V) or BATT (M-475/470) lamp flashes with the playback sound when you turn up the volume.
 - if the REC/BATT (M-575V/570V) or BATT (M-475/470) lamp lights momentarily when the tape starts running or at the end of the tape.
 - if the REC/BATT (M-575V/570V) or BATT (M-475/470) lamp flashes during FF/REW or CUE/REVIEW.

Battery life* (Approx. hours)

Batteries	M-575V/570V		M-475/470	
	Recording	Playback**	Recording	Playback**
Sony alkaline LR03 (SG)***	17	9.5	17	10
Sony manganese R03 (SB)	6.5	3.0	6.5	3.5

* Measured valued by the standard of JEITA (Japan Electronics and Information Technology Industries Association) (Using a Sony Microcassette)

** Using a tape on which music has been recorded is played at volume setting 7 using speaker

 
***When using Sony LR03 (SG) alkaline dry batteries (produced in Japan)

Note

The battery life may be shorter depending on the operating condition, the surrounding temperature and battery type.

For maximum performance we recommend that you use alkaline batteries.

House current

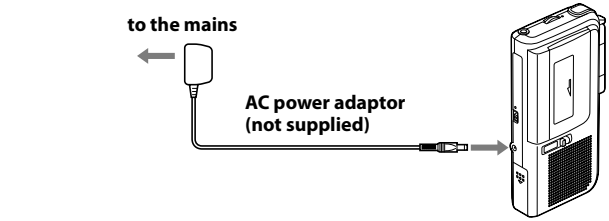

Connect the AC power adaptor to DC IN 3V and to the mains. Use a commercially-available AC power adaptor (rated output voltage/ current: 3 V DC/700 mA). Do not use any other AC power adaptor.

 


Notes

- Depending on the AC power adaptor, noise may be heard while using the unit. Refer to the operating instructions of the AC power adaptor.
- The voltage of power supply is different depending on the country. Please buy an AC power adaptor in the country where the product is to be used.
- Do not touch the AC power adaptor with wet hands.
- Connect the AC power adaptor to an easily accessible mains. Should you notice an abnormality in the AC power adaptor, disconnect it from the mains immediately.

Recording

You can record right away with the built-in microphone.

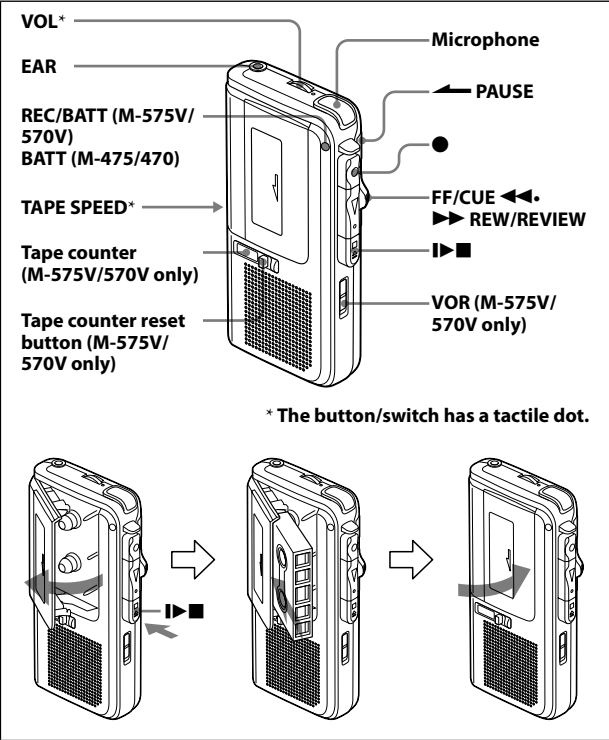

- 1 Press the reset button of the tape counter (M-575V/570V only).
- 2 Press **▶■** and insert a standard microcassette with the side to start recording facing the lid.
- 3 Select the desired tape speed.
2.4 cm for optimum sound (recommended for normal use): A 30-minute recording can be made using both sides of the MC-30 microcassette (for supplied accessories, see “Specifications”). *There is a tactile dot on this side.*
1.2 cm for longer recording time: A 60-minute recording can be made using both sides of the MC-30 microcassette (for supplied accessories, see “Specifications”).
- 4 Set VOR to OFF (M-575V/570V only).
If you set VOR to ON, the unit automatically starts recording the sound and pauses when there is no sound (you can save tapes and batteries).
When the sound is not loud enough, set it to OFF, or the unit may not start recording.
- 5 Press **◀** is pressed simultaneously and recording starts.
While the tape runs, the REC/BATT lamp lights and flashes depending on the strength of the sound (M-575V/570V only). Recording level is fixed.

At the end of the tape, recording stops and the unit turns off automatically (Automatic shut-off mechanism).

To	Press or slide
Stop recording	▶■
Pause recording	Slide ◀ PAUSE in the direction of the arrow. <i>To release pause recording, release ◀ PAUSE*.</i>
Start recording during playback	● during playback (the unit enters the recording mode)
Review the portion just recorded	Push up FF/CUE <<•>>•> REW/REVIEW toward ▶▶ REW/REVIEW during the recording. Release the button at the point to start playback.
Take out a cassette	▶■

* **◀** PAUSE will also be automatically released when **▶■** is pressed (stop-pause-release function).

Note

Select the 2.4 cm tape speed for recording, if you play back the recorded tape with another unit. Otherwise, the sound quality may be changed.

 
Notes on VOR (Voice Operated Recording) (M-575V/570V only)

- The VOR system is affected by the environmental recording conditions. When you use the system in a noisy place, the unit will stay in the recording mode. If the sound is too soft, on the contrary, the unit will not start recording. If you cannot get the results you want, set it to OFF.
- The VOR system may not record the beginning of the sound you want to record because it starts recording only after it catches the sound. For an important recording, set it to OFF.


To monitor the sound

Connect an earphone (not supplied) firmly to the EAR jack. The monitor volume cannot be adjusted by VOL.

To prevent a cassette from being accidentally recorded over Break off and remove the cassette tabs. To reuse the cassette for recording, cover the tab hole with adhesive tape.

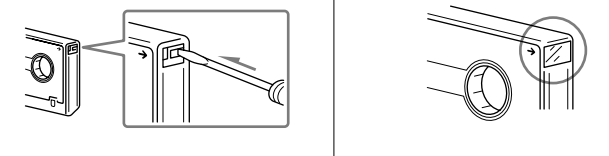

Playing a Tape

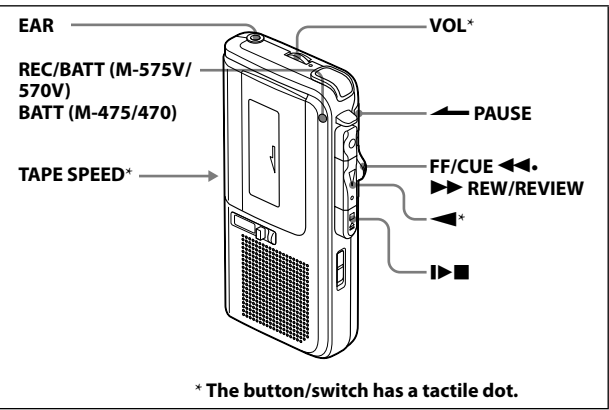 

* The button/switch has a tactile dot.

- 1 Insert a cassette with the side to start playing facing the lid.
- 2 Select the tape speed to the same speed as that used for recording.
- 3 Press **◀**.
- 4 Turn VOL to adjust the volume. *There is a tactile dot beside VOL on to show the direction to turn up the volume.*

At the end of the tape, playback stops and the unit turns off automatically (Automatic shut-off mechanism). After the tape has been wound or rewound, be sure to press **▶■**.

If you plug in headphones (not supplied) to the EAR jack, you will get monaural output from both left and right channels.

To	Press or slide
Stop playback/stop fast forward or rewind	▶■
Pause playback	Slide ◀ PAUSE in the direction of the arrow. REC/ BATT (M-575V/570V) or BATT (M-475/470) lamp goes off. <i>To release pause playback, release ◀ PAUSE*.</i>
Fast forward** (FF)	Slide FF/CUE <<•>>•> REW/REVIEW toward FF/ CUE << during stop.
Rewind** (REW)	Slide FF/CUE <<•>>•> REW/REVIEW toward ▶▶ REW/REVIEW during stop.
Search forward during playback (CUE)	Keep FF/CUE <<•>>•> REW/REVIEW pushed toward FF/CUE << during playback and release it at the point you want.
Search backward during playback (REVIEW)	Keep FF/CUE <<•>>•> REW/REVIEW pushed toward ▶▶ REW/REVIEW during playback and release it at the point you want.
Start recording during playback	●

* **◀** PAUSE will also be automatically released when **▶■** is pressed (stop-pause-release function).

** If you leave the unit after the tape has been wound or rewound, the batteries will be consumed rapidly. Be sure to press **▶■**.

Note

If the tape is completely rewound while searching backward during playback (REVIEW), the FF/CUE **<<•>>•>** REW/REVIEW switch may not return to the center position when you release the switch. In this case, push back the switch to the center to start playback.

 
Precautions

On power

- Operate the unit only on 3 V DC.
For AC operation, use the AC power adaptor recommended for the unit. Do not use any other type. For battery operation, use two R03 (size AAA) batteries.

On the unit

- Use only the **(MICROCASSETTE)™** (standard microcassettes) with this unit. Non-standard cassettes cannot be used because their “L” dimension (see illustration) is different.

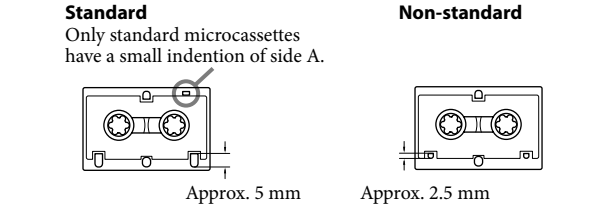

- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- Should any solid object or liquid fall into the unit, remove the batteries or disconnect the AC power adaptor, and have the unit checked by qualified personnel before operating it any further.
- Keep personal credit cards using magnetic coding or spring-wound watches, etc. away from the unit to prevent possible damage from the magnet used for the speaker.
- When you do not use the unit for long, remove the batteries to avoid damage caused by battery leakage and subsequent corrosion.
- If the unit has not been used for long, set it in the playback mode and warm it up for a few minutes before inserting a cassette.

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

Troubleshooting

Should any problem persist after you have made these checks, consult your nearest Sony dealer.

You cannot close the cassette compartment lid.

- The cassette is being inserted in the wrong way.
- **◀** has been already pressed.
- The cassette is not being inserted completely.

The unit does not operate.

- The batteries have been inserted with incorrect polarity.
- The batteries are weak. Replace both batteries with new ones.
- **◀** PAUSE is slid in the direction of the arrow.
- The AC power adaptor is not firmly connected.
- The unit will not run on dry batteries if the AC power adaptor is left plugged into the DC IN 3V jack even though you disconnect the AC power adaptor from the power source.

Recording cannot be made.

- There is no cassette in the cassette compartment.
- The tab on the tape has been removed. To reuse the tape for recording, cover the tab hole with adhesive tape.
- The batteries are weak. Replace both batteries with new ones.

Recording is interrupted.

- The VOR switch is set to ON. When you do not use VOR, set it to OFF (M-575V/570V only).

Recording cannot be erased completely.

- The head is contaminated. See “Maintenance”.

Playback cannot be made.

- The tape has reached the end. Rewind the tape.

No sound comes from the speaker.

- The earphone is plugged in. Unplug it.
- The volume is turned down completely.

The sound drops out or comes with excessive noise.

- The volume is turned down completely.
- The batteries are weak. Replace both batteries with new ones.
- The head is contaminated. See “Maintenance”.
- Direct placement of the cassette tape on the speaker resulted in magnetization and deteriorated tonal quality.
- Use the unit away from radiowave-emitting devices such as cellular phones.

 
Tape speed is too fast or too slow or the sound is distorted in the playback mode.

- Improper setting of the TAPE SPEED switch. Set it to the same speed as that used for recording.
- The batteries are weak. Replace both batteries with new ones.

During CUE/REVIEW the tape stops or does not run. You cannot fast-forward or rewind.

- The batteries are weak. Replace both batteries with new ones.

Maintenance

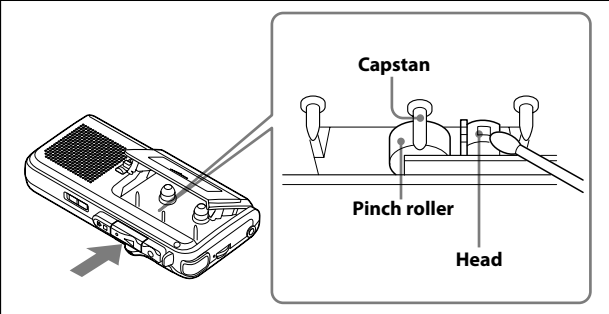

To clean the tape head and path

Press **◀** and wipe the head, capstan and the pinch roller with a cotton swab, moistened with alcohol every 10 hours of use.

To clean the exterior

Use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.

Specifications

Tape	(MICROCASSETTE)™ (normal position type)
Recording system	2-track 1-channel monaural
Speaker	Approx. 3.6 cm dia.
Tape speed	2.4 cm/s, 1.2 cm/s
Frequency range	300 Hz - 4 000 Hz (with TAPE SPEED switch at 2.4 cm/s)
Output	Earphone jack (minijack/monaural) for 8 Ω - 300 Ω earphone
Power output (at 10% harmonic distortion)	M-575V/570V: 450 mW M-475/470: 250 mW
Power requirements	3 V DC batteries R03 (size AAA) × 2/External DC 3V power sources
Dimensions (w/h/d) (incl. projecting parts and controls)	M-575V/570V: Approx. 60.2 × 110.8 × 23.2 mm M-475/470: Approx. 60.2 × 110.8 × 22.3 mm
Mass (main unit only)	M-575V/570V: Approx. 104 g M-475/470: Approx. 97 g
Supplied accessories	Microcassette tape MC-30 (1) (M-570V/470 for the United States and Europe only, M-475 for Europe, Asia, Central and South America and the Middle and Near East only) Microcassette tapes MC-30 (2) (M-470 for Canada only) Microcassette tapes MC-30 (3) (M-575V for Canada and Europe only and M-475 for the United States only) Batteries (2) (M-570V for the United States only, M-575V for Canada and Europe only, M-470 for the United States and Canada only and M-475 for the United States and Europe only)

Design and specifications are subject to change without notice.

