
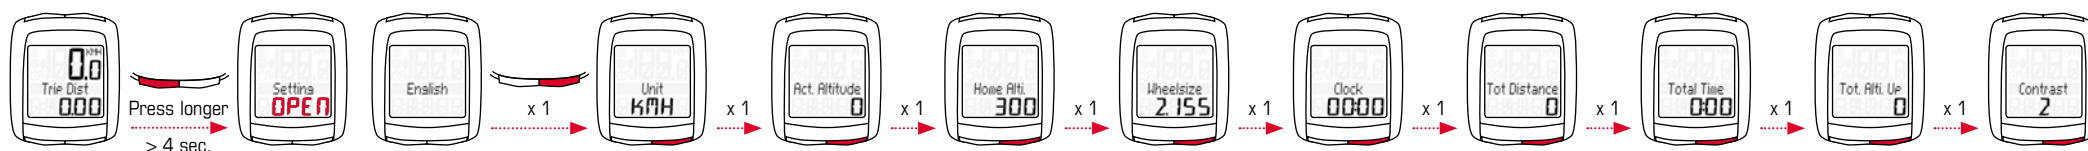


VIDEO
TUTORIAL:INSTALLATION
VIDEO:BC 14.12 ALTI/BC 14.12 *STB* ALTI14
FUNCTIONS

Set language / Sprache einstellen / Sélectionner la langue / Selezione lingua / Seleccionar idioma / Taalkeuze / Wybór języka

English → Deutsch

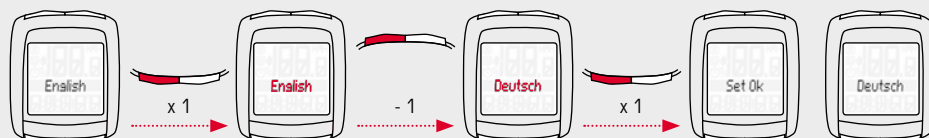


Set unit / Einheit festlegen / Définir l'unité / Impostazione unità / Determinar unidad / Eenheid vastleggen / Ustalenie jednostki

KM/H → MPH




Set act. altitude / Einstellung Akt. Höhe / Régler l'altitude actuelle / Impostazione altitudine attuale / Ajuste de la altitud actual / Instelling Act. Altitude / Ustawianie Act. Altitude

0 → 1245

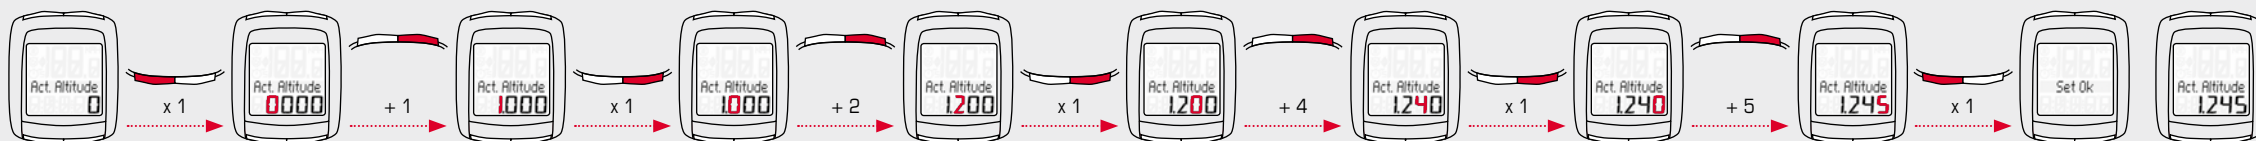

Set home altitude / Einstellung Home Altitude / Régler l'altitude de départ / Impostazione altitudine iniziale / Ajuste de la altitud inicial / Instelling Home Altitude / Ustawianie Home Altitude

300 → 523

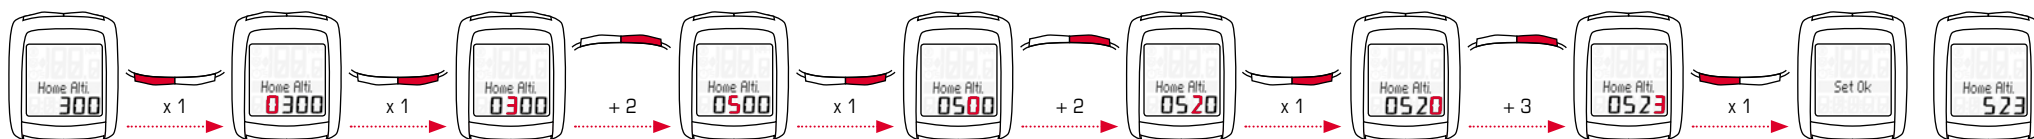


Set wheel size / Eingabe Radumfang / Régler la circonférence de la roue / Immissione circonferenza ruota / Introducción de las dimensiones de la rueda / Invoer wielomtrek / Zadání obvodu kola

2155 → 2136




Set clock / Uhrzeit einstellen / Régler l'heure / Impostazione orario / Ajustar hora / Kloktijd instellen / Ustawienie czasu

00:00 → 15:36

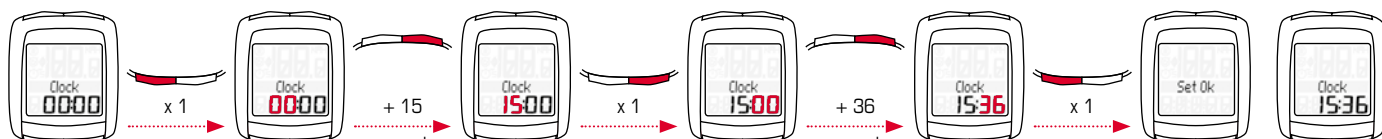


Set total distance / Gesamtstrecke einstellen / Régler la distance totale / Impostazione percorso totale / Ajustar tramos totales / Totale afstand instellen / Ustawienie całkowitej długości dystansu

0 → 2.325

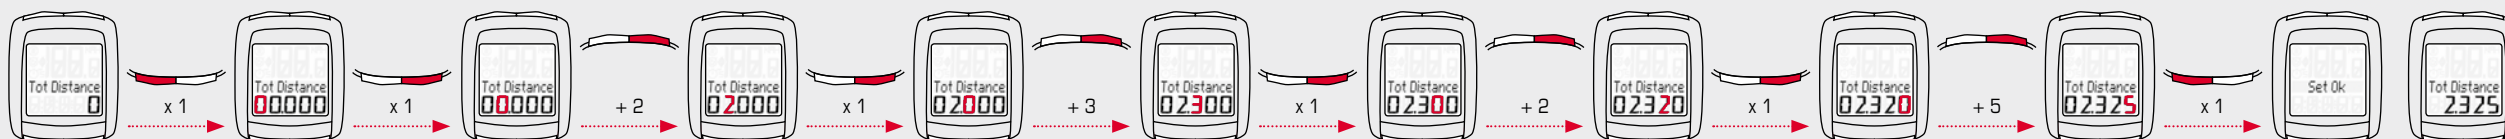


Set total time / Gesamtzeit einstellen / Régler la durée totale / Impostazione tempo totale / Ajustar tiempo total / Totale tijd instellen / Ustawienie czasu całkowitego

0:00 → 105:40

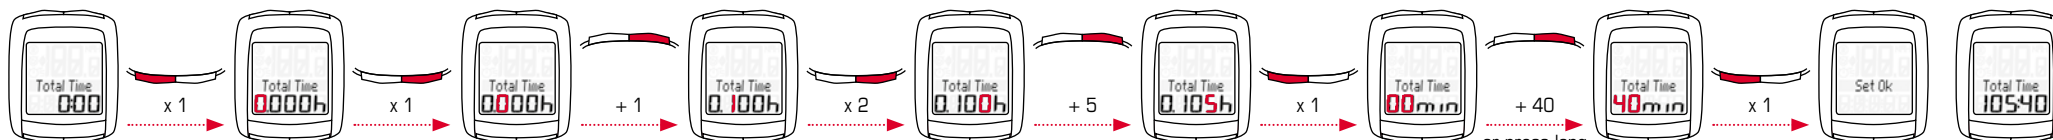


Set total altitude / Gesamthöhe einstellen / Régler le dénivelé total / Impostazione altitudine totale / Ajuste de la altitud total / Totale hoogte instellen / Ustawianie wysokości całkowitej

0 → 25.763

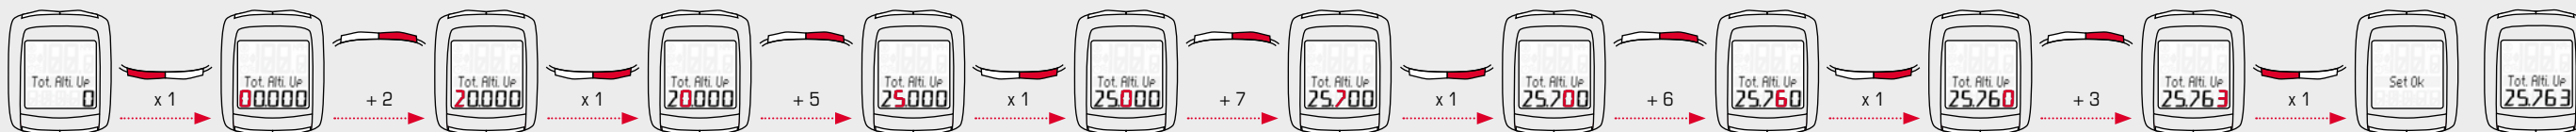


Set contrast / Kontrast einstellen / Régler le contraste / Regolare il contrasto / Ajuste del contraste / Contrast instellen / Ustawienie kontrastu

2 → 3

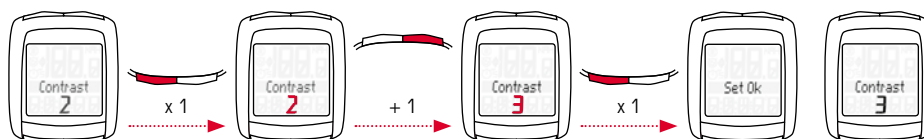


Setting menu / Einstellungs Menü / Menu réglages / Menu impostazioni / Menú de ajuste / Instellingsmenu / Menu ustawień

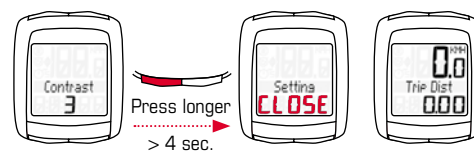

Reset / Nullstellen / Réinitialiser / Azzeramento / Colocar en cero / Op nul instellen / Zerowanie



Calibration of altitude / Höhe kalibrieren / Calibrer l'altitude / Calibrare l'altitudine / Calibrar altitud / Hoogte kalibreren / Kalibracja wysokości

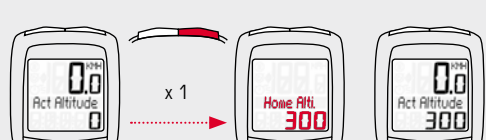

Lightmanager / Licht Manager / Gestionnaire d'éclairage / Gestione fanali / Regulador de luz / Menedżer oświetlenia



1. INSTALLATION OF THE BRACKET

1.1 Stem or handlebar?

?
oder
or
ou

1.3 → 1.4 → 1.5

1.2 → 1.3 → 1.4 → 1.5

1.2 Change handlebar → Stem

SIGMA

4 x

→ The mounting bracket included in the package is intended for handlebar mounting. For assembly on the stem release the 4 screws on the back, turn the plate by 90° and secure again.

90°

4 x

1.3 Installation of the bracket

→ Remove the yellow foil

1.4

?
oder
or
ou

1.5 A

1.5 B

1.6 Installation of the computer on the mounting bracket

CLICK

2. INSTALLATION OF THE WIRED SENSOR AND STANDARD MAGNET

2.1

2.2 Installation of the wired sensor

?
oder
or
ou

2.3 Installation of the power magnet

2.4 Adjusting of standard magnet

Max. 12 mm

3. INSTALLATION OF THE WIRELESS SPEED TRANSMITTER

3.1 BC 14.12 STS ALTI

?
oder
or
ou

3.2 Transmission range of STS speed transmitter

Max. 30°

Max. 90 cm

3.3 Installation of the power magnet

3.4 Adjusting of power magnet

Max. 12 mm

→ In order to achieve the necessary 12 mm or less install the transmitter and the magnet closer to the wheel hub.

4. BATTERY CHANGE

4.1 Change battery / Bike Computer

4.2 Change battery / Speed transmitter

→ Before replacing a new battery, wait for 1 minute

5. SWITCH BIKE 1 – BIKE 2

5.1 Switch from Bike 1 to Bike 2 / STS Speed transmitter

→ Green LED is flashing

→ Green LED = Bike 1

→ Red LED is flashing

→ Red LED = Bike 2

→ Press > 5 seconds

6. WHEEL SIZE CHART

6.1 Wheel Size Chart

A

mm x 3,14

km/h:
WS = mm x 3,14
mph:
WS = mm x 3,14

B

1x

km/h:
WS = mm
mph:
WS = mm

ETRTO		kmh mph
16 x 1.75 x 2		
47-305	16 x 1.90	1272
47-406	20 x 1.75	1580
37-540	24 x 1 3/8	1948
47-507	24 x 1.75	1900
37-584	26 x 1 3/8, 650 STD	2086
37-590	26 x 1 3/8, 650 x 35A	2100
40-559	26 x 1.50	2030
42-559	26 x 1.60	2025
47-559	26 x 1.75	2050
50-559	26 x 2.00	2075
54-559	26 x 2.10	2100
57-559	26 x 2.25	2120
57-584	27 1/2 x 2.25	2128
28-630	27 x 1 1/4	2174
32-630	27 x 1 1/4	2220
40-635	28 x 1 1/2	2265

ETRTO		kmh mph
16 x 1.75 x 2		
32-622	28 x 1.25, 700 x 32C	2170
35-622	28 x 1.35, 700 x 35C	2185
37-622	28 x 1.40, 700 x 35C	2200
37-622	28 x 1.40, 700 x 37C	2200
40-622	28 x 1.50, 700 x 38C	2220
42-622	28 x 1.60, 700 x 40C	2230
47-622	28 x 1.75	2250
50-622	29 x 2.00	2280
54-622	29 x 2.10	2288
57-622	29 x 2.25	2295
60-622	29 x 2.35	2330
23-571	650 x 23C	1973
18-622	700 x 18C	2102
20-622	700 x 20C	2100
23-622	700 x 23C	2125
25-622	700 x 25C	2135
28-622	700 x 28C	2150

7. PACKAGING CONTENT

Wired

Wireless