

# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

# Android Tablet PC 7 "



Référence : DV137  
Date : 08/07/2013  
Version : 1.2  
Langue : Français / Anglais

# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

Thank you for buying our CLIPSONIC product. This is an User's Guide, in order to make sure you can use it conveniently, please read it before you use the product.

### Contents

Contents .....	2
1. Notes:.....	3
2. Accessories: .....	3
3. Hardware rules .....	3
4. Main functions.....	4
5. Appearance and Buttons : .....	5
6. MID Use and preparation .....	6
7.Startup and shutdown:.....	6
7.1. Startup:.....	6
7.2. Shutdown: .....	7
7.3. Sleep.....	7
8. Main menu operation.....	8
9. System settings: .....	8
9.1. wireless&networks:.....	9
9.2. Device.....	10
9.3. Personal.....	13
9.4. System .....	15
10.Install, unload, run the application.....	16
10.1.Install APK software program from the TF card .....	17
10.2.Install searched application from the "market" .....	18
10.3. Install from the "ApkInstaller"icon.....	19
10.4.Uninstall the application .....	20
11. Widgets.....	21
12.Main programs operation Introduction:.....	22
12.1 Browser: .....	22
12. 2.Camera: .....	22
12.3. E-mail: .....	23
12.4.Explorer: .....	26
12.5.Gallery: .....	26
12.6.Gmail: .....	28
12.7.Music player:.....	29
12.8. Record .....	30
12.9. Market(Play Store) .....	31
13. Wallpaper: .....	34
13.1. Set the wallpaper from the setting icon.....	34
13.2. Set the wallpaper from the "Gallery" icon .....	35
13.3. Set the wallpaper from the mother interface .....	35
14. External device: .....	36
14.1. USB connection .....	36
14.2. OTG use .....	37
14.3. Keyboard and mouse.....	37
15.Network connection methods:.....	37
15.1.WIFI network .....	37
15.2.Ethernet network .....	38
15.3.External 3G network .....	38
16.Treatment for common problems: .....	38

# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

### 1. Notes:

- \* This is a high-density electronic product; please do not dismantle it by yourself.
- \* Avoid strong beat and collision.
- \* Avoid using this product in the following environments: high and low temperature, humidity, dusty, with strong magnetic and long-term exposure to the sun.
- \* Please wipe the product shell use twist dry wet cotton cloth gently; the use of other chemical cleaning is prohibited. This product should keep away from water drop and water splash, so cups filled with liquids should not be placed near the product.
- \* Use the headset long time, high volume may cause permanent damage to hearing.
- \* Do not use headphones when going across a road, driving a motorcycle or bicycle, in order to avoid traffic accidents.
- \* Please use permitted battery, charger and accessories only, the use of any other type of product would be a breach of warranty regulations, and may be dangerous.
- \* Please deal with waste machinery and accessories according to local environmental regulations.
- \* If you have any questions in the process of using of the product, please contact the local dealer or contact customer service center of our company directly.
- \* For the smeared memory loss that is caused by product damage, repair or other causes of product damage, repair, the company is not responsible for it, so please follow the user's guide and timely backup.

### 2. Accessories:

MID machine  
5V 2A Charger  
User manual  
USB cable  
OTG cable

### 3. Hardware rules

MID hardware parameters	
Processor	Rockchip2926 ARM Cortex A9 1.2Ghz
Memoiry	RAM 512MB DDR3
Storage	4GB Nand Flash Support External TF card maximum memory 32GB
Wireless	IEEE 802.11 b/g/n network
Video output	AVI ( H.264, DIVX, XVID, rm, rmvb, MKV, WMV, MOV, MP4 ( H.264, MPEG, DIVX, XVID), MPEG, MPG, FLV. HD 2160P max
Photo	JPG, JPEG, GIF, BMP, PNG
Audio	3.5mm earphone interface High Q dimensional sound acoustics Built-in microphone Maximum output capacity of the earphone 40mW MP3,WMA,MP2,OGG,AAC,M4A,MA4,FLAC,3GP,WAV

# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

Screen	Size	7" TFT LCD,Capacitive Touch Panel to support 5 points touch
	Resolution	800*480
	Color	Black
O.S	System	Google Android 4.1.1 integrity system
	Support	APK format installation and application,vibration .....
Battery	Built-in polymer lithium battery 2200Mah	
Accessories	Adapter (DC5 V/2A) User manual USB cable OTG cable	

## 4. Main functions

- support OTG function, can transmit data and view the files through connecting U disk, mobile HDD etc.
- Multiple network access , support WIFI, enjoy the network life anywhere at any time.
- Support vibration function
- Support APK format installation and application, Mass of software can be downloaded through the "application market" or you can download, install from the PC network.
- Support MP3 、 M4A 、 WMA 、 APE 、 FLAC 、 AAC 、 WAV 、 AMR 、 OGG audio formats etc. also support part of LRC lyrics.
- Full hd video decoding support ( 1080P 、 720P 、 480P ) ,video formats support: : MKV 、 AVI 、 RM/RMVB 、 WMV 、 3GP 、 MOV 、 MP4 、 ASF 、 MPG 、 DAT 、 VOB 、 FLV etc.
- support JPG 、 JPEG 、 BMP 、 PNG etc.
- Support Micro SD card (TF card ),Support 128MB-32GB.

# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

### 5. Appearance and Buttons :



 




Description of Button Functions			
1	Power On/Off	2	Headset port
3	USB port	4	Power DC
5	TF Card port	6	Vol. Up/Down
7	Reset	8	Speaker
9	Camera		

# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

### Function definition :

1. “+”: Volume increase;
2. “-”: Volume decrease;
3. “”: Power Key, On shutdown state ,long press the power key and the system will enter the process of Startup , on boot state , long press the power key and the system will come out for the turn off information;on boot state , short press will lock the interface.
4. : This icon is used to return back to previous interface.
5. : At any interface, touch the icon will be back to the main interface.
6. : Touch this icon, it will show the recent applications you have used.
7. : Slide this icon to the right side on the interface to unlock this device, slide to left to the camera interface.

## 6. MID Use and preparation

### Battery charging

Before using MID firstly, please charge for battery.

1. Use the ac adapter to charge for MID.
2. In order to ensure that the battery is full, please charge for 4 hours or more.

 
## 7.Startup and shutdown:

### 7.1. Startup:

To long press the power key and the system will enter the process of Startup, as shown below: Startup Logo, in the process of startup.

The system has been started and is entering the Android system.

Then the system enters the default home interface

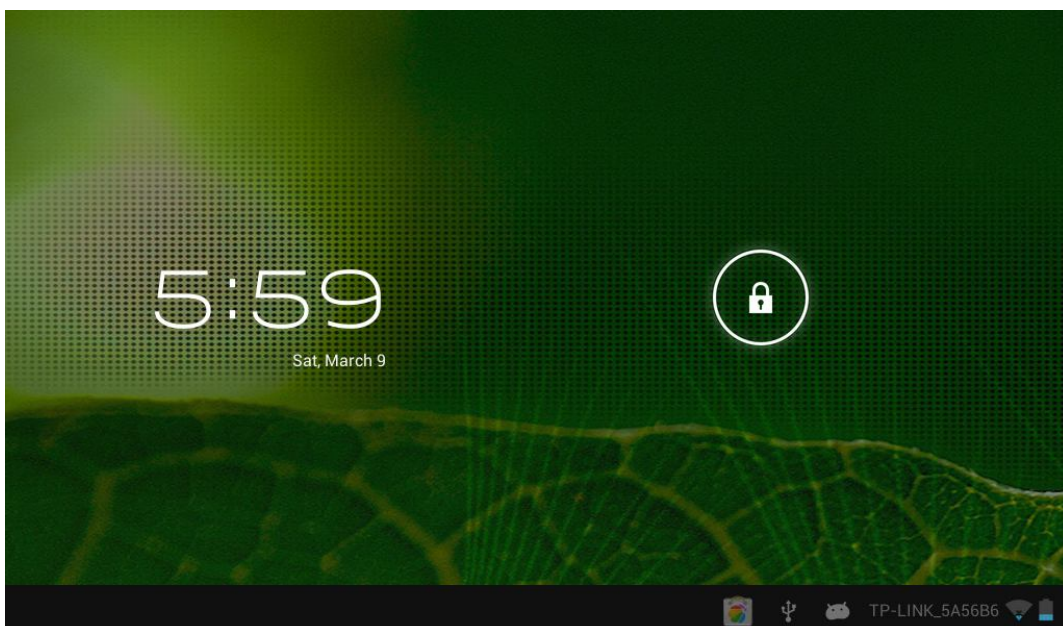


# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

### 7.2. Shutdown:

 
To long press the power key then pop-up options will be on the desktop, choose the option of Power off , Click OK to shutdown.as shown below.

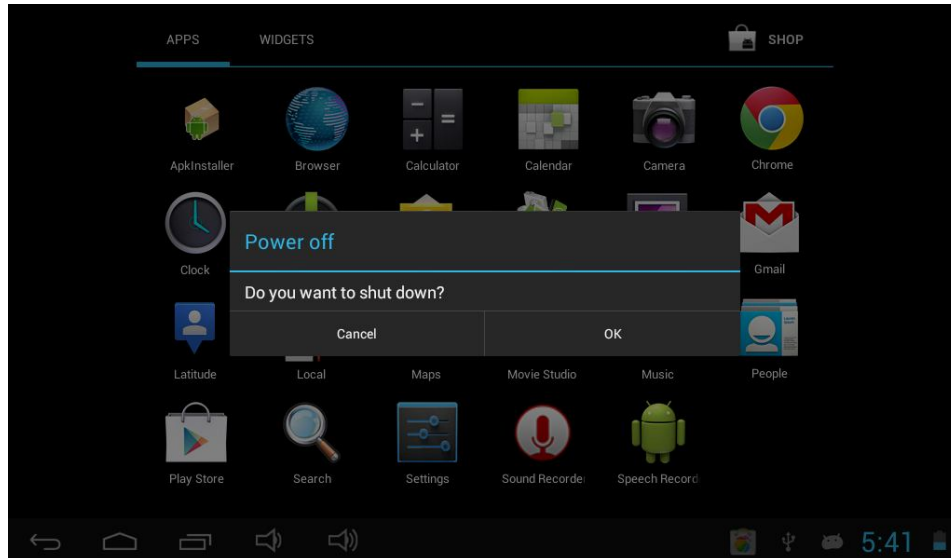

### 7.3. Sleep

In the normal state operation of the machine, short press the power button, enter a state of dormancy, at this time, the screen will be closed. Another short press on the power button can be resume to normal mode. In order to reduce power consumption,you can start this function when MID is not used.

 After the normal startup of the system is completed, you can see the Android 4.0 desktop (below). The default desktop is consisted by google search icon, status bar, menu label icon.

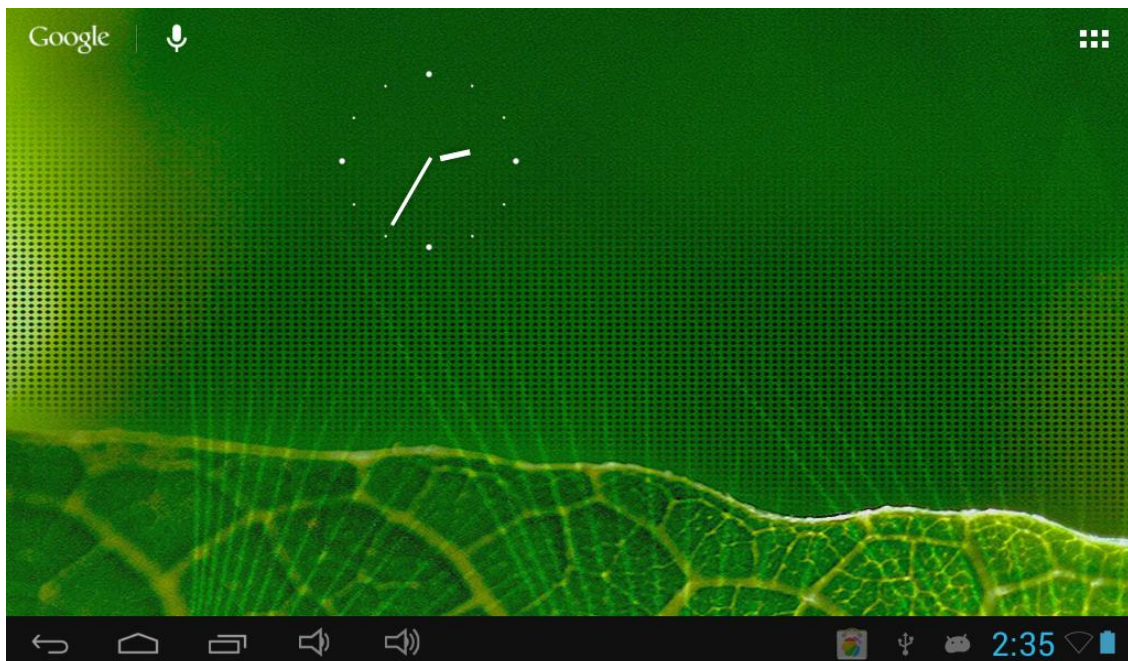

# Clip Sonic<sup>®</sup>

## TECHNOLOGY


### Instruction Manual

The status bar is used to display the network status of current system, battery power, recent app.time and other information.

Google search icon is used by typing keywords to do the Internet search. The main menu tag is in the left-up corner of the screen, click it and then can do the internet search.

The menu label icon is on the right-up corner, Touch the icon , can go into the main interface for all the applications.

## 8. Main menu operation

First slide the  icon to unlock the interface.then Press the main menu tag on the up-right corner,will come to the menu interface,as shown below:



In the main menu, you can set the system, operate the existed application, install a new application, and start touch calibration, play music and video, browse webpage, play game and other operations.

## 9. System settings:

 
Click on the main menu interface in the "Settings" icon, and then open the system settings interface, you can slide up and down to choose the item you want to set, as shown below:



# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

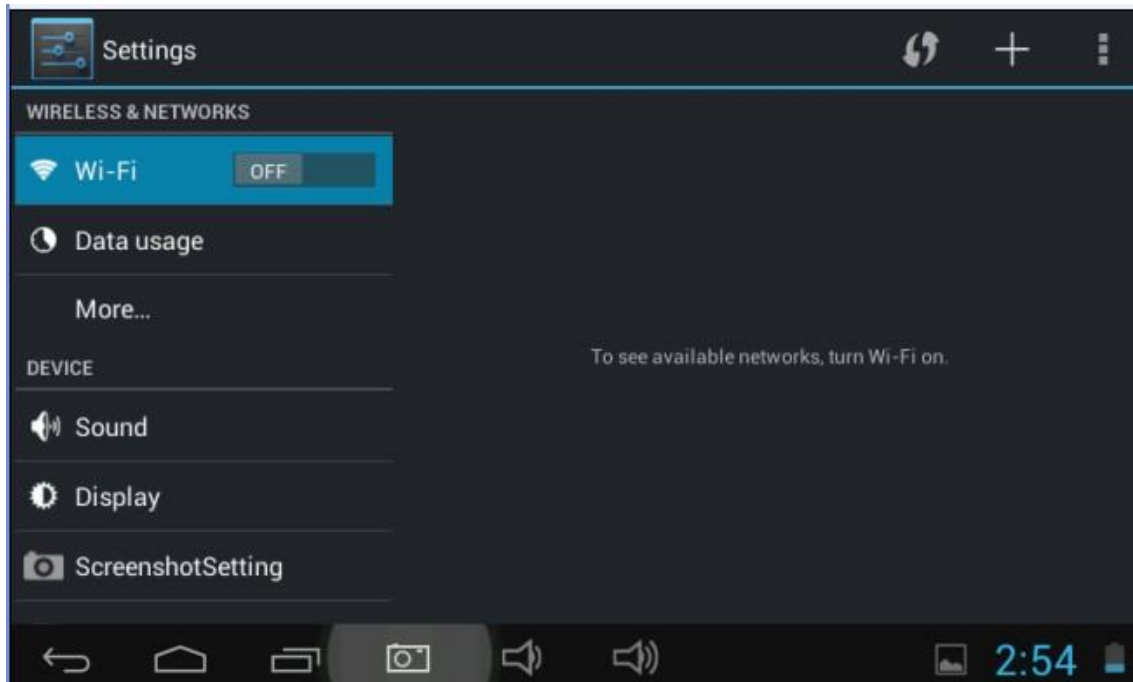


Select the relevant items to do corresponding operation, for example:

- \* Wireless & network:
- \* Sound & display
- \* Date & time
- \* The equipment and so on

### 9.1. wireless&networks:

 Click on the "Settings" icon in the main menu. Click on the "WIFI" column, WIFI function can be started at once. You can choose the WIFI show on the interface, as shown below:

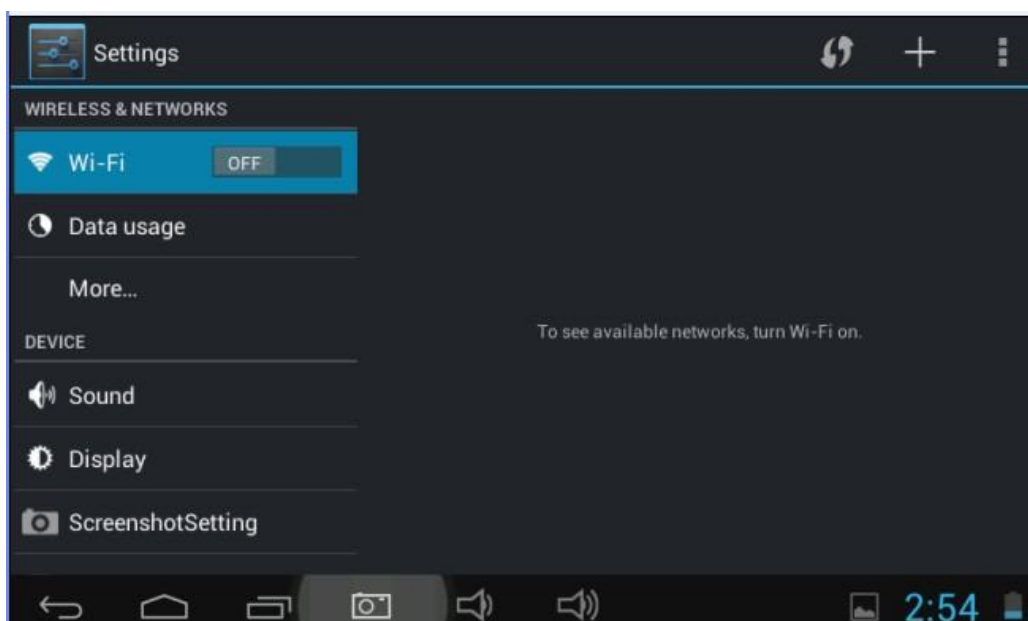


# Clip Sonic<sup>®</sup>


TECHNOLOGY

## Instruction Manual

 Click "Data usage" can know the information. as shown below:

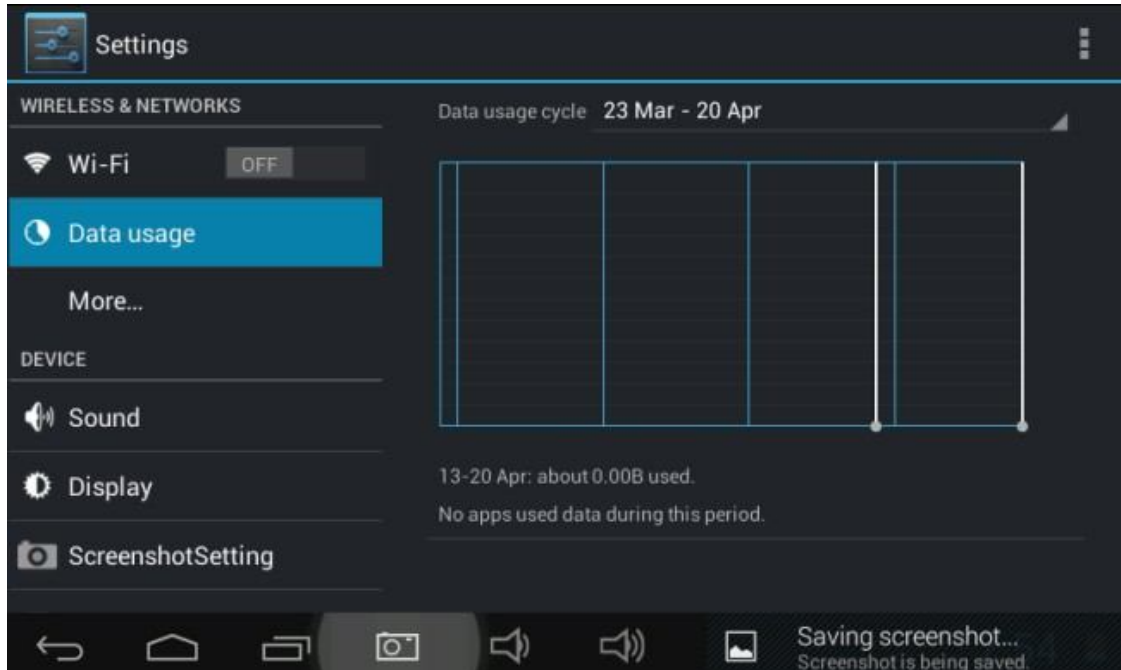

 Touch the "More" icon to see other settings, as shown below:

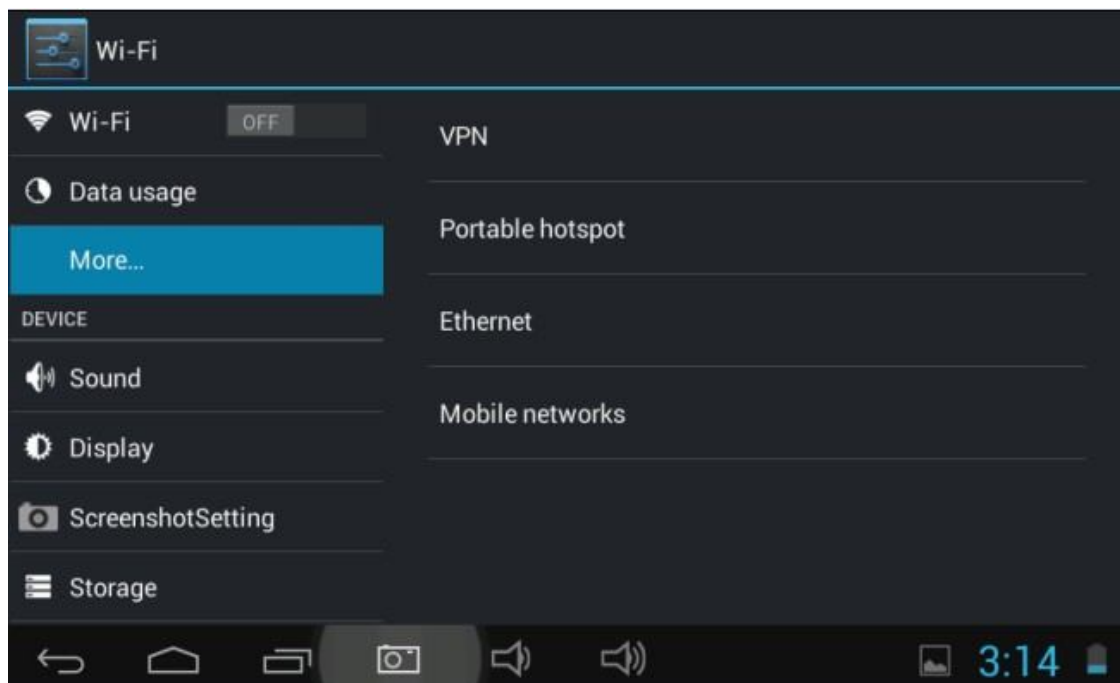

### 9.2. Device

Under this column , we can set up and see the Sound, Display,Storage, Battery, Apps.

 
Click each item to set as you like. For example:

Click the "Sound" icon.and set the sound for the device.as shown below:


# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

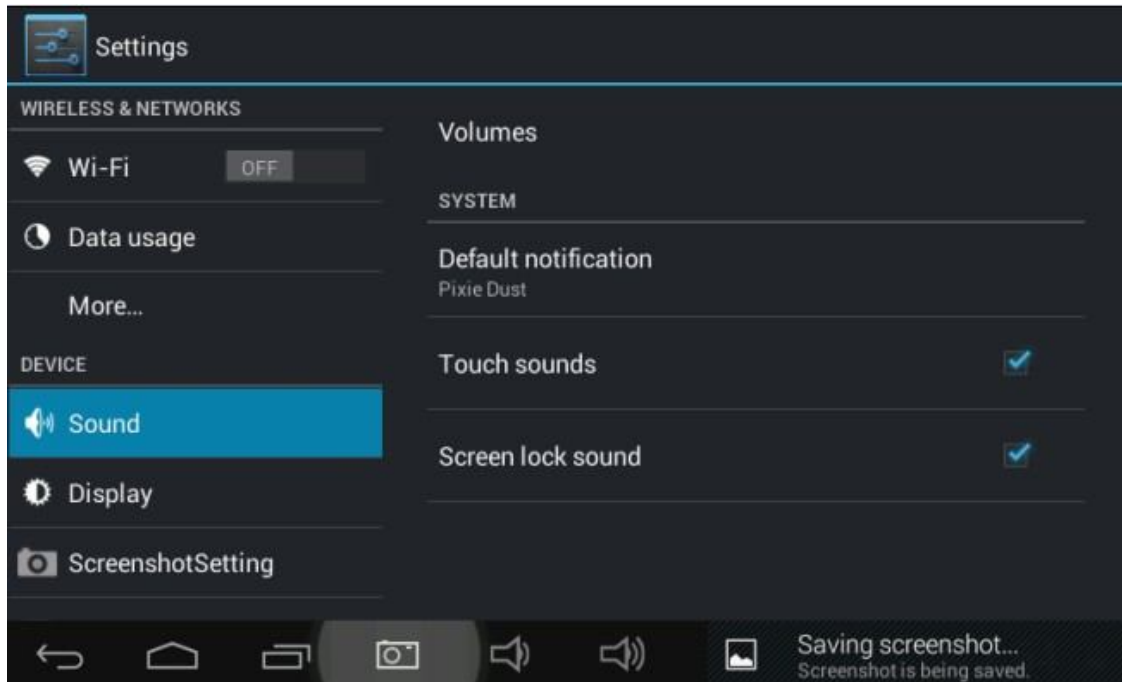

 Click the "Display" icon and set the display for the device. Can set up the Brightness, Wallpaper etc. as shown below:

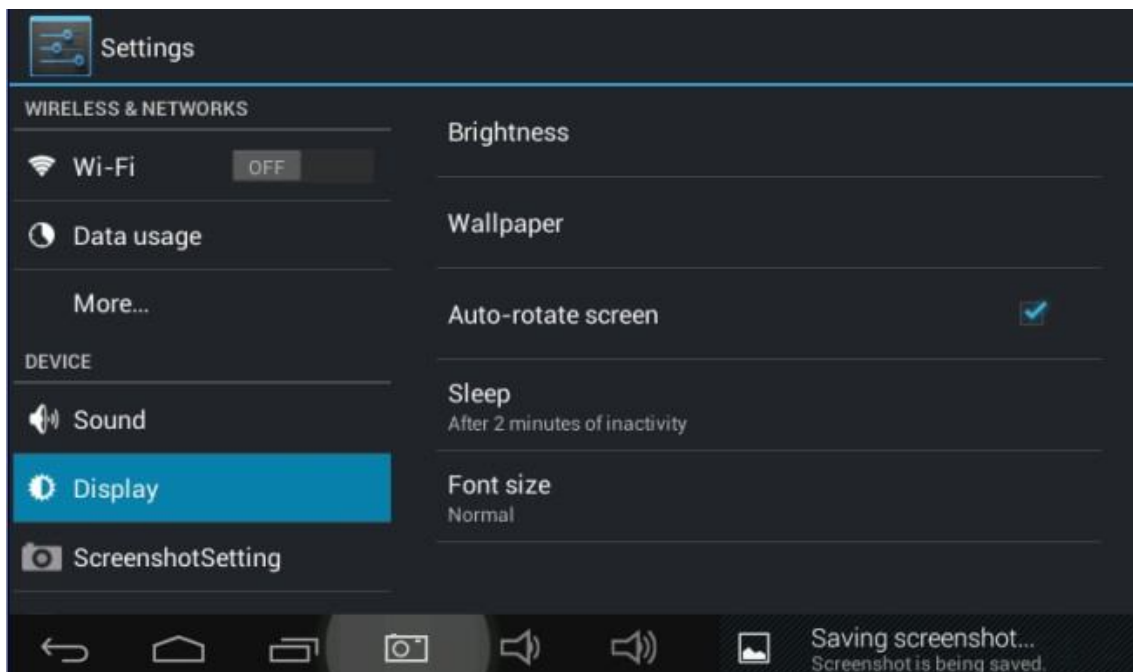


sleep: the delay before the screen standby automatic locking.

In the display of the interface to select "sleep", to choose the lock time, appeared the following interface:


# Clip Sonic<sup>®</sup>

 TECHNOLOGY

## Instruction Manual

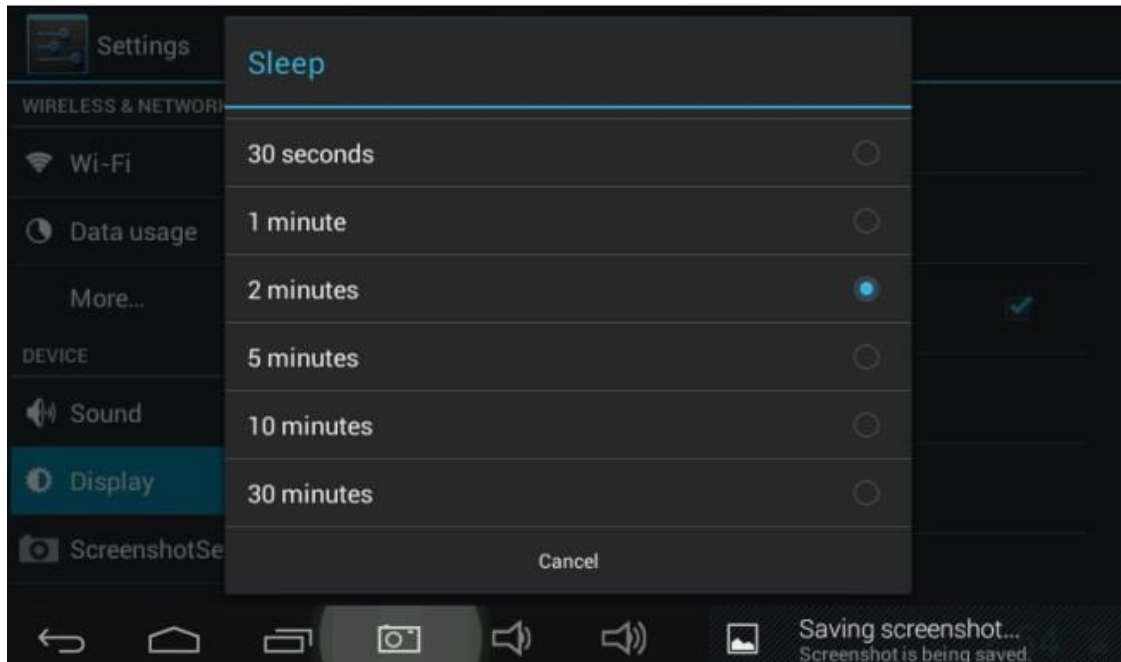

 Note: during video broadcast, the screen automatically standby function is invalid.  
Click the "Storage" icon.Can show the devices and external storage for the devices, as shown below:

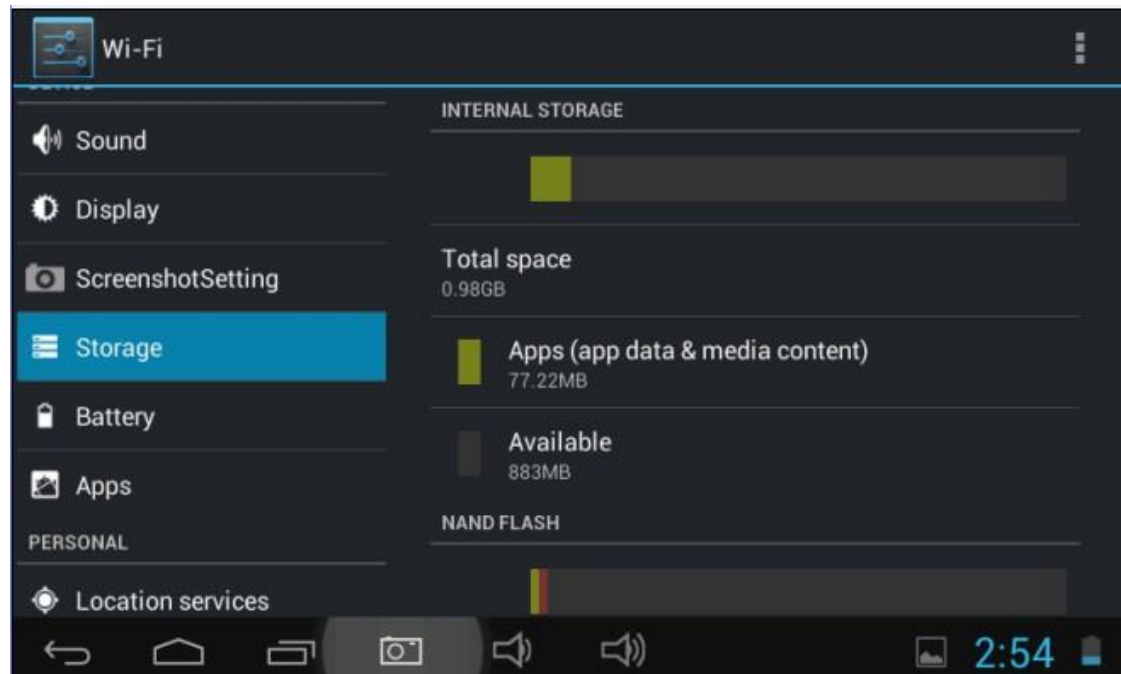


Click the "Battery" icon.Can show battery use situation, as shown below:


# Clip Sonic<sup>®</sup>

 TECHNOLOGY

## Instruction Manual

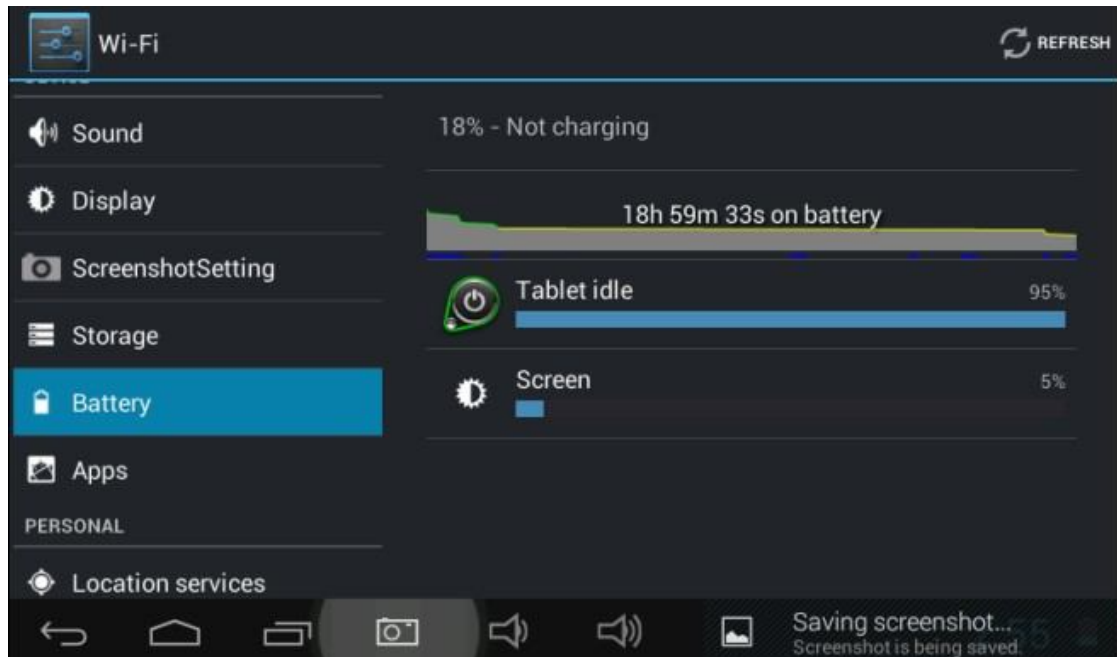

 Click the "Apps" icon.Can show all the applications in devices,such ad downloaded, on mini SD card, running, All, as shown below:

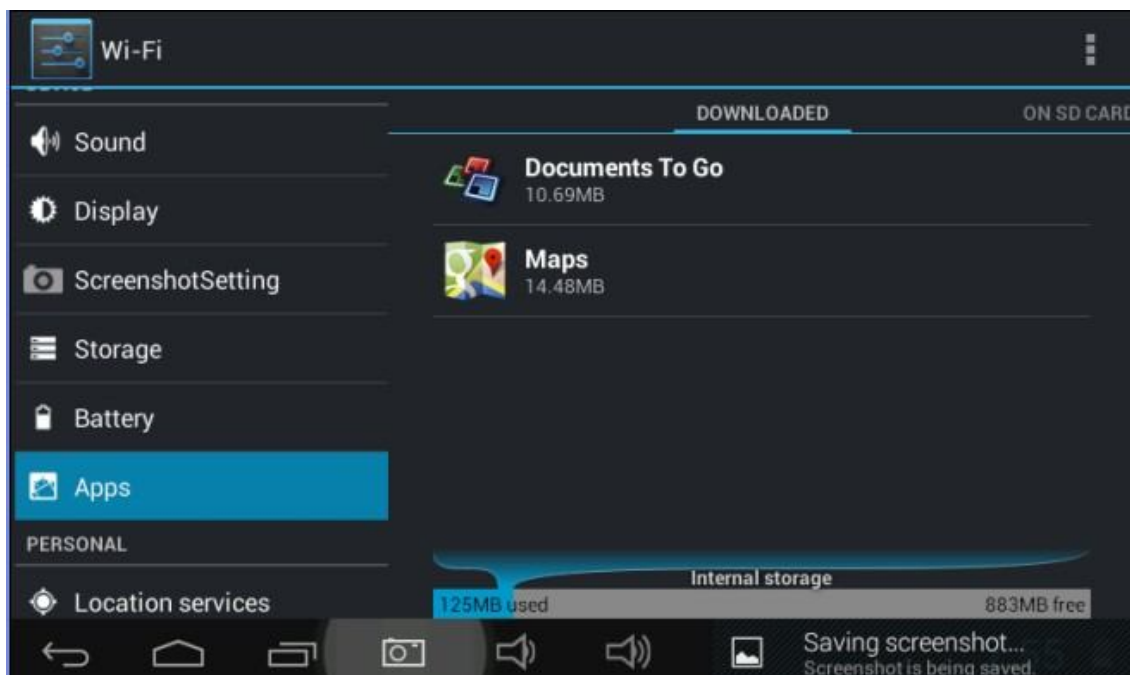

### 9.3. Personal

 
Under this column , we can set up and see the Location services, Security,Language&input, Backup& reset.Click each item to set as you like. For example:

Click the "Security" icon.Can show the security situation, you can slide up and down to read all the information ,as shown below:


# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

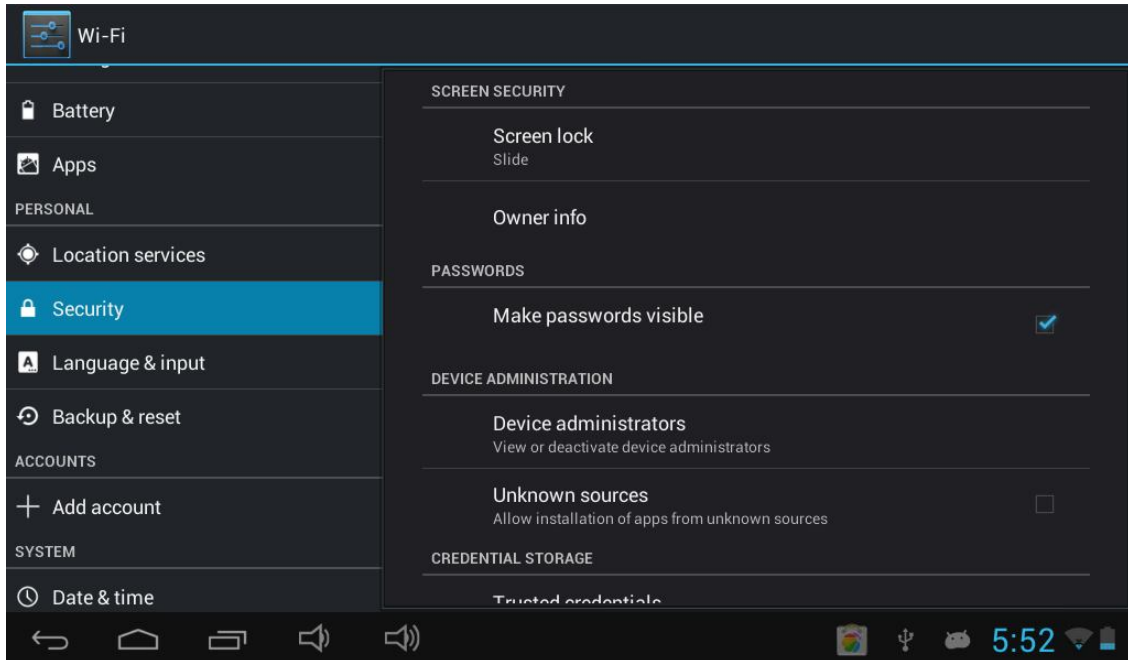

 Click the "Language&input" icon.you can set up the language you want, and you can slide up and down to read all the details.You can set up the input method under the "keyboard&input method "column.Can set up the search method under the"Speech" column. ,as shown below:

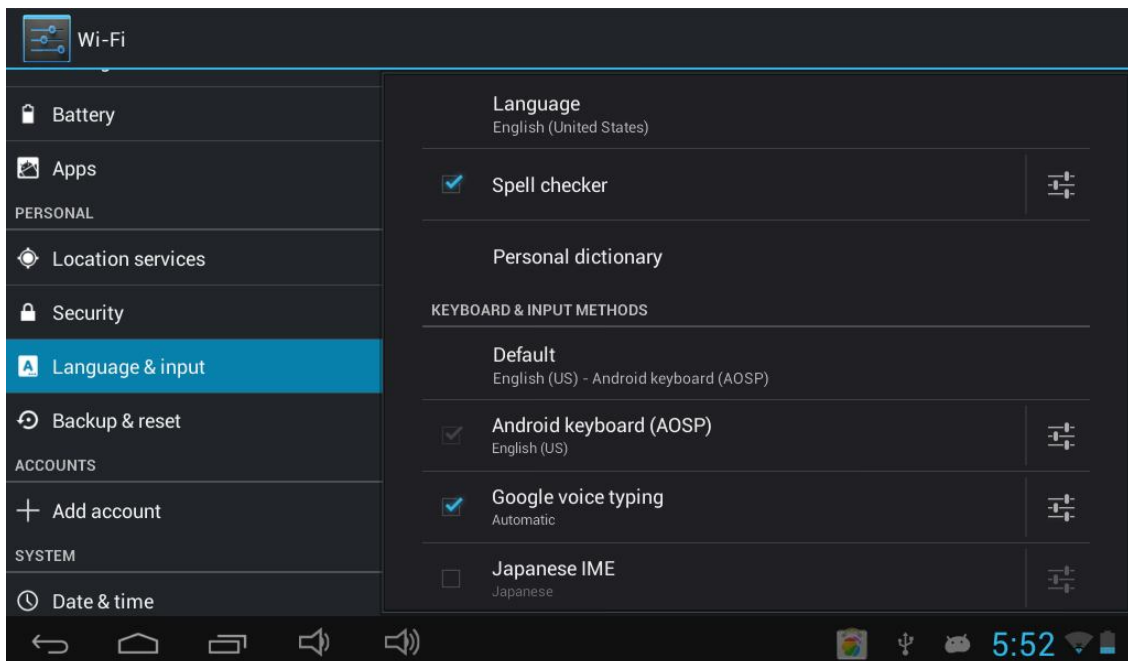


Click the "Backup&reset" icon. You can backup you data and also make factory data reset, ,as shown below:

# Clip Sonic<sup>®</sup>

 TECHNOLOGY

## Instruction Manual

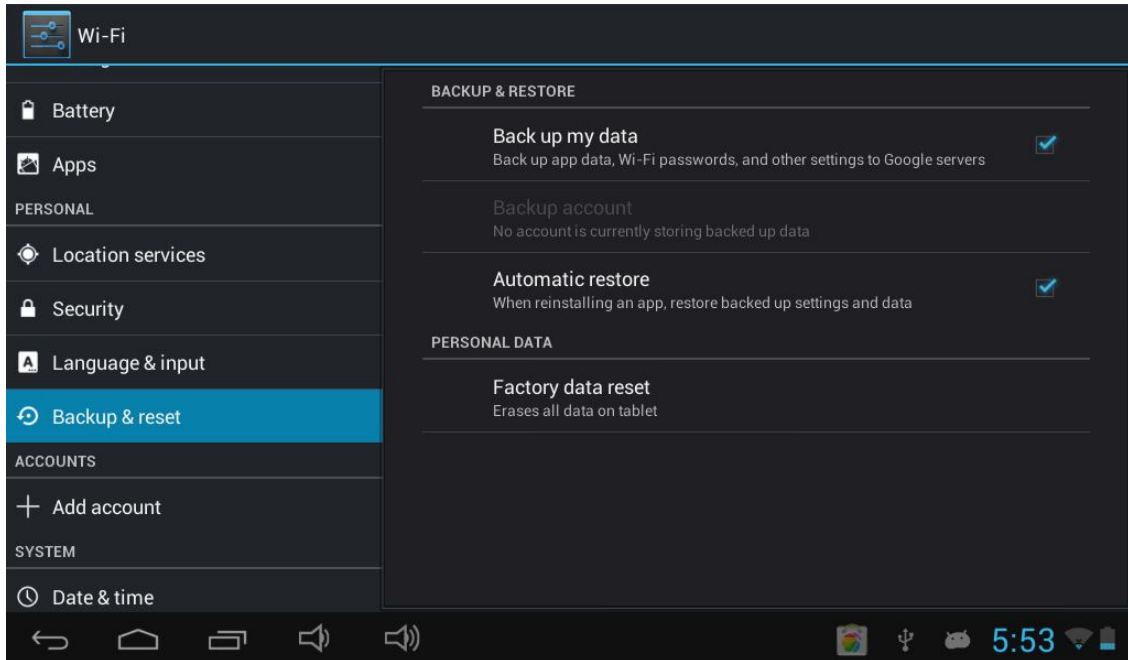


please note that after you make factory data reset, all the application you download and the data will be erased.

### 9.4. System

 Under this column, we can see and set up the Date&time, Accessibility, Developer options, About tablet. Click each item to set as you like. For example:

Click the "Date&time" icon. You can set the date and time you can choose the Automatic date&time etc, as shown below:

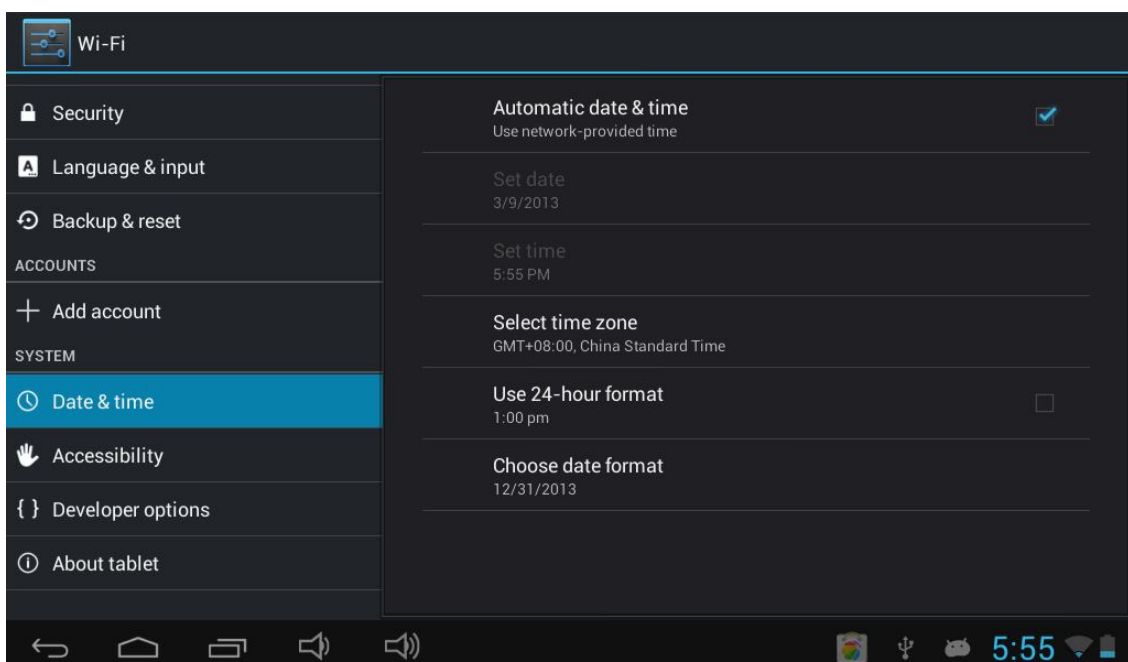


# Clip Sonic<sup>®</sup>

TECHNOLOGY


## Instruction Manual

You can also choose to set the time as you like, after you done this,click "set". If the input number is legitimate, then the operation is successful, and the system will use the new settings.

 Click the "Accessibility" icon. You can set the as shown below:

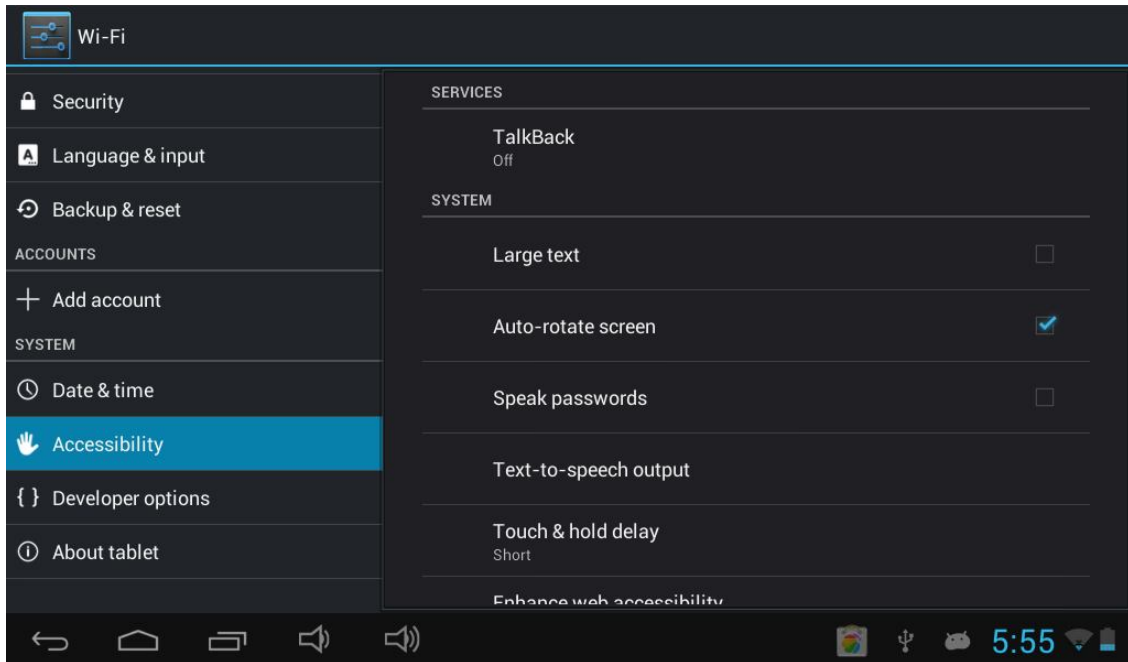

 Click the "Developer options" icon. You can set up the data under this column ,as shown below:

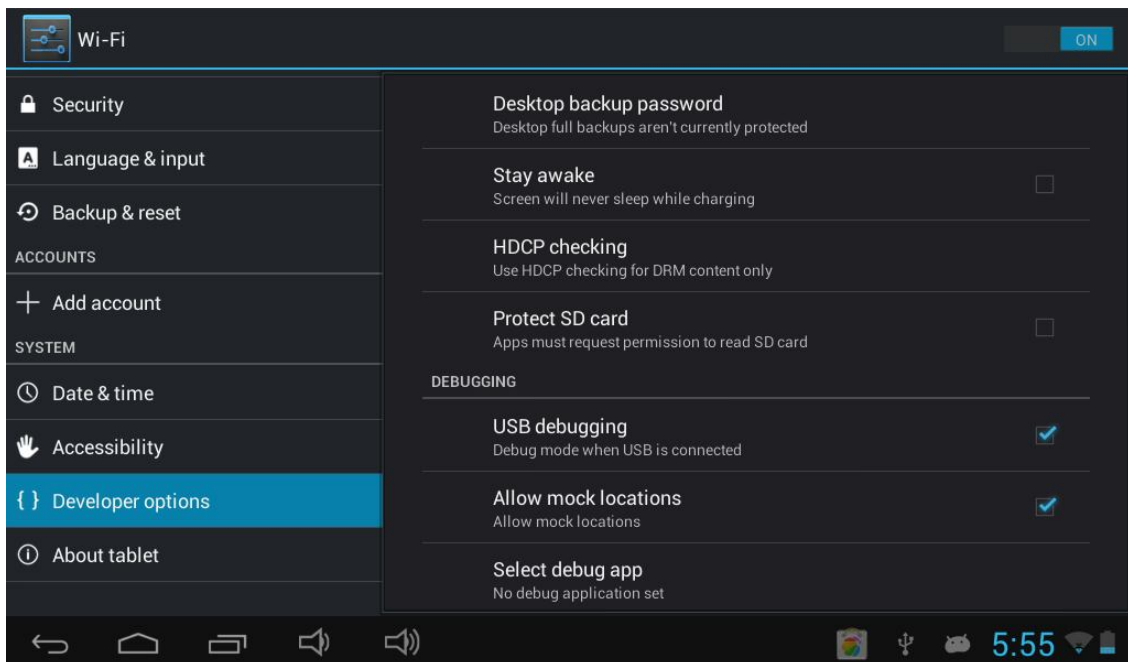

## 10.Install, unload, run the application

Android installation: there are a variety of ways to install applications, for example by USB setup, third party programs support installation(TF card) ,install by the devices. The user also can do on-line installation



# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

 
through "Android market", or download and install by the computer, or through a built-in browser download and install online

Here we introduced the way to install with the assist of the App. installer by TF card and the on-line installation through "Android market"


First, please make sure the "Unknown sources" under the "security" in the "setting" icon is selected.

### 10.1. Install APK software program from the TF card

Put in the TF card which is already with the software you want to install. Select "Explorer" icon in main menu.as shown below:

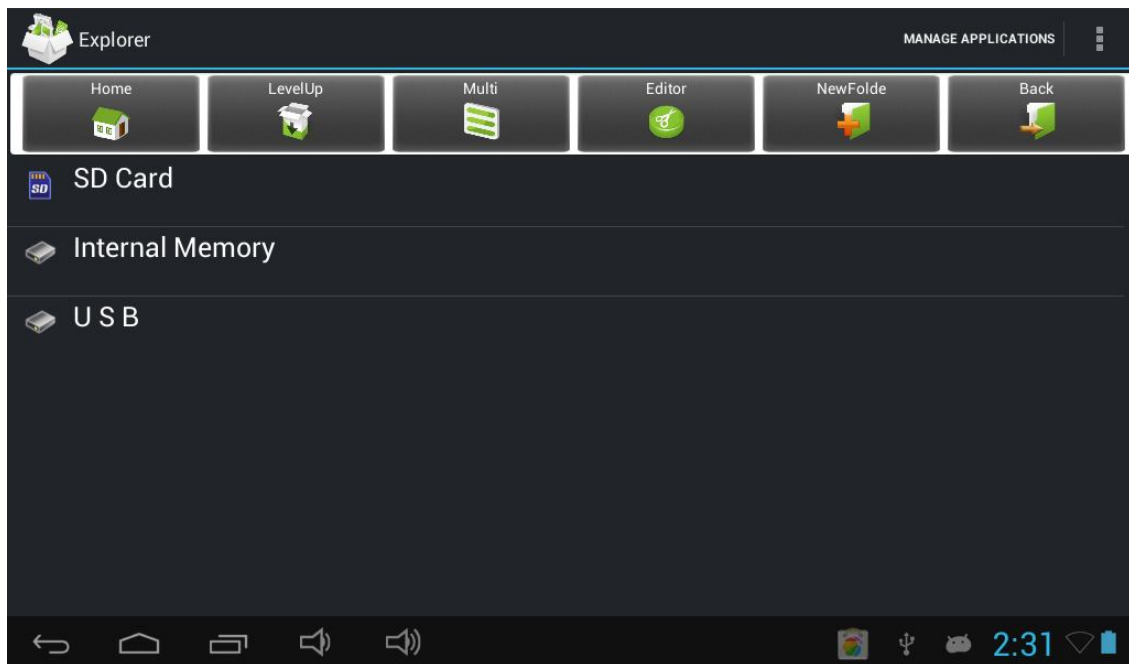

 
Choose the "SD card" to find the APK file you want to install, and you can install the software you choose.as shown below:

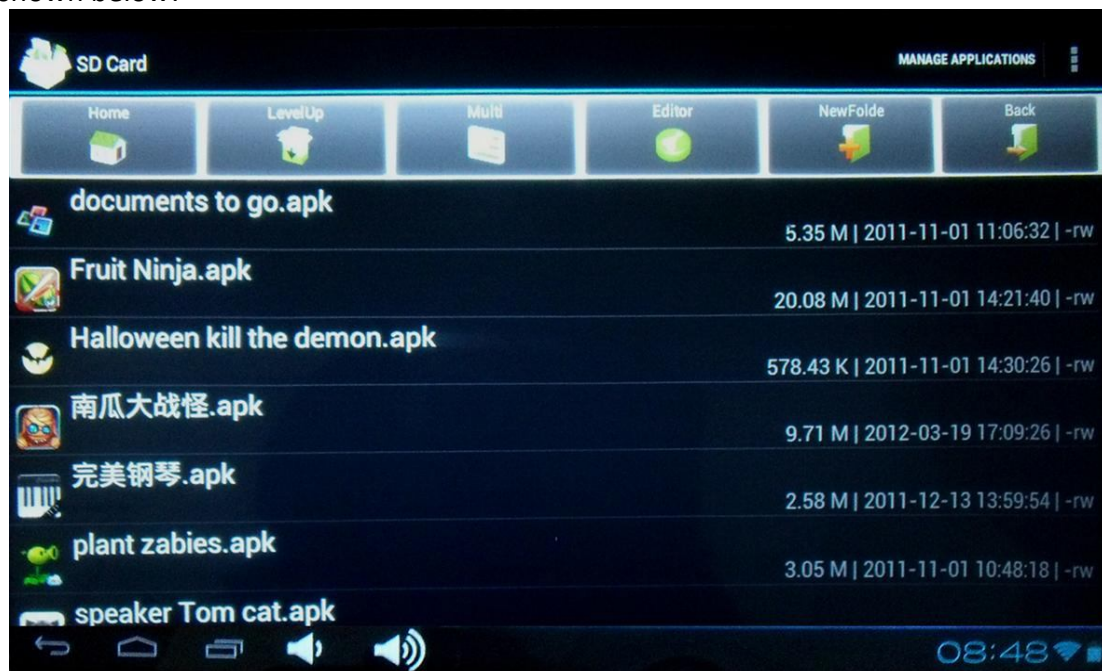

# Clip Sonic<sup>®</sup>

TECHNOLOGY
 
## Instruction Manual

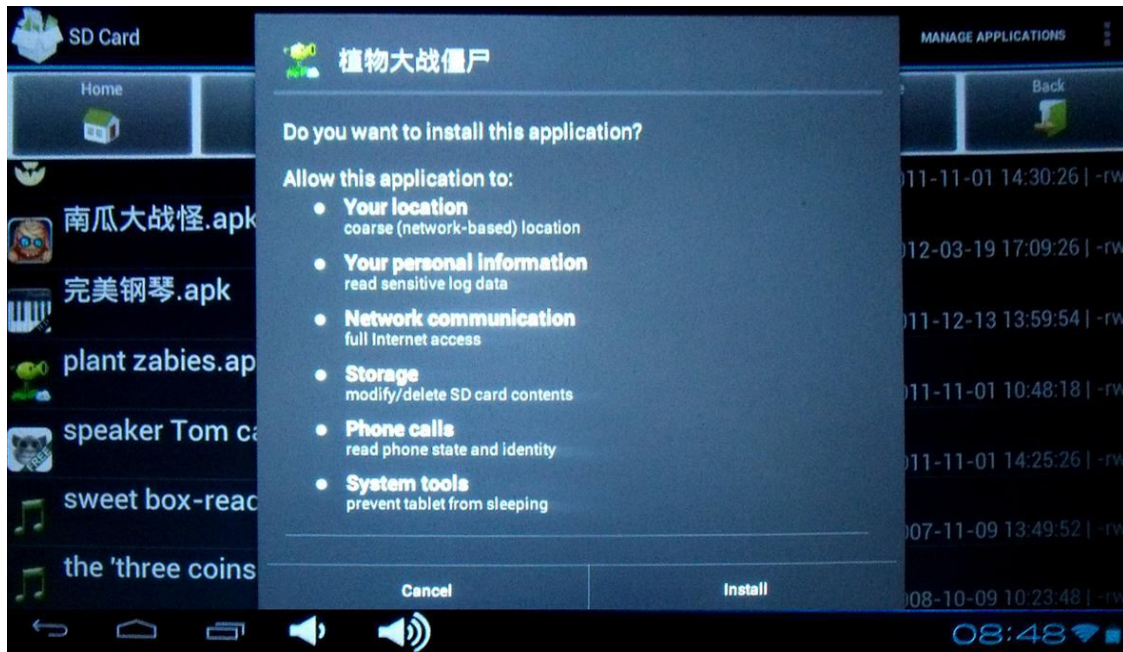


Note: The way to install from the USB(U disk) is the same as the installation from TF card(Micro SD).

### 10.2.Install searched application from the"market"

 First need go into the "market" ,For the first time you go into this program, you need to sign in with a g-mail account. When sign ,please make sure the internet is available.

After you sign in the market, you can find many software there, as shown below:

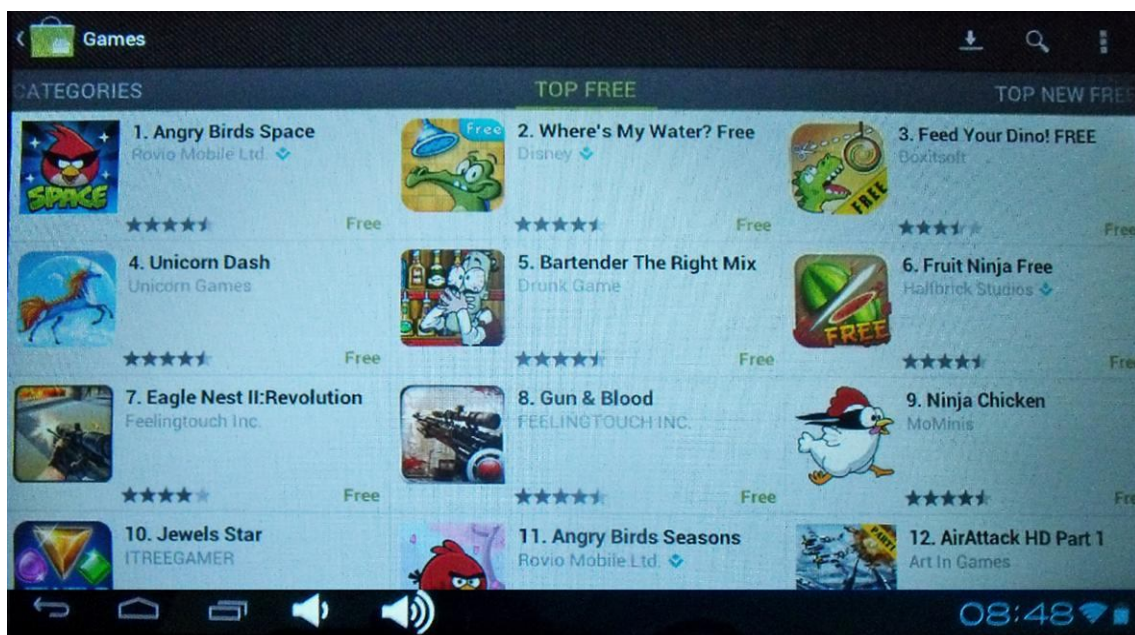




# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

 Choose the software you want to install. and it will be downloaded, as shown below:

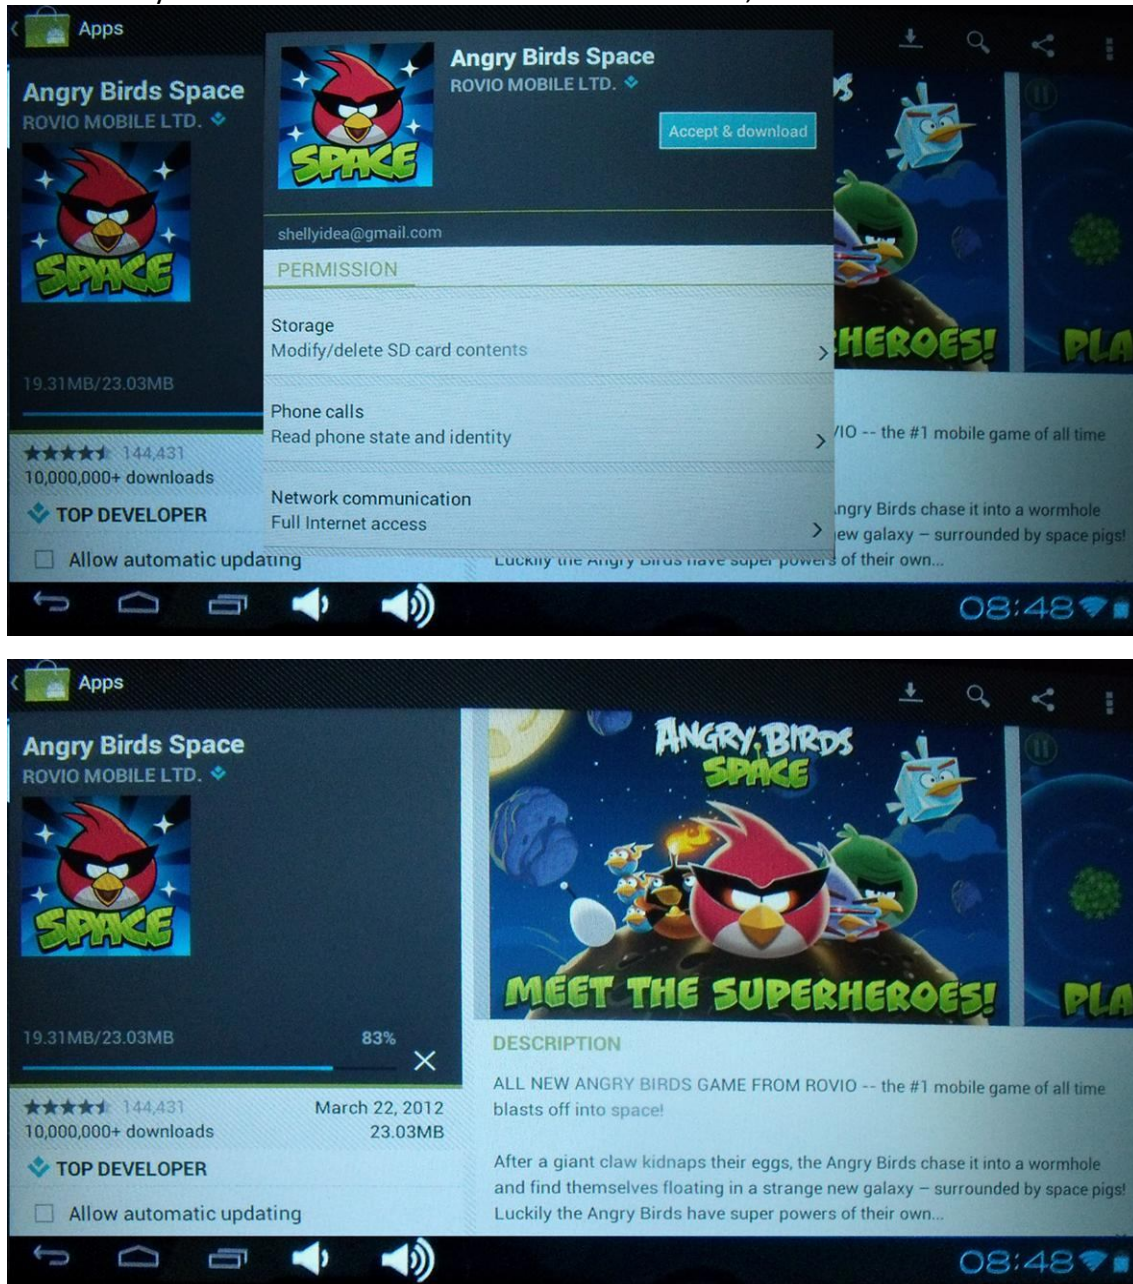

After the software is downloaded, it will install automatically, after finished installing, you can find this icon in the main menu.

*Please note: After first time use the "Market" icon, it will change to another name shown "Play Store".*


### 10.3. Install from the "ApkInstaller" icon

 Find and open the "ApkInstaller" in the menu interface, as shown below:


# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

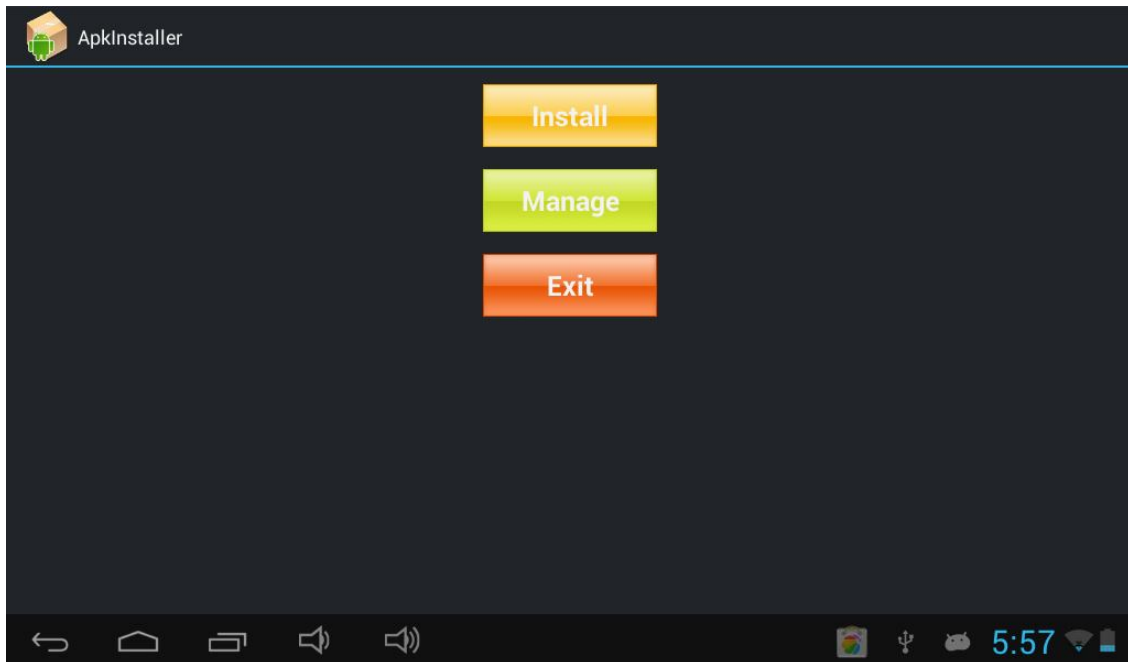

 Click the "Install" from the interface. And choose the APK software from the internal memory or the TF card to install, as shown below:

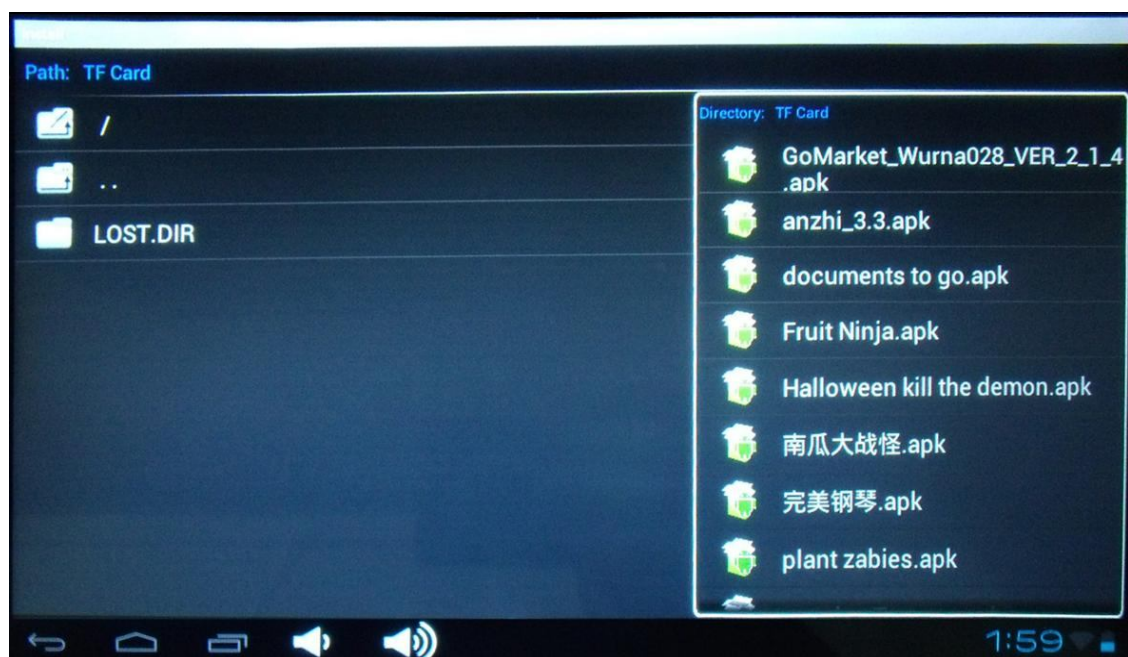

#### 10.4.Uninstall the application

 
Uninstall the application: you can use the third party software management tools or use the built-in Android application management software.

Select "Settings" / "Apps", select the corresponding installed applications to check the program information, uninstall the program and other operations, as shown below:

# Clip Sonic<sup>®</sup>


TECHNOLOGY

## Instruction Manual

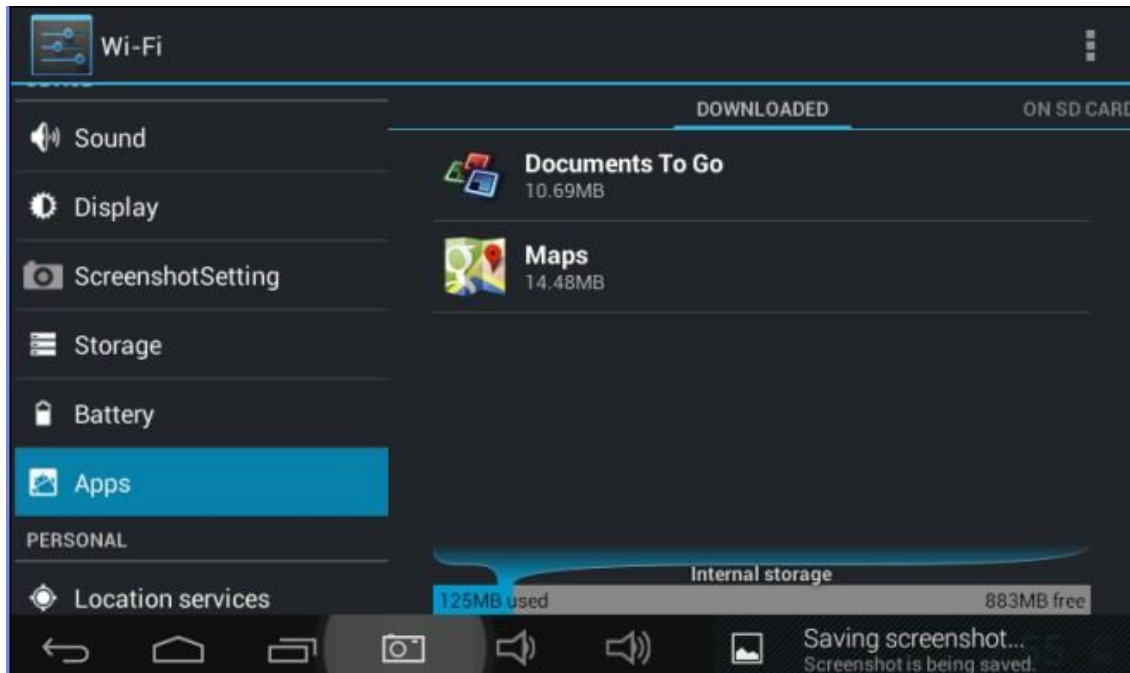

## 11. Widgets

 The user can select "widget" in another page from the main menu, to see the applications in the widgets, as shown below:

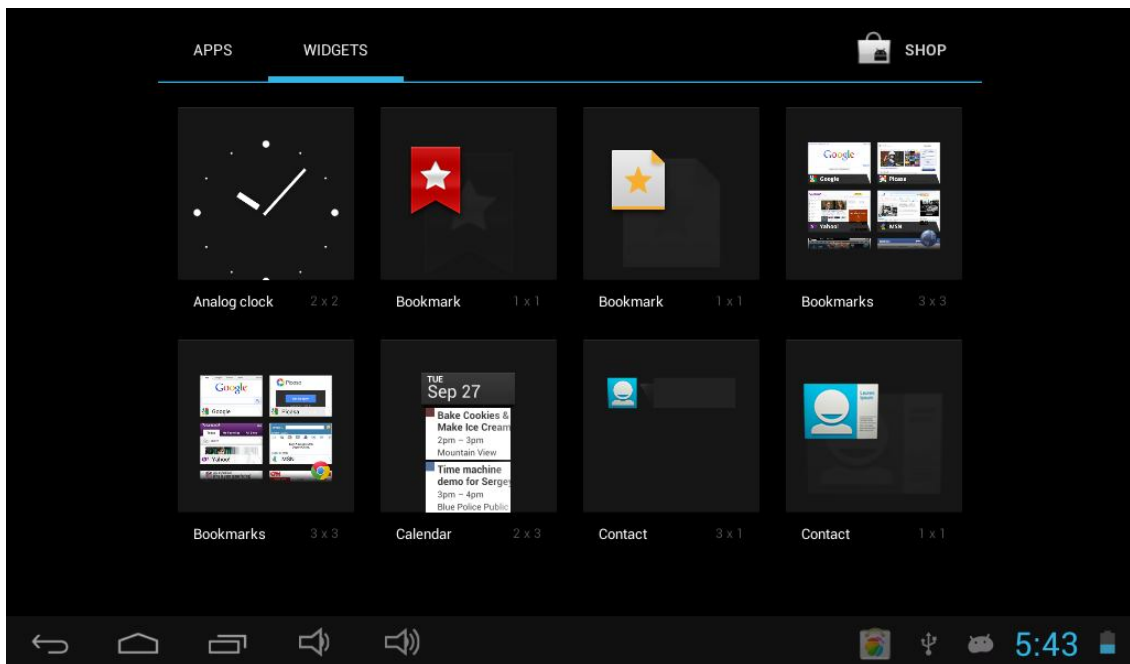

Long touch the item in the widget, you can copy it to the main interface. And also you can operate this program to keep it in the main interface.



# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

Note: If you do not need the icon in the main interface, you can long touch the icon and delete it from the main interface.

 
## 12. Main programs operation Introduction:

### 12.1 Browser:

Webpage browsing:

When the network is connected, open the " Browser" and enter the URL, you can browse webpage; or through the main desktop search bar to input the website and open the webpage.

On the right-up corner ,there is a icon, touch the icon to make more setting for the webpage , as shown below:

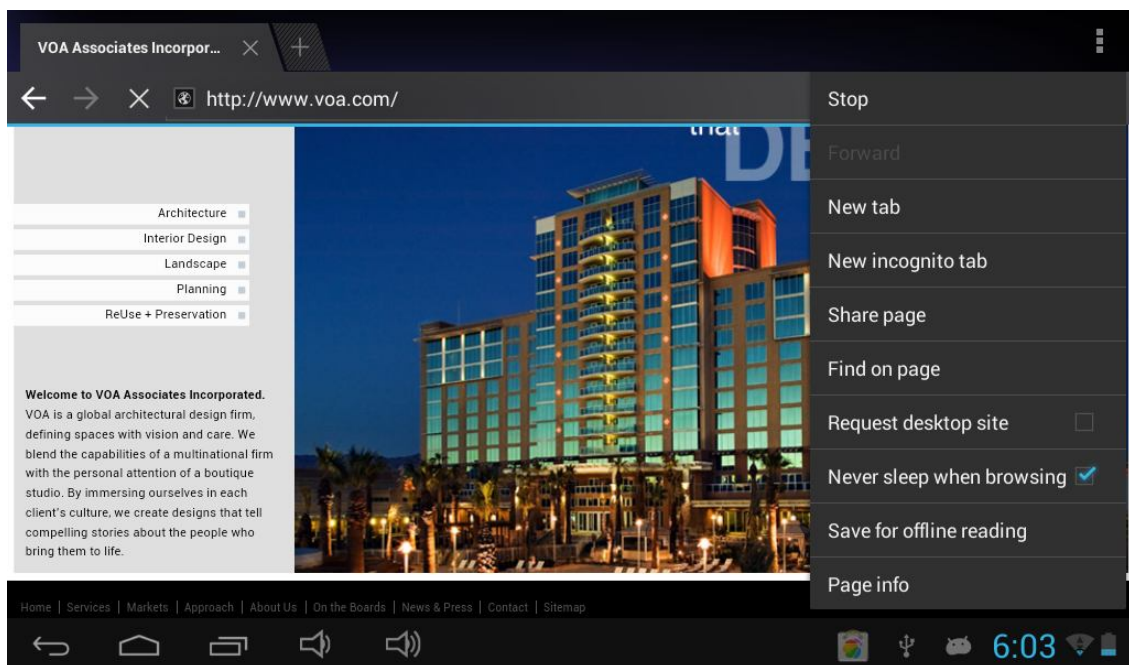

Online video:

Users can through the "Android market" or other ways to download online video player software, online TV player software, online music software, and then install in the machine. To open the installed software, you can watch online video or online TV, listen to online radio.

Users can also download other third party network application software, including the webpage browsing, video player, website client, instant messaging and other software.


### 12. 2.Camera:

 
Click on the "Camera" icon in the main menu and enter the "camera" main interface, touch the dots in the middle of the circle to take a photo, as shown below:


# Clip Sonic<sup>®</sup>


TECHNOLOGY

## Instruction Manual

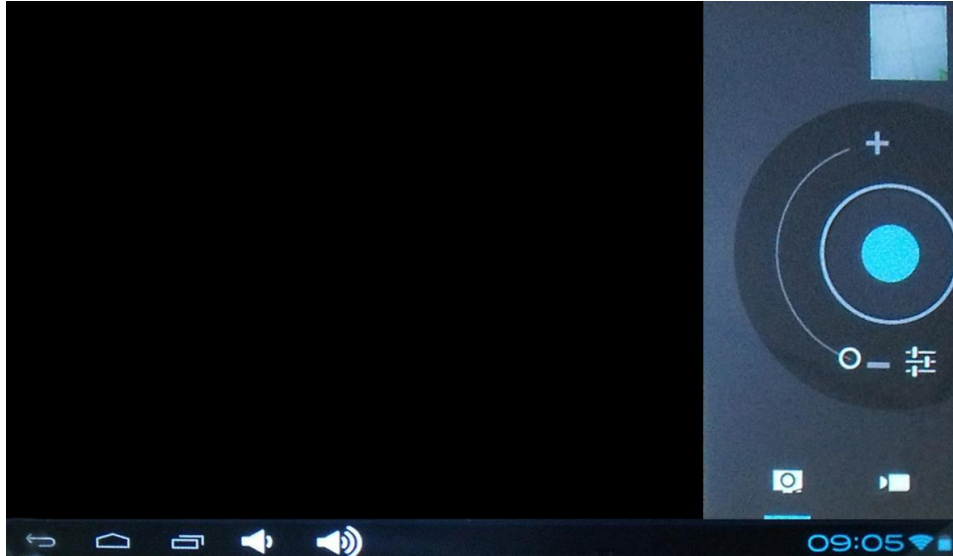

 Click the  on the interface to change to another interface for the setting, As shown below:

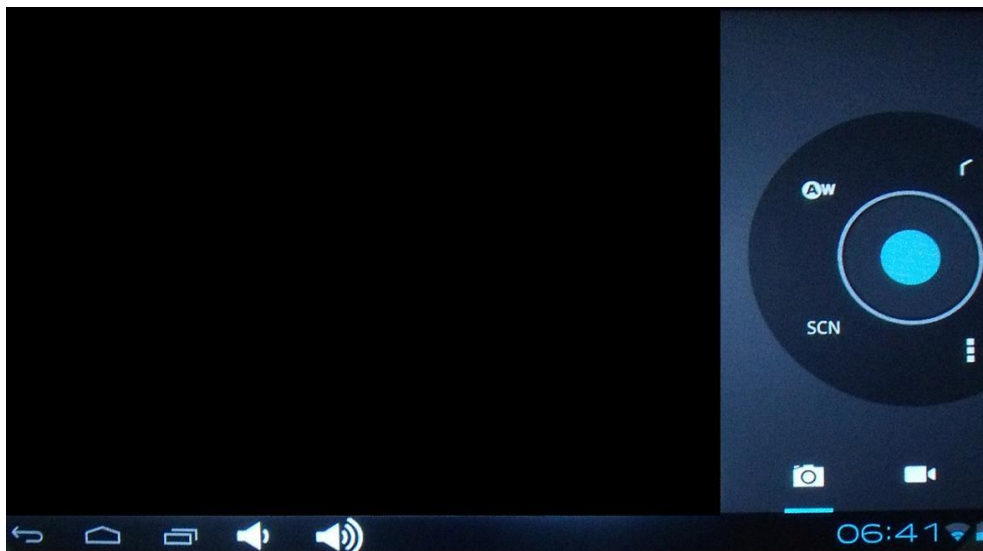

You can click the  icon to change to videography.


### 12.3. E-mail:

 Click on the "e-mail" icon in the main menu to enter email client. E-mail applications accompany with email settings guide, it can add the common Web email service providers (e.g. Gmail, Yahoo, Hotmail and 163 etc manufacturers) external POP3 or IMAP email account, As shown below:

# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

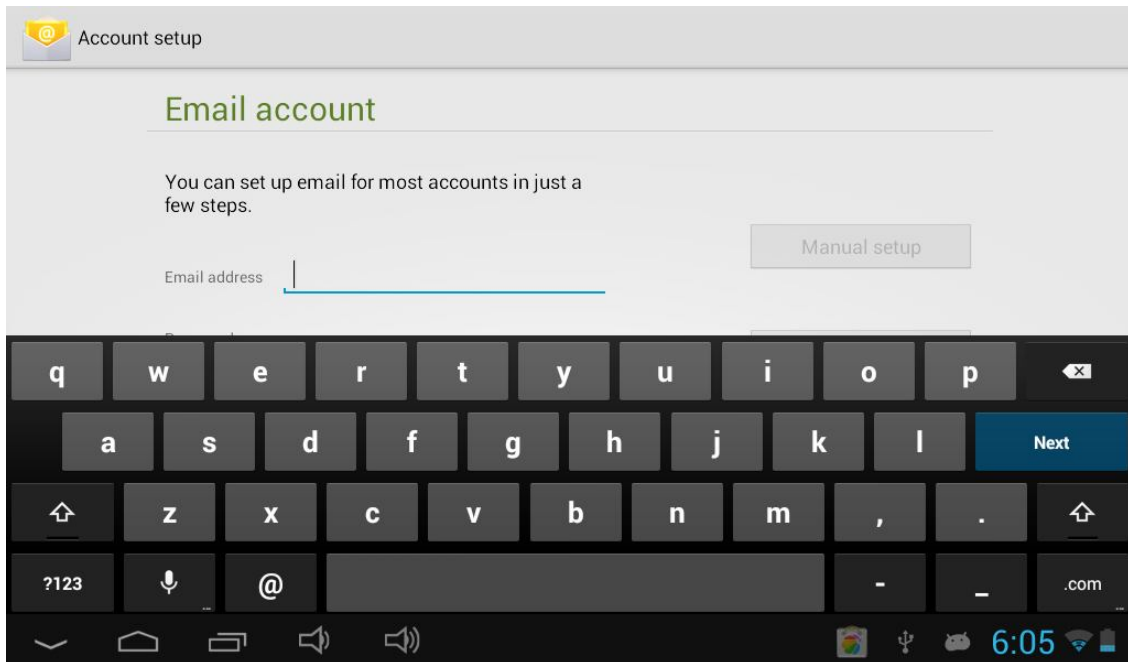


Note: before the mail will be set up guide, please ensure that you already link the network.

Here we take shellyidea@gmail.com as an example:

In the email address bar, enter your valid email address: [idea@gmail.com](mailto:idea@gmail.com)

In the password field to enter your valid password: \* \* \* \* \*

 Then you can choose the "Manual setup", account type selection interface will appear as shown below:

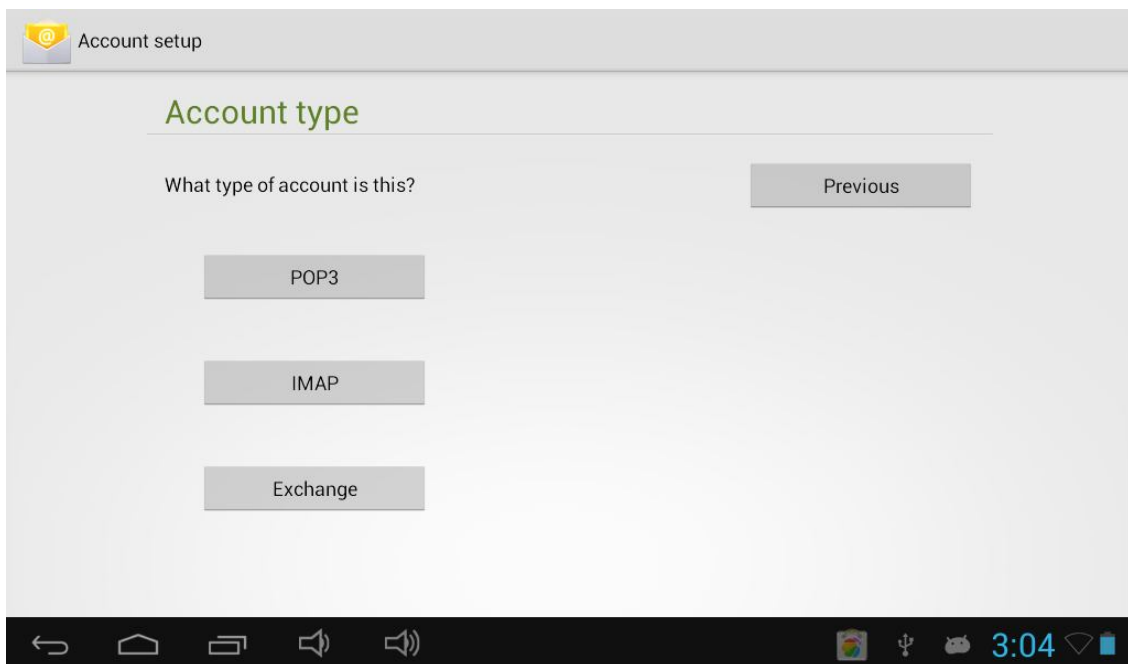

Here we are using the POP3 account type. And the receiving service settings will appear, interface as shown below:



# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

The screenshot shows the 'Account setup' screen with the following fields and values:

Field	Value
Username	sales9@ideaworldhk.com
Password	.....
POP3 server	pop3.ideaworldhk.com
Security type	None
Port	110
Delete email from server	Never

Buttons: Previous, Next

Please according to each email provider's information, set different parameter, such as:

The POP3 server: default is "126.com", and should be modified for "pop.126.com"

The port number is "110"

Then select the "next", you will enter the "inspection acceptance server settings", if set up correctly, Select the "next", you will enter the account information custom interface:

The screenshot shows the 'Account setup' screen with the following fields and values:

Field	Value
Give this account a name (optional)	shellyidea@gmail.com
Your name (displayed on outgoing messages)	

Buttons: Next

Message: Your account is set up and email is on its way!

 
Error message: This field can't be blank.

In the column "name" to input the name you want to display in the outgoing message, and then click "next" button, you can enter the mail interface. It will load the mail automatically; mail list will be as follows:

# Clip Sonic<sup>®</sup>


TECHNOLOGY

## Instruction Manual

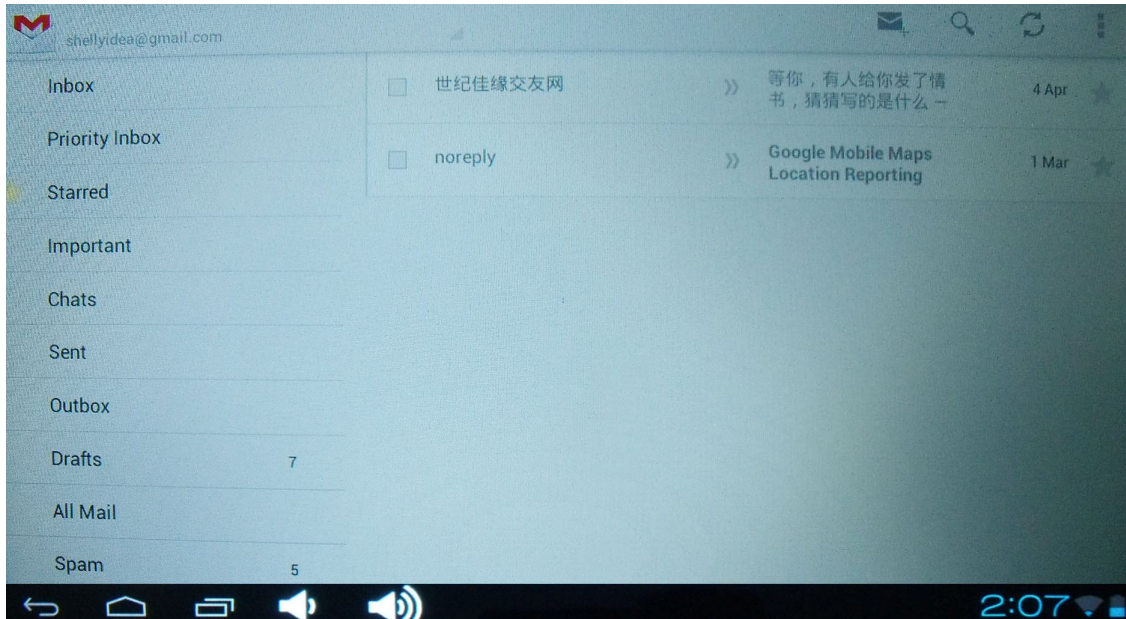

### 12.4. Explorer:

 Click on the "Explorer" icon in the main menu, you can view all the files or information from the external devices or the internal memory, as shown below:

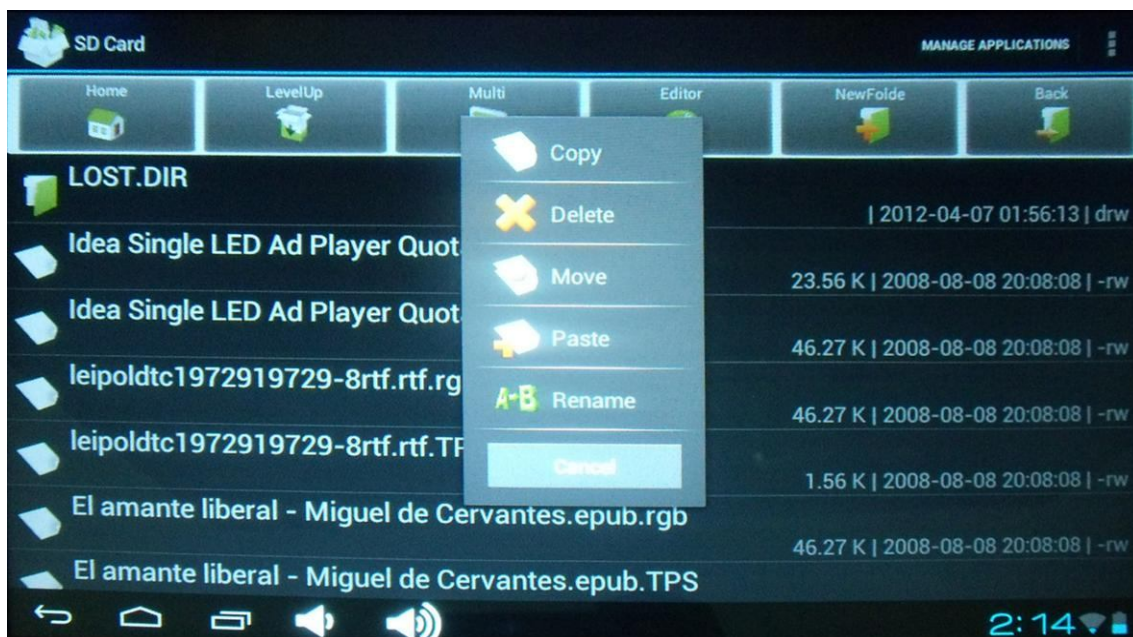

Note: from this interface, you can edit the files as you like, for example: delete, move, paste rename cancel etc.

### 12.5. Gallery:

 
Click on the "Gallery" in main menu, to enter the next interface, it will list all video files and image files. As shown below:




# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

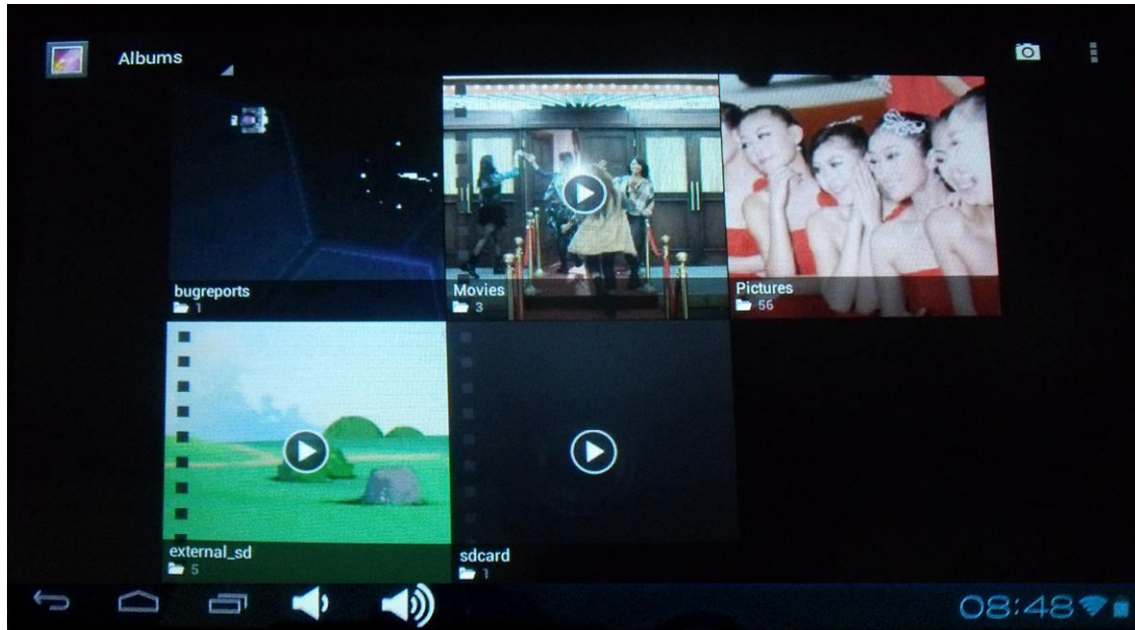

 Select the video file and enter the video playing interface, Select "play", "stop", "fast forward", "rewind", "progress" and other control keys to control the broadcast schedule, as shown below.


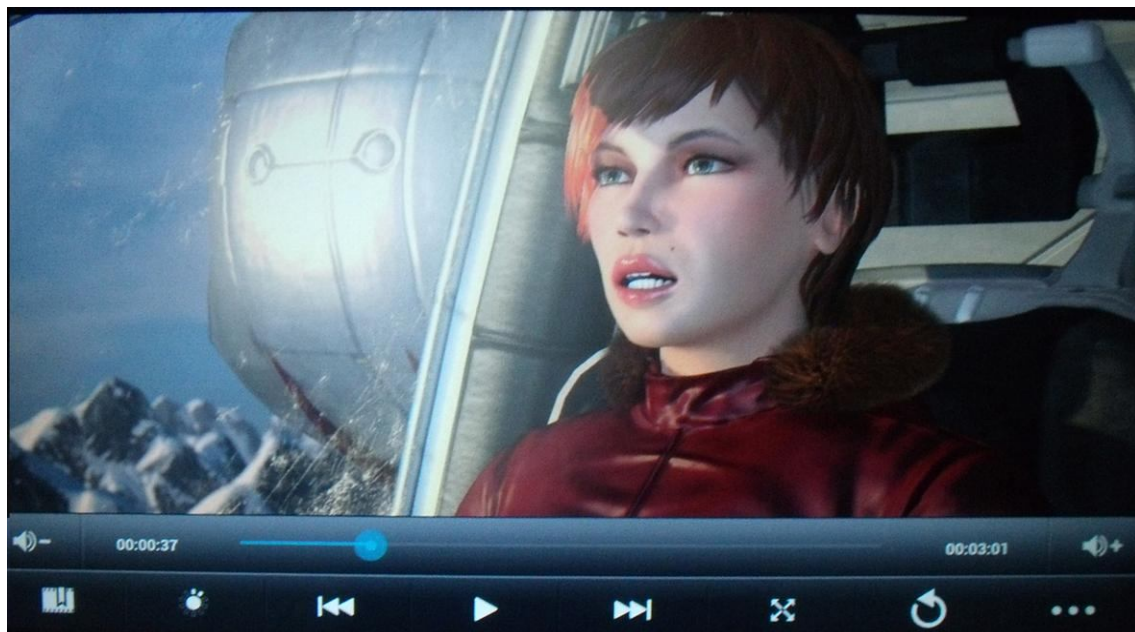


Select the picture and enter the picture interface. on the right-up corner, click the icon to go into the set for the picture. such as "slide show", "edit", as shown below:

# Clip Sonic<sup>®</sup>

  TECHNOLOGY

## Instruction Manual

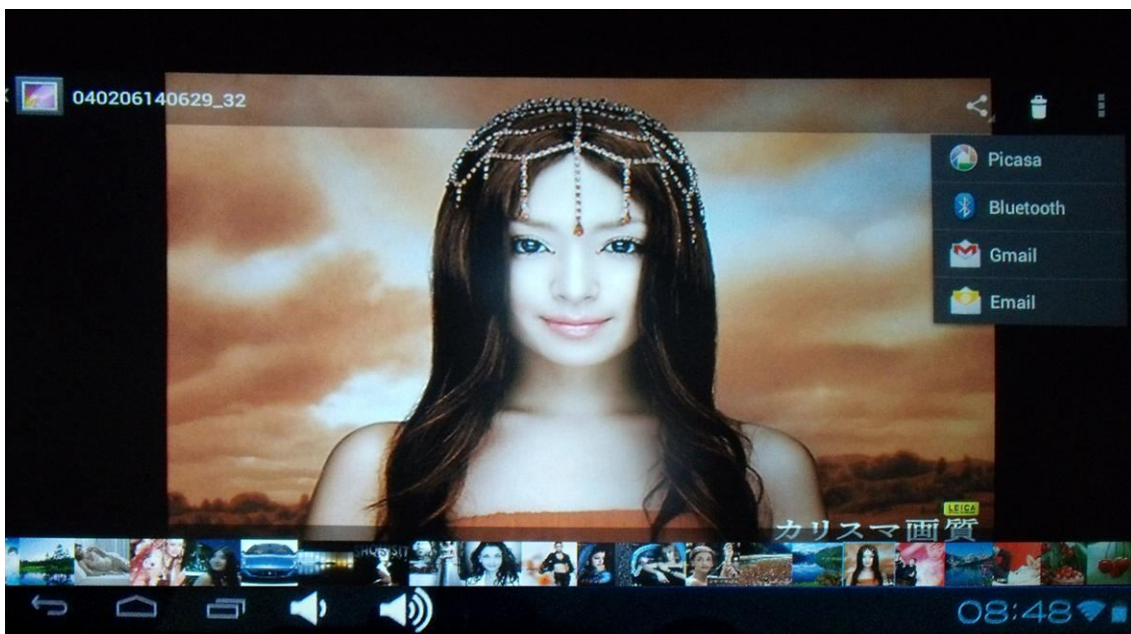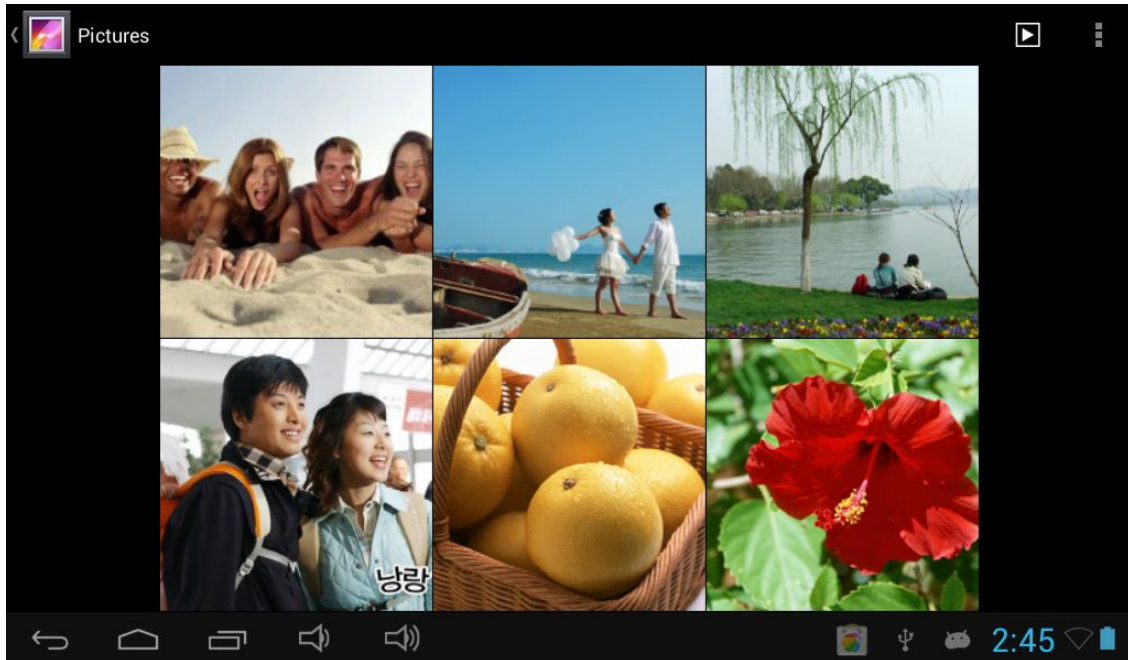

### 12.6.Gmail:

From this icon, you can sign in your gmail account to view the email, as shown below:

# Clip Sonic<sup>®</sup>

## TECHNOLOGY

### Instruction Manual



: use to write and send an email.



 
: search the email or the address you want to use.



: refresh the email to check if there is new email arrive.

#### 12.7.Music player:

Click on the "music" icon in the main menu, and then enter the music player interface. The default list system in the user data area for all audio files as shown below:

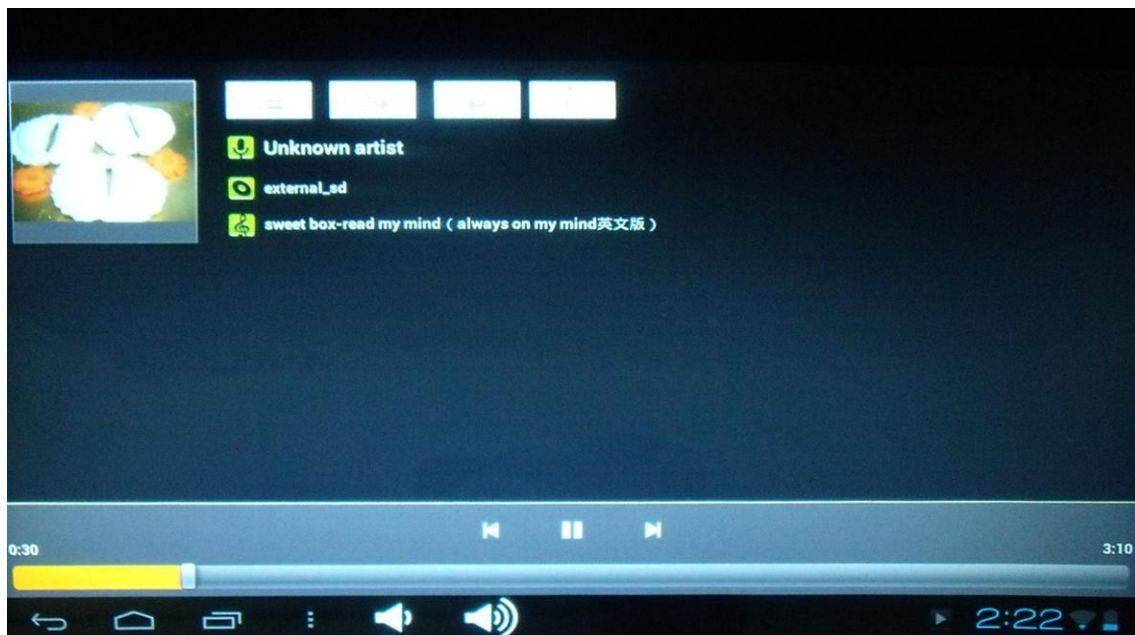

You can through the synchronous USB to input audio file, or by inserting a SD card with audio file to input audio files, you can also through the network to download the audio file.


Select the corresponding tag, and check the interface as "artists", "album", and "song" and so on to play the song.as shown below



# Clip Sonic<sup>®</sup>

 
TECHNOLOGY

## Instruction Manual

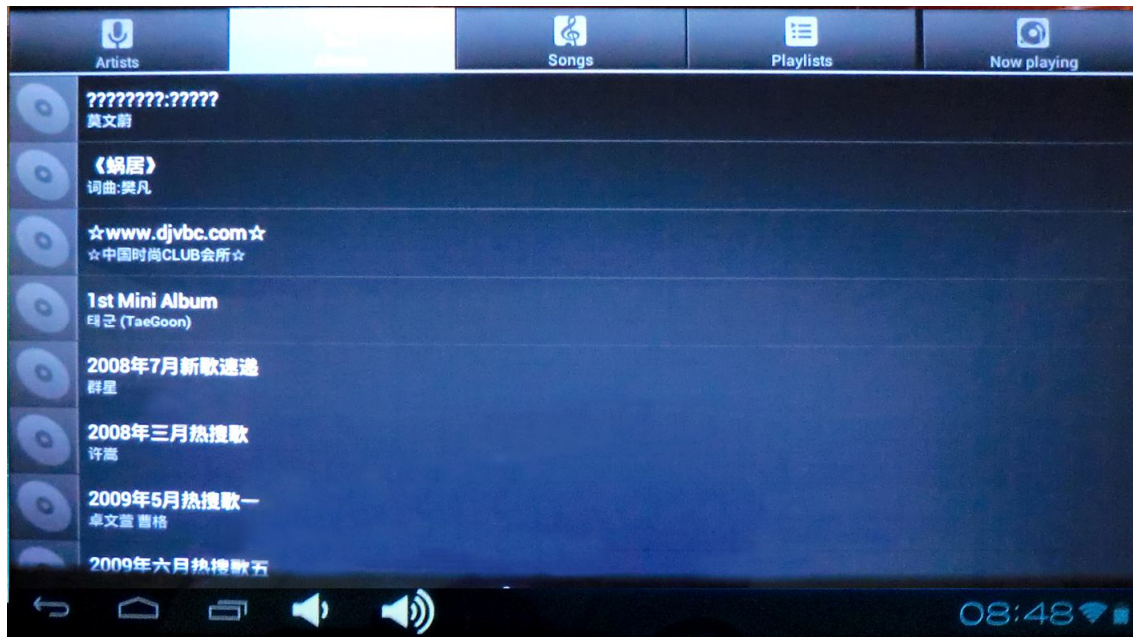

### 12.8. Record

 Click on the "Sound Recorder" icon in main menu and enter the recorder main interface as shown below:

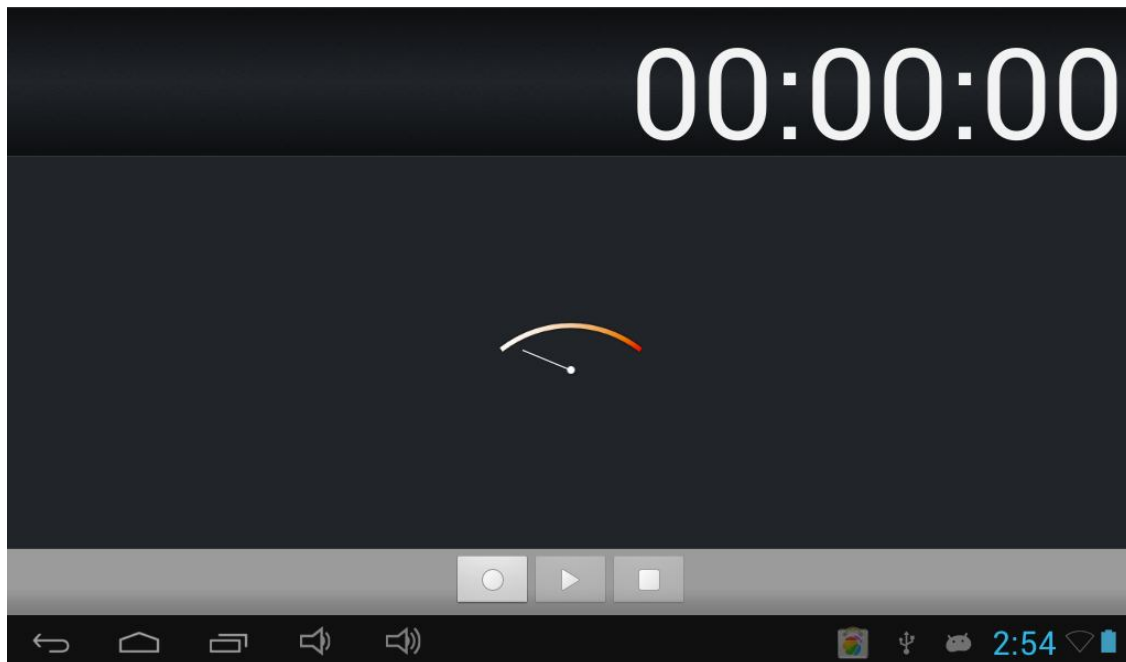


Click the  menu to start record, click the  to done the record, as shown below;

# Clip Sonic<sup>®</sup>

 TECHNOLOGY

## Instruction Manual

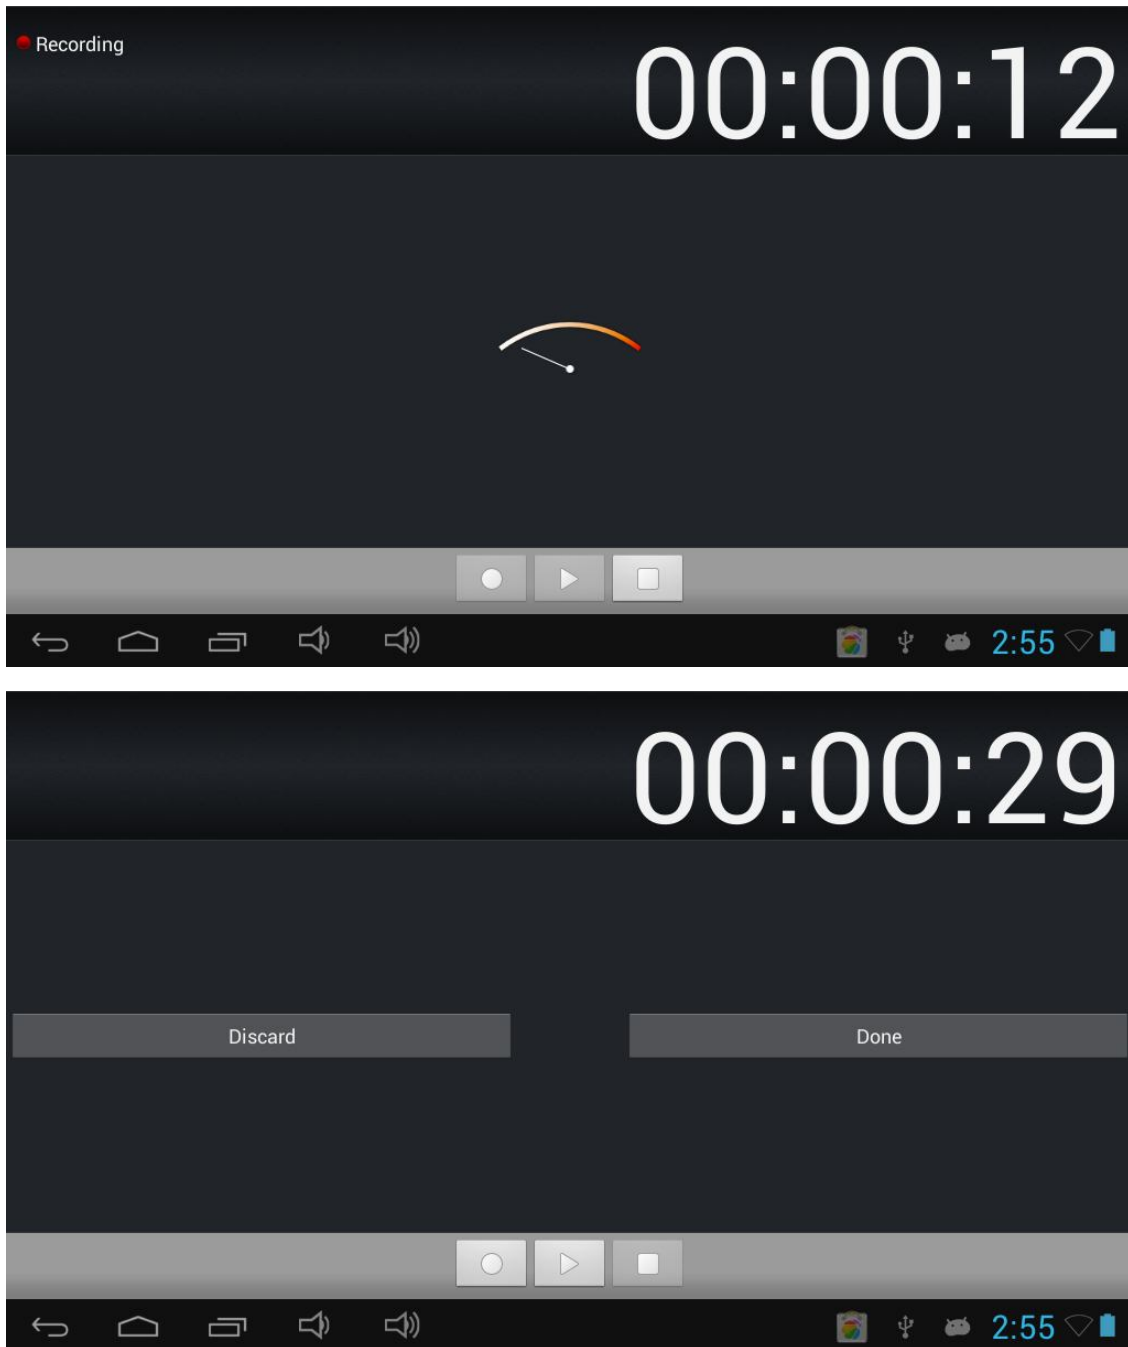

You can find the recorded files in the "Internal Memory" from the "Explorer" icon.


### 12.9. Market (Play Store)

 Click on the "market" icon in the main menu and enter the main interface as shown below:

# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

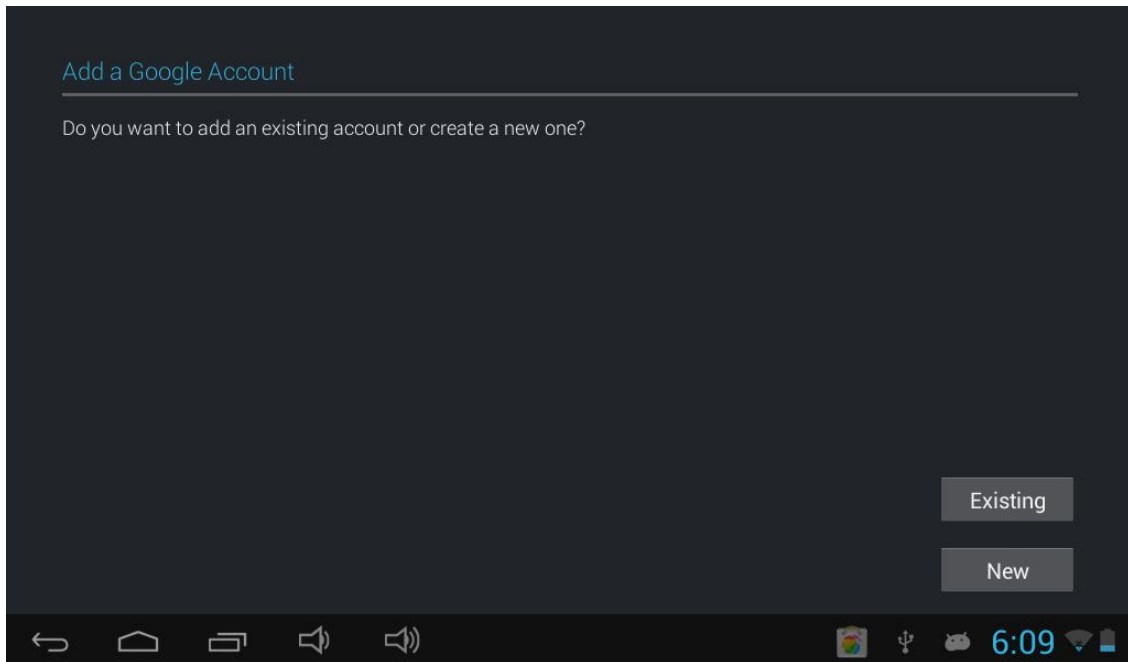


Please note: After first time use the "Market" icon, it will change to another name shown "Play Store".

Select "sign in" to sign in your gmail account.

If you have no Gmail account, you need to create a Gmail account, click "get a gmail account" to get the account.

 Input the email address and the password, click "sign in", the following picture will appear:

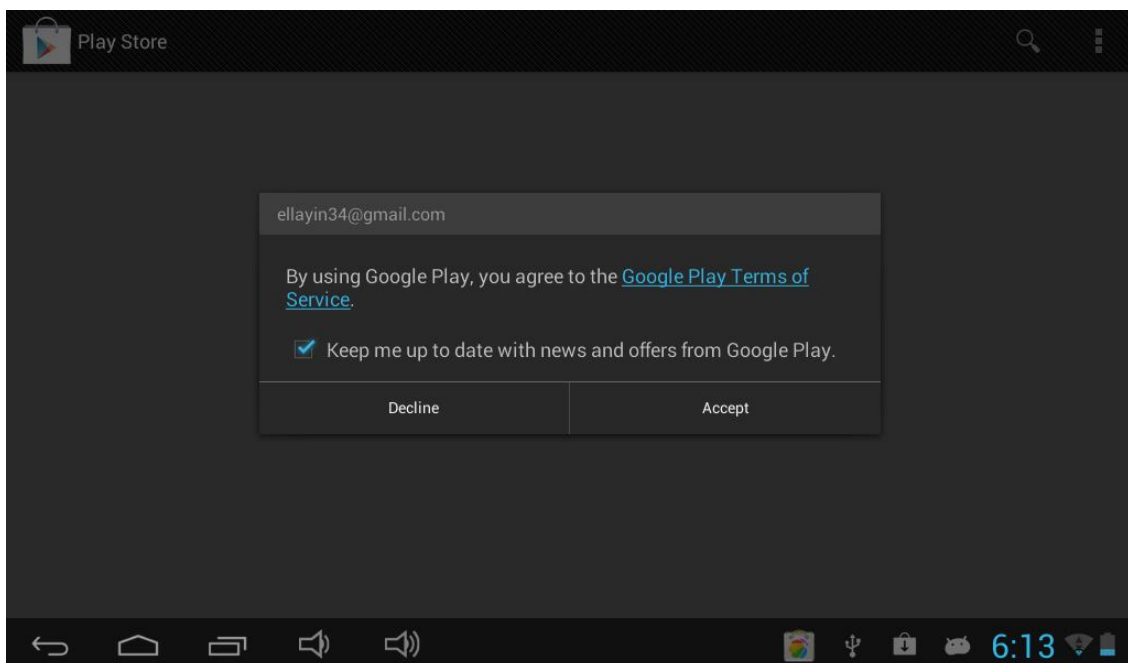


Set the code of the account shown above, Following picture will appear after the setting is completed:




# Clip Sonic<sup>®</sup>

 TECHNOLOGY

## Instruction Manual

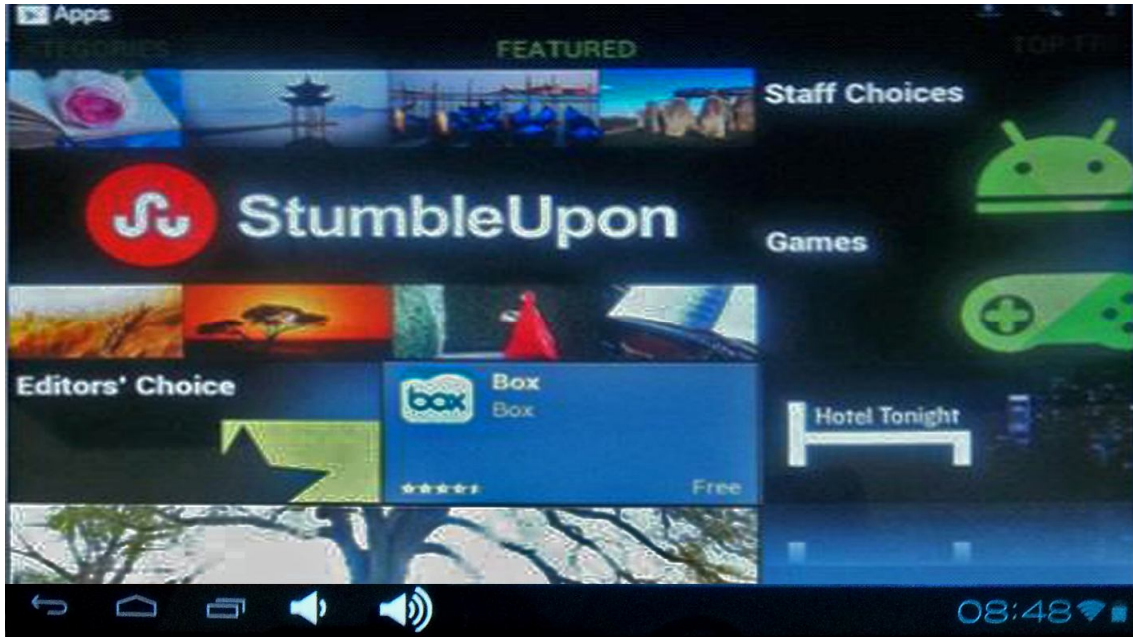

 Click on the "search" input the software you want to install, the following picture will appear:

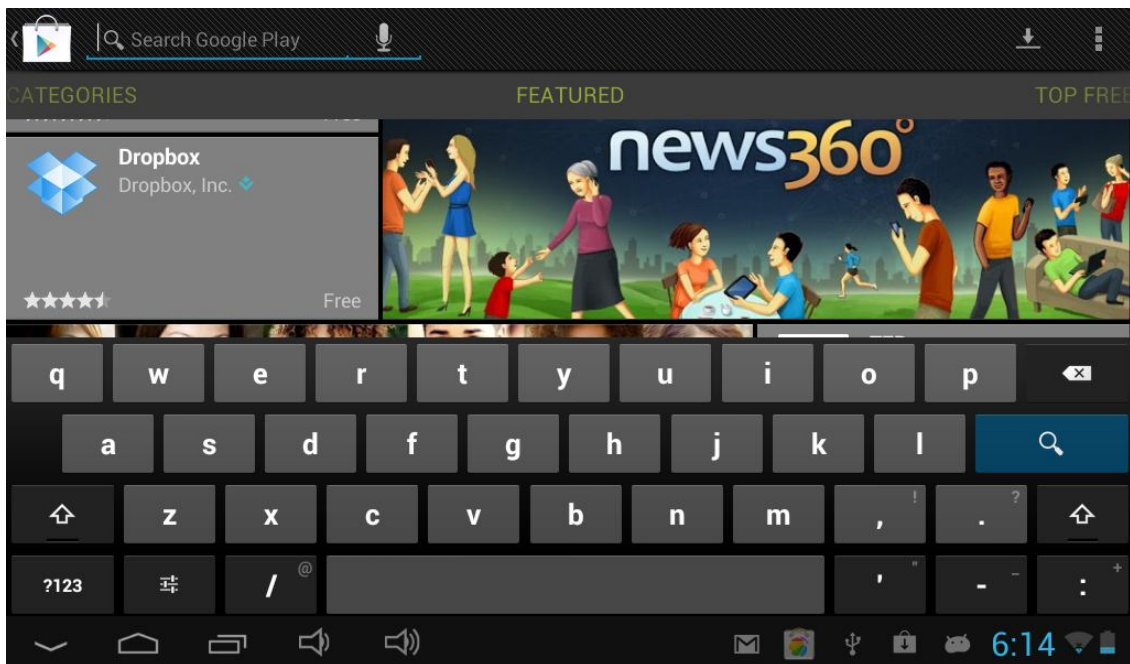


Click to download and install software (pictured above), in the application of mine to find the software you installed, as the following picture

# Clip Sonic<sup>®</sup>

 TECHNOLOGY

## Instruction Manual

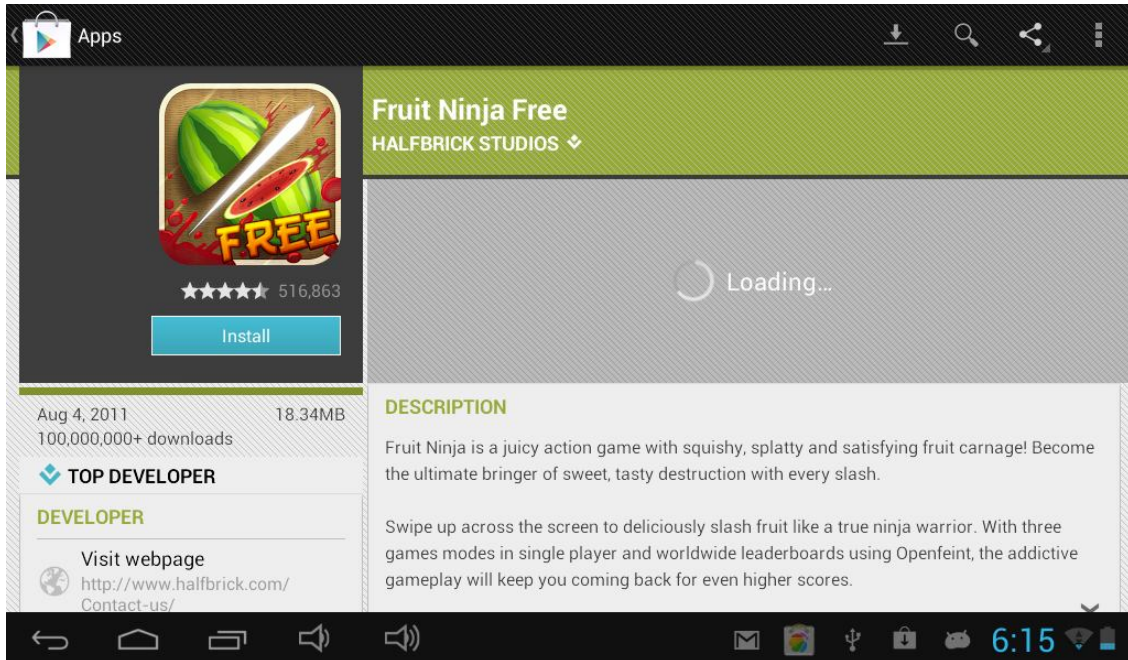


### 13. Wallpaper:

The system supports static wallpaper, and 3D wallpaper.

#### 13.1. Set the wallpaper from the setting icon

 In the "setting" interface, to find the "display" icon, under this icon you can choose wallpaper album, as shown below:

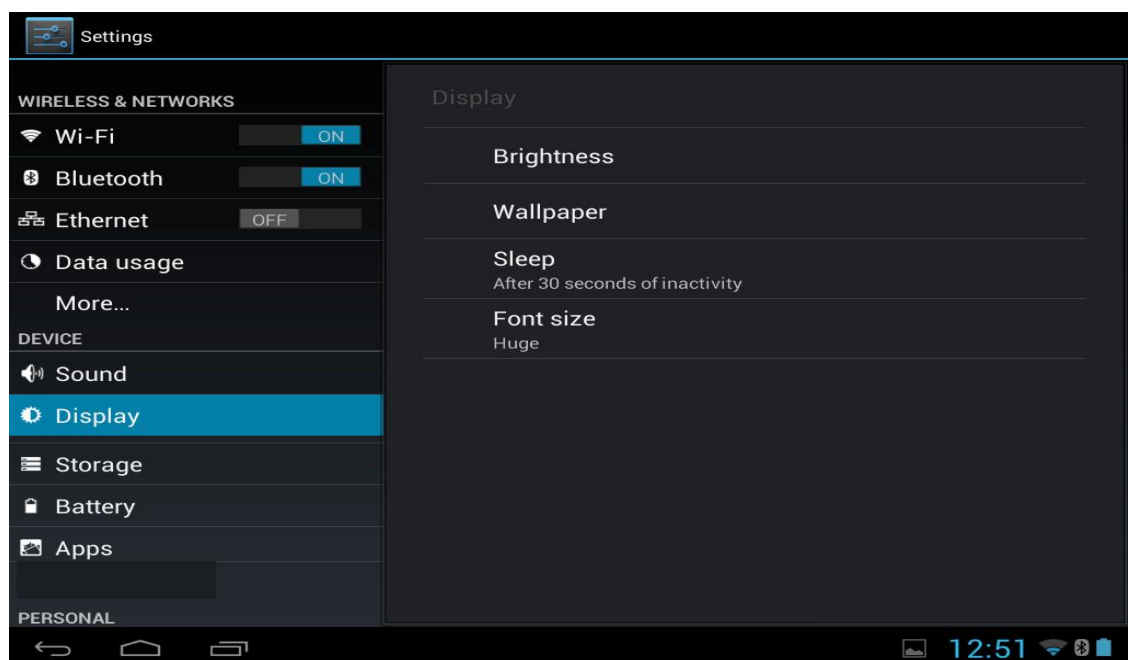

# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

Choose the wallpaper, can go to the further interface, you can choose the picture you like to set as the wallpaper.

### 13.2. Set the wallpaper from the "Gallery" icon

Go the Gallery interface to fine the picture you want to set as wallpaper.

Touch this picture's interface you choose, and it will come out some icons on the up-right corner, click up-right icon "📌" to choose the "set picture as" album to set as wallpaper, it will shown interface as bellow:



Then it will appear one interface, then click Wallpaper , so you can click up-right word "CROP" , the picture you have chosen will be setting as wallpaper after you click word "CROP".

There are the following options:

Select "wallpaper": can customized using image as wallpaper.

Select the "live wallpaper": can use the systems supplied 3D wallpaper.

Please note: You can long touch the main interface, an then will come our the note for wallpaper setting.

 
### 13.3. Set the wallpaper from the mother interface

On the mother interface, long touch the screen it will come our the note, as shown below:

# Clip Sonic<sup>®</sup>

TECHNOLOGY


## Instruction Manual

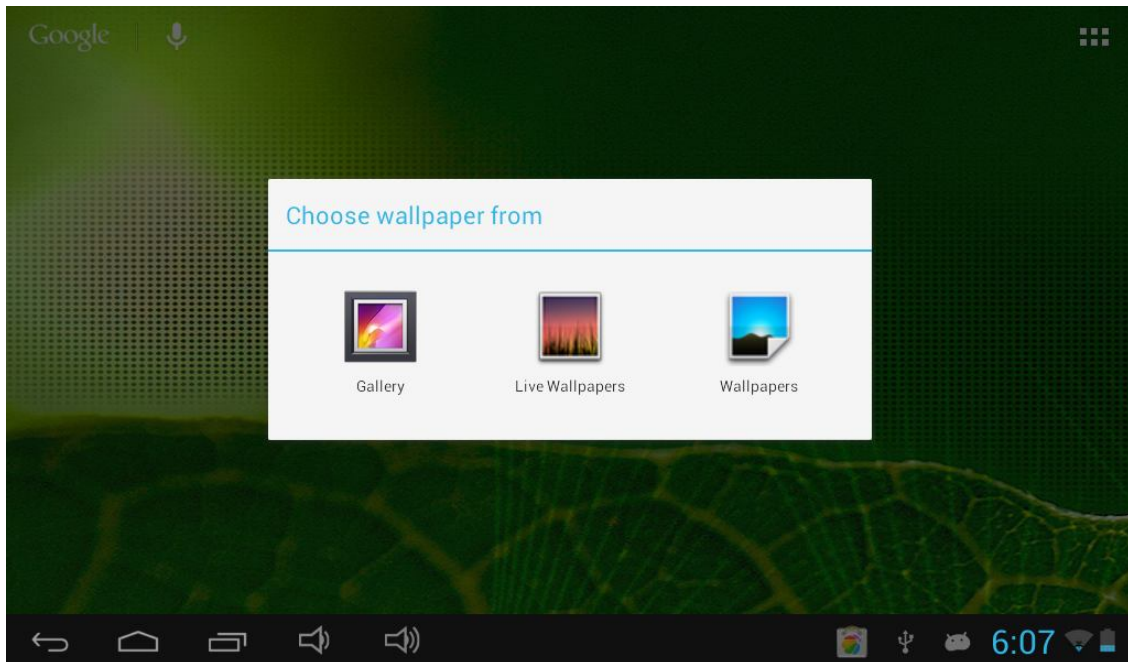

## 14. External device:

### 14.1. USB connection

 Using USB to connect the MID and PC, the default connection mode is a synchronous interface, when it connect to the device, it will come out a note,  
Touch "USB connected" and then go the interface .click the "Turn on USB storage":, and you can see the corresponding letter in the PC terminal. As shown below.

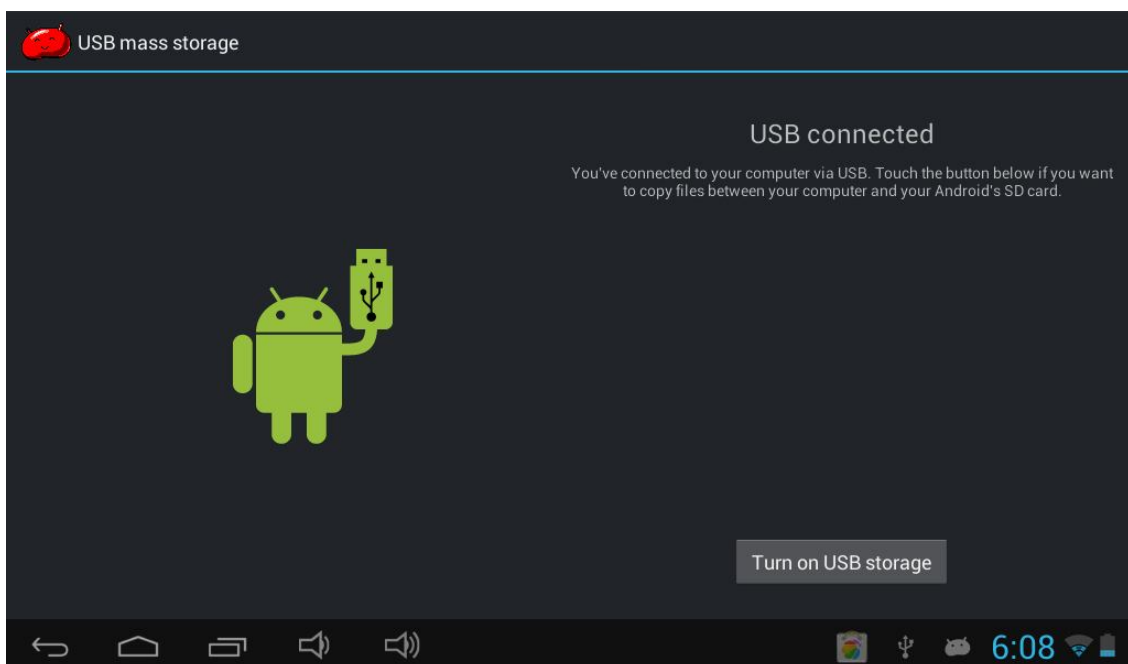


Touch the "Turn on USB storage", can see below information.



# Clip Sonic<sup>®</sup>

 TECHNOLOGY

## Instruction Manual

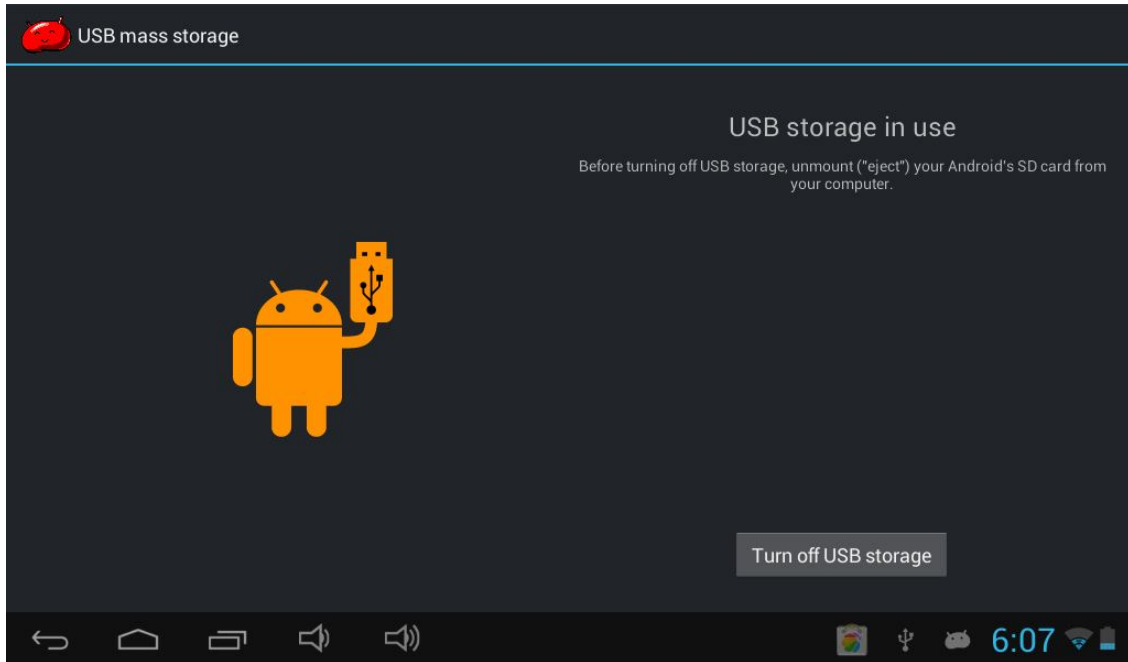

### 14.2. OTG use

Support FAT32 format mobile equipment: such as U disk, mobile hard disk.

The plug-and-play connection method:

Use the OTG wire to connect the MID USB OTG and the external equipment.

You can also go into the "Explorer" icon to fine the USB information.


### 14.3. Keyboard and mouse

Support plug and play USB mouse, keyboard device.

## 15. Network connection methods:

There are three ways to connect to the network: WIFI network, Ethernet network, External 3G network.

 
### 15.1. WIFI network

 
First need go to the "setting" interface to fine the WIFI album, touch the  bar to turn on the wifi, it will scan the wifi network around your place. Touch the wifi module to connect to wifi network, as shown below:

# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual

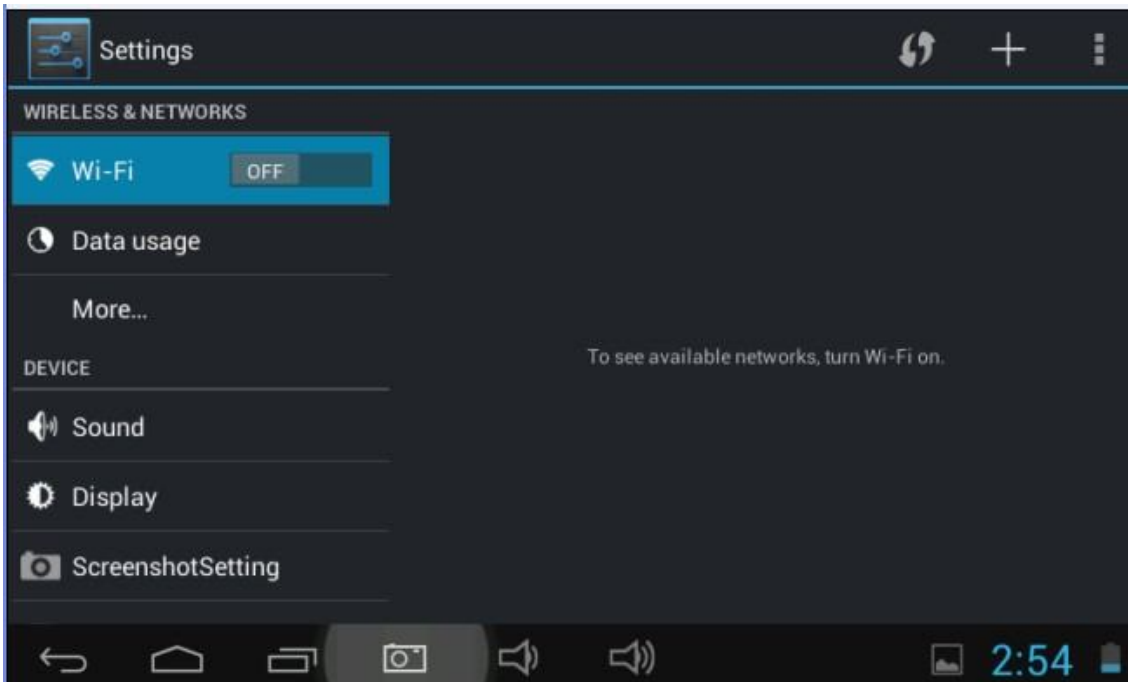

After the wifi network is connected successfully, it will have an  icon under the lower-right corner.

### 15.2.Ethernet network.

First you need a converter to connect the reticle. And then you can connect to internet.

### 15.3.External 3G network

use OTG cable to connect external equipment. It will have a 3G signal under the lower- right corner.

## 16.Treatment for common problems:

1: What is an Android?

Answer: Android is an operating system name that Google announced on November 5, 2007 that based on the open source operating system of Linux platform.

2: What is a APK?

Answer: APK is Android Package acronym, Android installation package.

3: How to get APK?

Answer: can download and install it by PC terminal online, you can also download and install it by "Android market" online too.

4: What is the version of machine operating system?

Answer: This machine adopts Android4.0, 3D built-in hardware acceleration, can run on most Android applications.

5: Can the machine be charged by USB?

Answer: Yes it is. Recommend the use of the accessories DC. 9V adapter to charge.

The picture is for reference only, product appearance, function, referring to the actual product, the product rule and design are subject to change without notice.

# Clip Sonic<sup>®</sup>

TECHNOLOGY

## Instruction Manual



Correct Disposal of this product  
(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



**CLIP SONIC**  
BP 61071  
67452 Mundolsheim

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice

3: Comment obtenir l'APK ?

Réponse: téléchargement et installation par le PC en ligne. Téléchargement et installation également possibles par le "marché Android" en ligne.

4: Quelle est la version du système d'exploitation de l'appareil ?

Réponse: Cet appareil s'exécute sur Android 4.1, accélération matérielle intégrée 3D, et sur la plupart des applications Android.

 
5: L'appareil peut-il être chargé par USB ?

Réponse: Oui. Utilisation des accessoires DC recommandée. Adaptateur de charge 9V .

Les images sont fournies à titre de référence uniquement, l'apparence de l'appareil, les fonctions, les

renvois à l'appareil actuel, le design et les spécifications du produit sont soumis à des modifications sans

préavis.



Correct Disposal of this product

(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household

wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate

this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office,

for details of where and how they can take this item for environmentally safe recycling.



**CLIP SONIC**

BP 61071

67452 Mundolsheim

- Photo non contractuelle
- Soucieux de la qualité de ses produits le constructeur se réserve le droit d'effectuer des modifications sans préavis




#### 14.3. Clavier et souris

 
Prise en charge de la souris USB plug and play et du clavier.


### 15. Méthodes de connexion au réseau :

Il existe trois moyens de vous raccorder au réseau : réseau WIFI, réseau Ethernet, réseau externe3G si votre tablette est équipée de cette fonction (en option) .

#### 15.1.WIFI

Accédez à l'interface "Settings" pour trouver la fonction WIFI, puis touchez, la barre  pour activer le wifi, le système balaye et recherche le réseau wifi. Touchez le module wifi pour vous raccorder au réseau, comme montré ci-dessous:

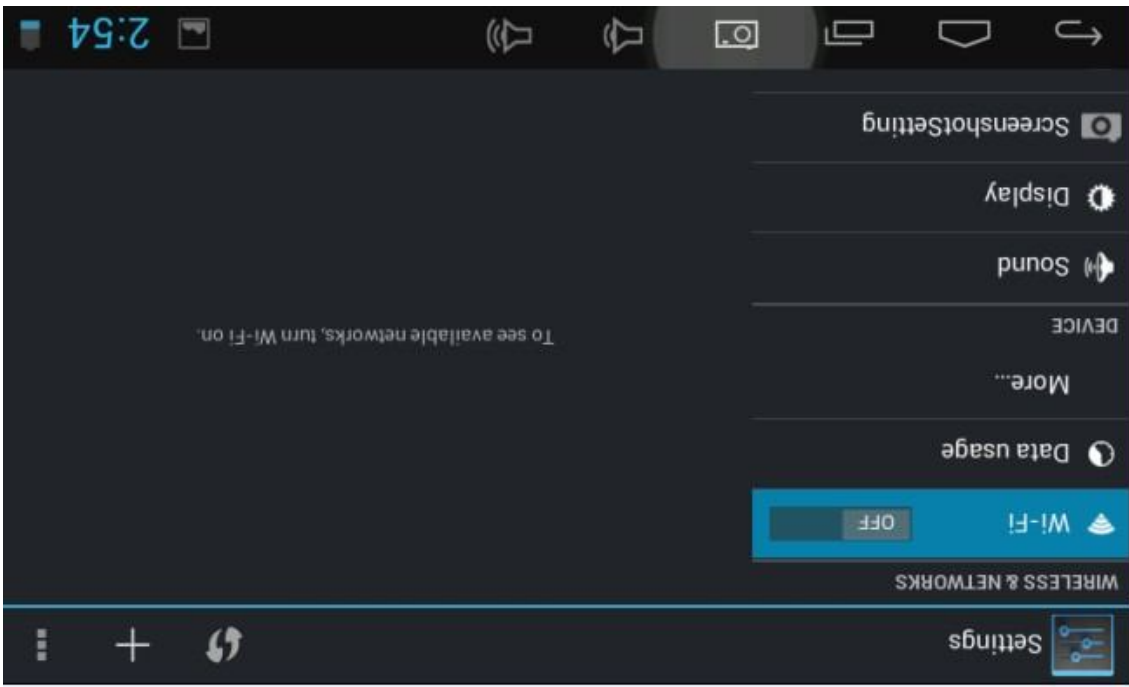

Une fois le réseau wifi correctement connecté, l'icône  apparaît dans l'angle inférieur droit.

#### 15.2. Réseau Ethernet

Vous devez utiliser un convertisseur pour raccorder la tablette. Puis vous pouvez vous connecter à Internet.

#### 15.3. Réseau externe 3G

Utilisez le câble OTG pour raccorder un équipement externe. L'écran affiche un signal 3G dans l'angle inférieur droit.

 
### 16. Traitement des problèmes courants :

1: Qu'est-ce qu'Android ?


Réponse: Android est un nom de système d'exploitation annoncé par Google le 5 novembre 2007 et basé sur le système d'exploitation en open source de la plateforme Linux.

2: Qu'est-ce que APK ?

Réponse: APK est l'acronyme pour Android Package, package d'installation Android.

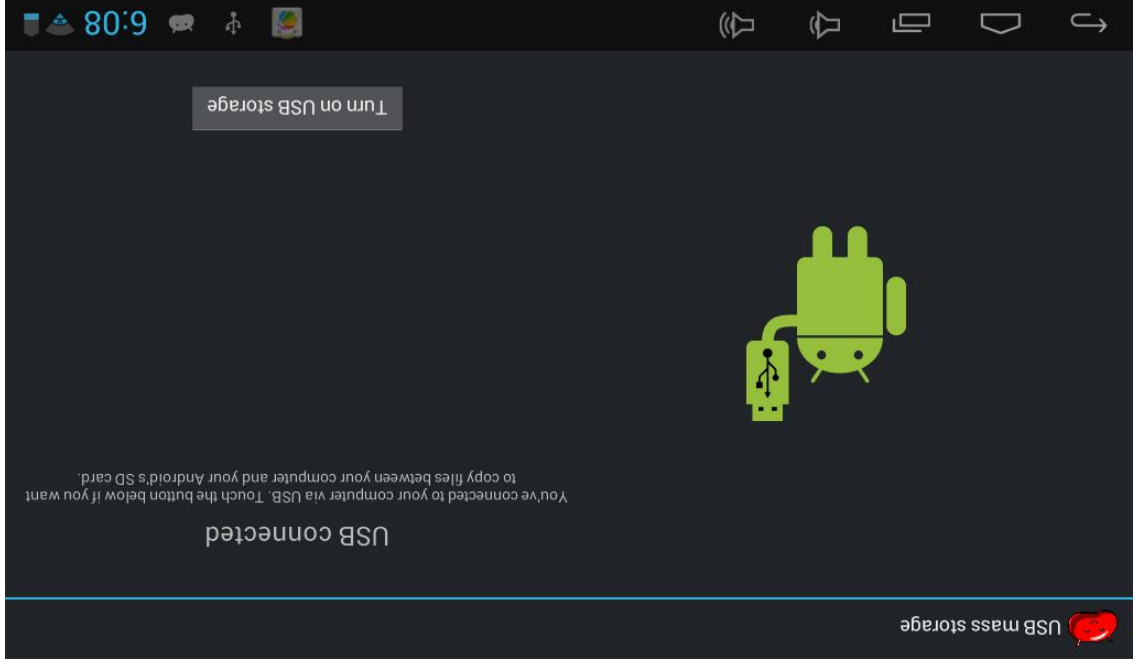

 Touchez l'élément "Turn on USB storage" pour voir les informations suivantes.

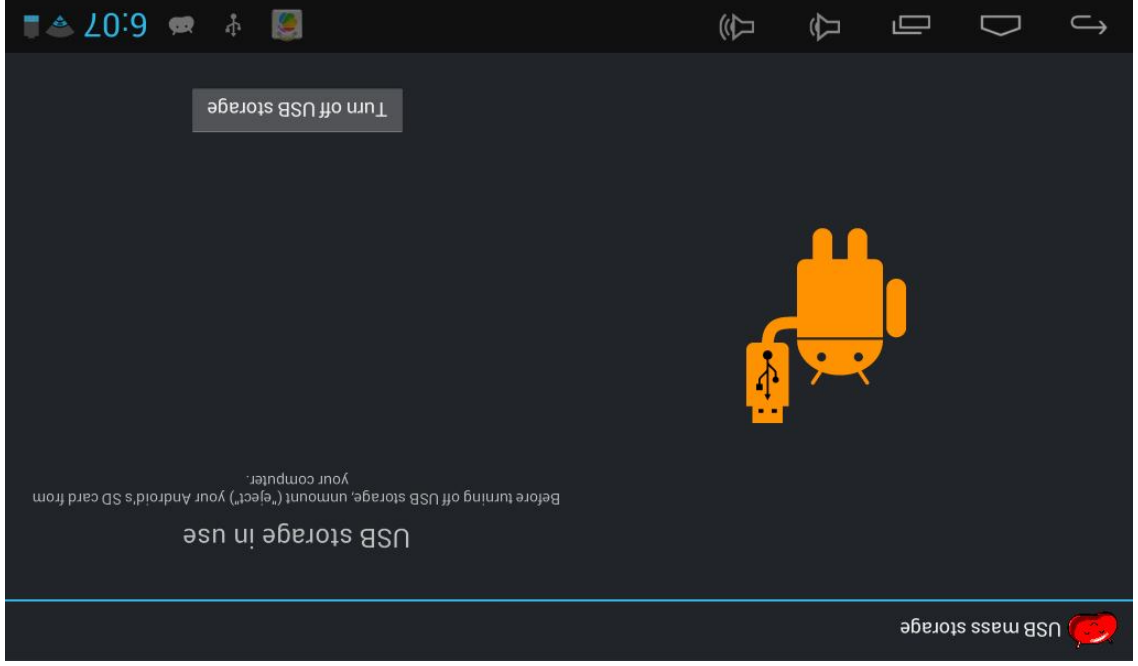


## 14.2. Utilisation OTG

Prise en chargement des équipements mobiles au format FAT32, comme par exemple un disque dur.  
Mode de connexion "Plug-and-Play":  
Utilisez le câble OTG pour raccorder l'OTG USB MID à l'équipement externe.  
Vous pouvez aussi cliquer sur l'icône "Explorer" pour trouver les informations USB.

Cliquez sur le papier peint, puis en haut à droite sur le terme "CROP", l'image que vous avez choisie deviendra le papier peint.  
Les options suivantes sont disponibles :  
Sélectionnez "Wallpaper": personnalisant une image comme papier peint.  
Sélectionnez "Live wallpaper": utilisation des papiers peints en 3D fournis par le système.  
Remarque: appuyez de manière prolongée l'interface principale pour faire apparaître l'interface papier peint.

### 13.3. Papier peint à partir du menu principale

 Sur l'interface mère, touchez longuement l'écran pour faire apparaître ce qui suit :

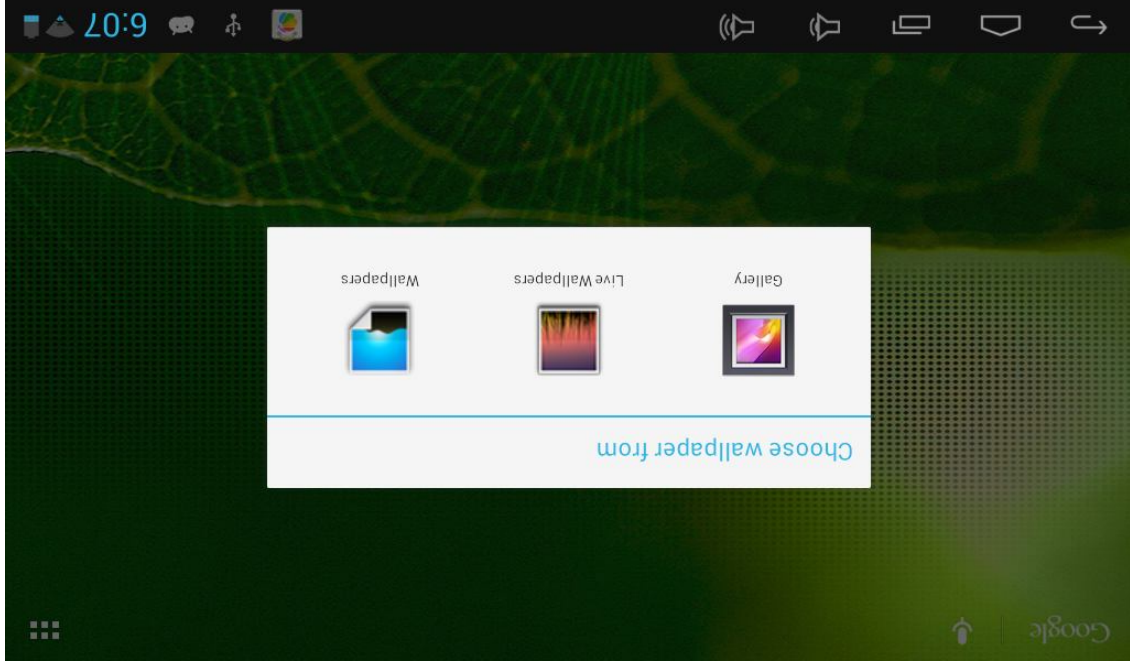

## 14. Périphérique externe :

### 14.1. Connexion USB


Utilisez la connexion USB pour connecter la tablette et le PC, le mode de connexion par défaut est une connexion synchrone comme la suivante.  
Touchez "USB connected" puis accédez à l'interface. Cliquez sur "Turn on USB storage" (Activer mémoire USB), vous voyez la lettre correspondante sur le PC, comme ci-dessous.



 
Choisissez le papier peint pour aller à l'interface suivante et le définir comme votre papier peint.

### 13.2. Définition du papier peint à partir de l'icône "Gallery"


Allez dans l'interface Gallery pour trouver l'image que vous voulez installer comme papier peint.

Touchez l'interface de l'image et plusieurs icônes s'afficheront dans l'angle supérieur droit. Cliquez en haut à droite sur l'icône "up-right icon"  pour choisir l'album "set picture as" pour définir le papier peint. L'interface suivant apparaît comme ci-dessous:



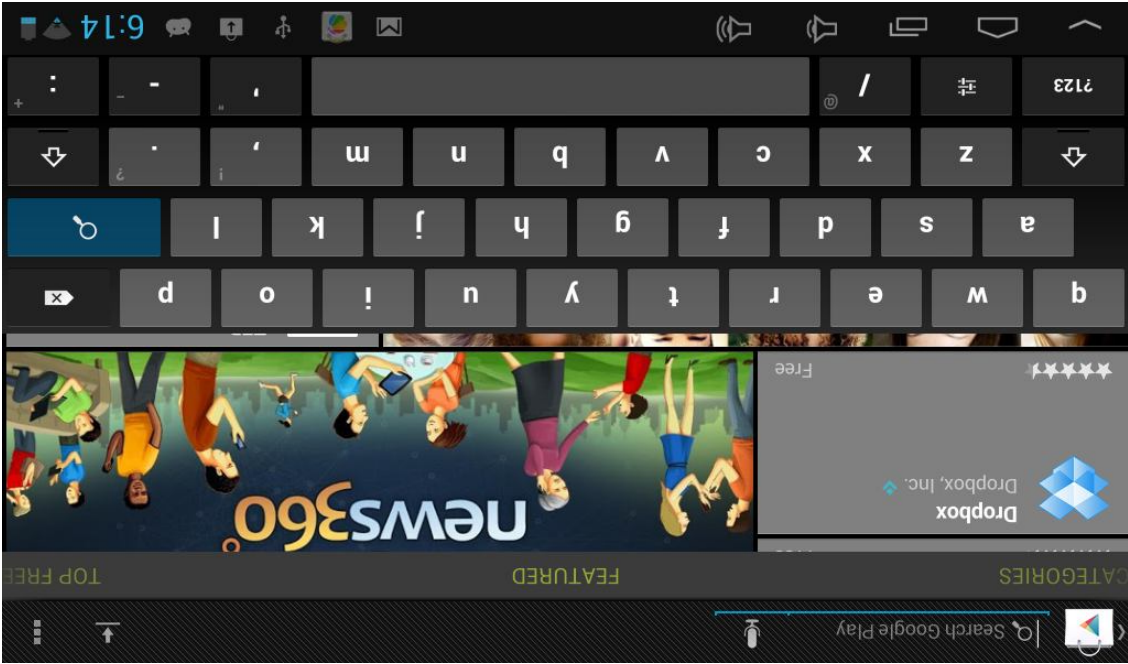

 Cliquez pour télécharger et installer le logiciel (image ci-dessus) dans l'application comme sur l'image suivante:

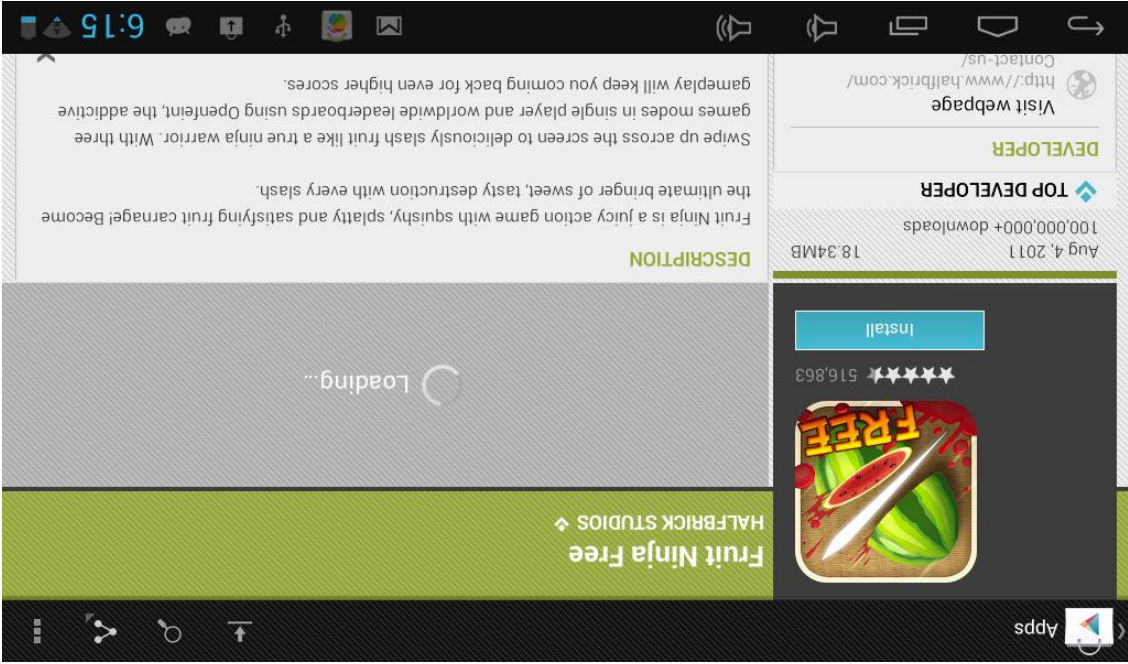


### 13. Papiers peints :

Le système prend en charger les papiers peints statiques et les papiers peints en 3D.


#### 13.1. Papier peint à partir de l'icône Settings

 Dans l'interface "Settings", cherchez l'icône "display", puis sélectionner "Papier peint" (Wallpaper) comme ci-dessous




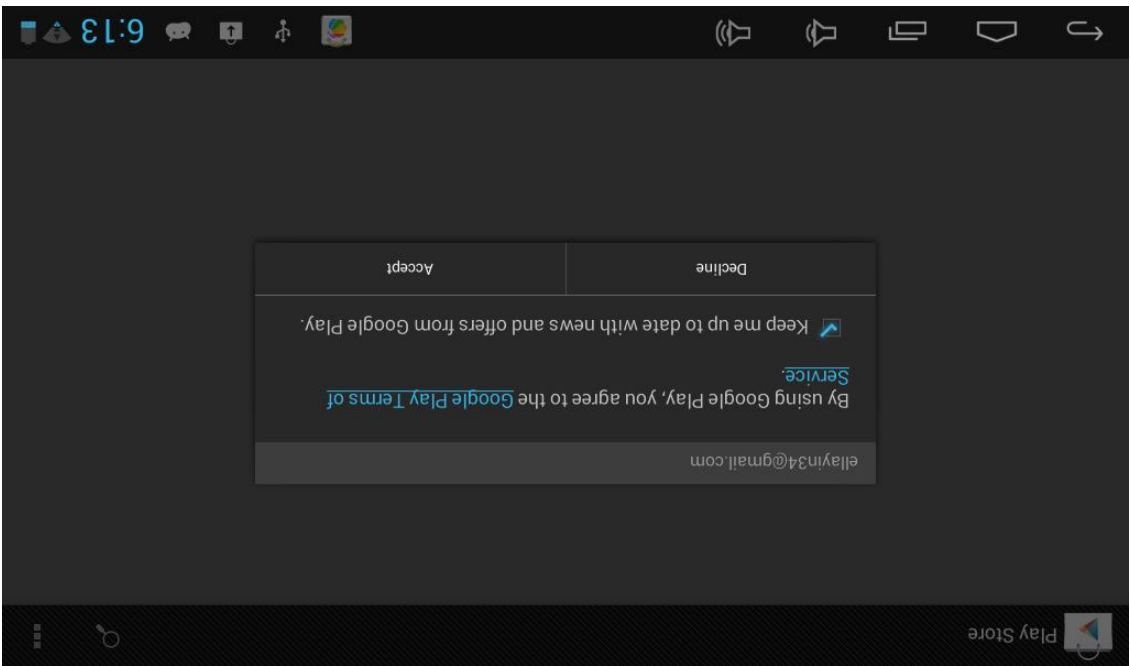

 Définissez le code du compte montré ci-dessus. L'écran suivant apparaît une fois la configuration terminée:

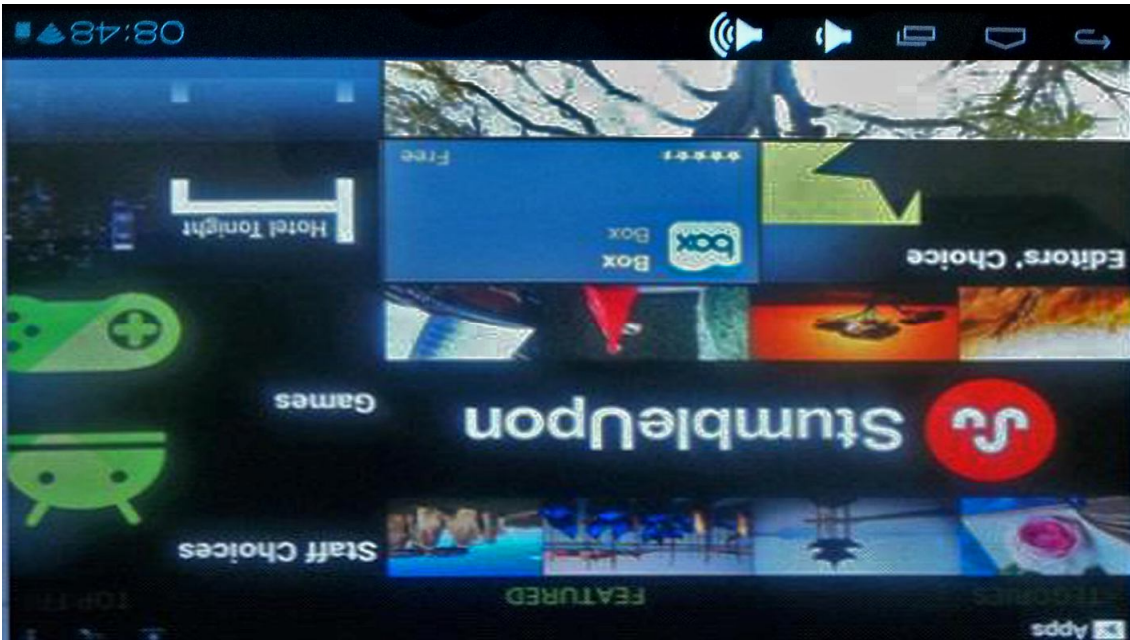

 
Cliquez sur "search" (rechercher) pour trouver le logiciel que vous voulez installer.  
L'écran suivant apparaît :

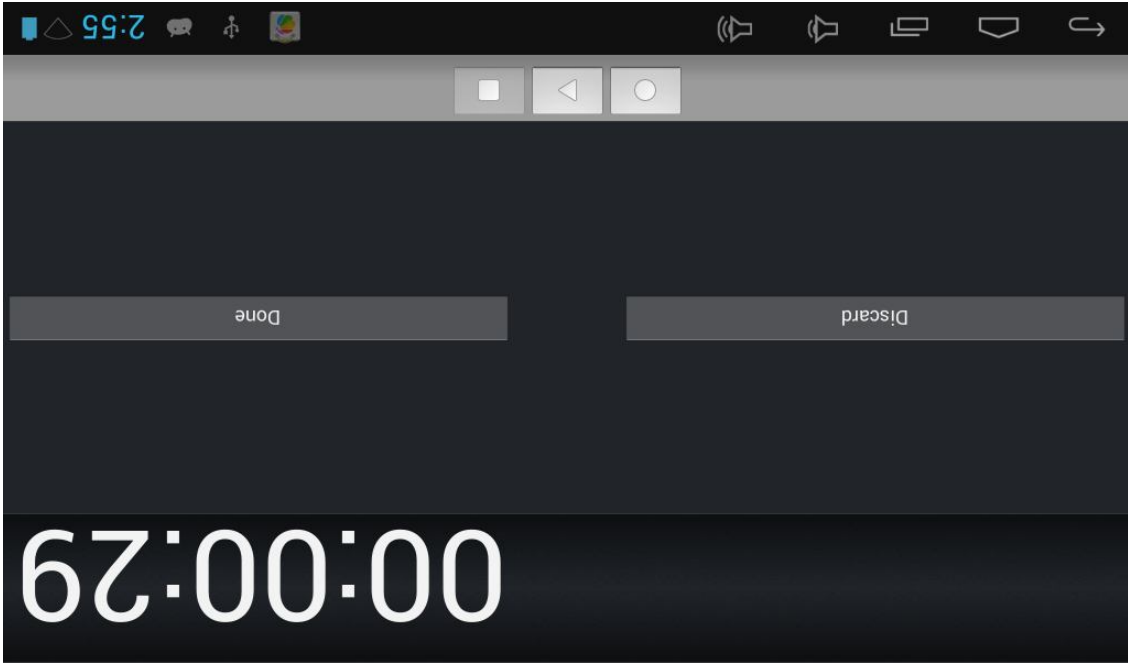

Vous trouverez les fichiers enregistrés dans "Internal Memory" dans l'icône "Explorer".

## 12.9. Android Market (Play Store)

 Cliquez sur l'icône "Market" dans le menu principal et accédez à l'interface principale, comme montré ci-dessous :

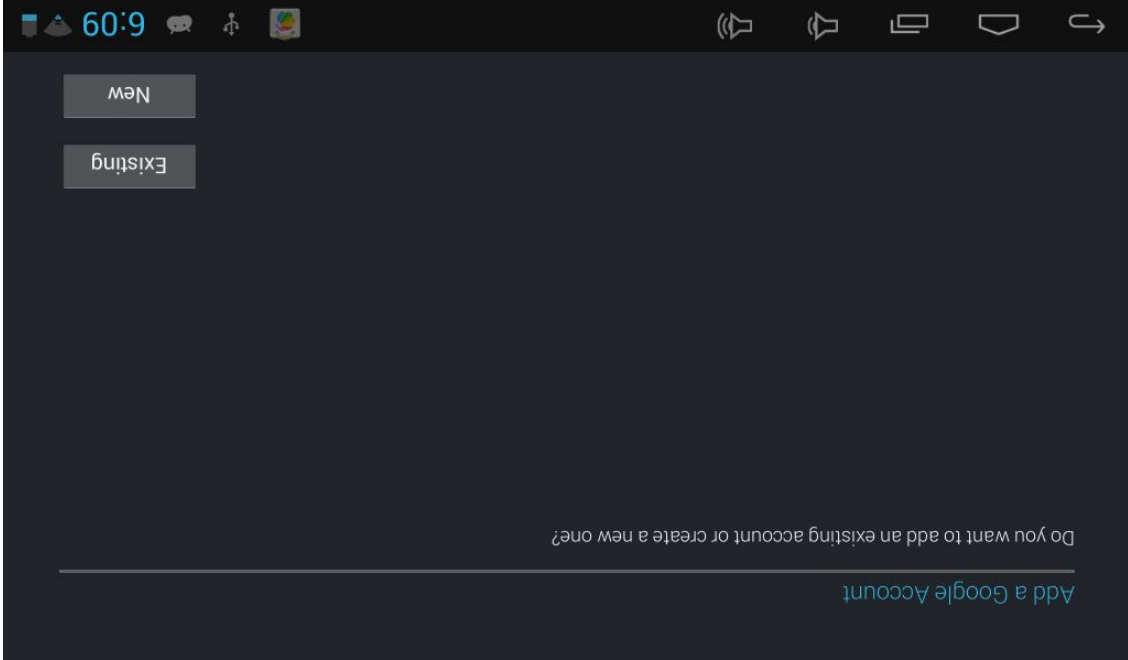

Remarque: après la première utilisation, utilisez l'icône "Market" qui portera un autre nom "Play Store".


Sélectionnez "Sign in" pour vous connecter à votre compte gmail.



Si vous n'avez pas de compte Gmail, vous devez en créer un puis cliquez sur "Get a gmail account (créer un compte Gmail)".


Saisissez l'adresse email et le mot de passe, cliquez sur "Sign in". L'écran suivant apparaît


## 12.8. Enregistrement

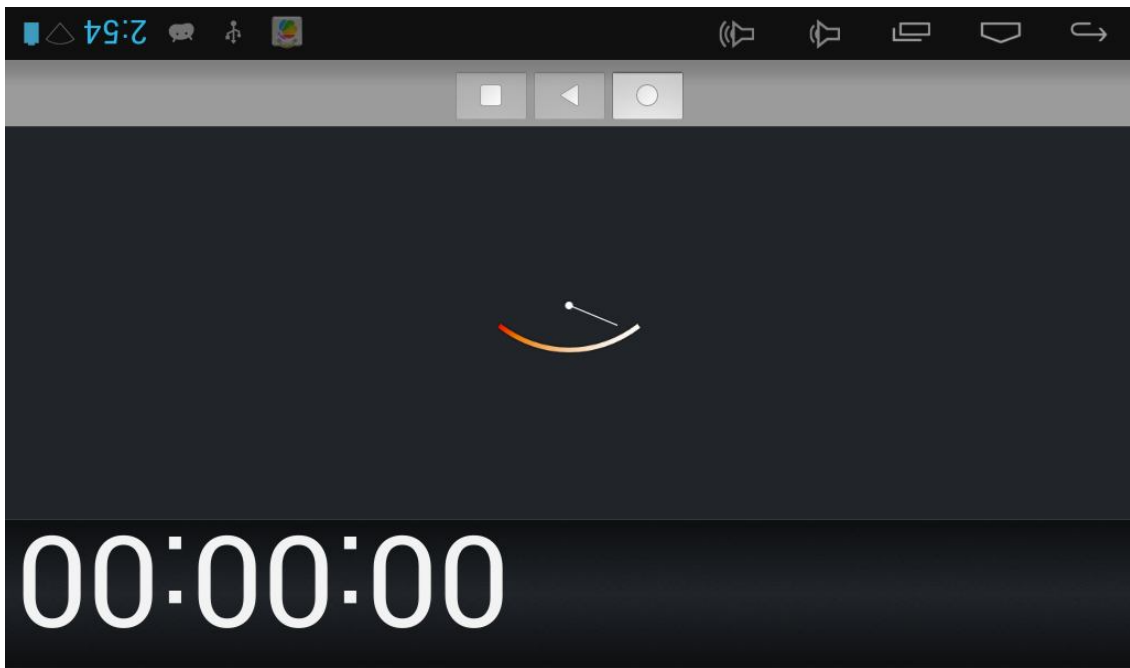 Cliquez sur l'icône "Sound Recorder" dans le menu principal et accédez à l'interface principale de l'enregistreur comme montré ci-dessous :



  Cliquez sur  pour démarrer l'enregistrement, cliquez sur  pour terminer l'enregistrement, comme montré ci-dessous :

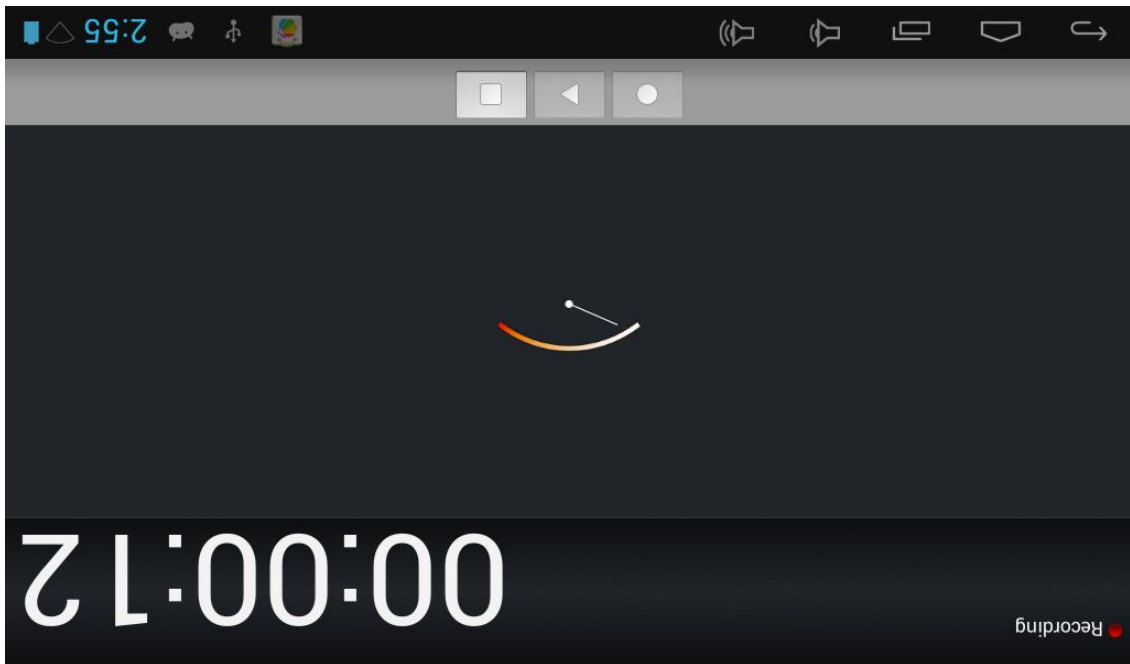

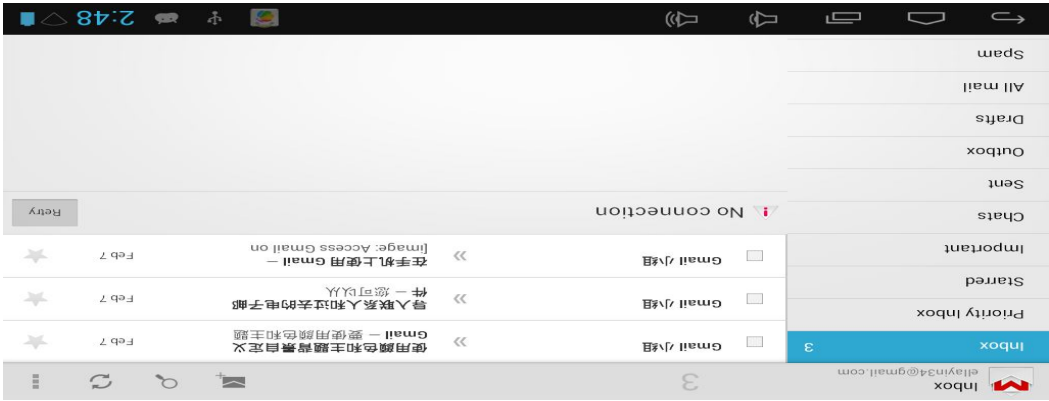


: écrire et envoyer un email.

: recherche l'email ou l'adresse que vous voulez utiliser.

: actualiser l'email pour vérifier si un nouveau courrier est arrivé.



## 12.7. Lecteur de musique :

 Cliquez sur l'icône "Music" dans le menu principal et accédez à l'interface du lecteur de musique. Le système de liste par défaut dans la zone des données de l'utilisateur pour tous les fichiers audio se présente comme suit :

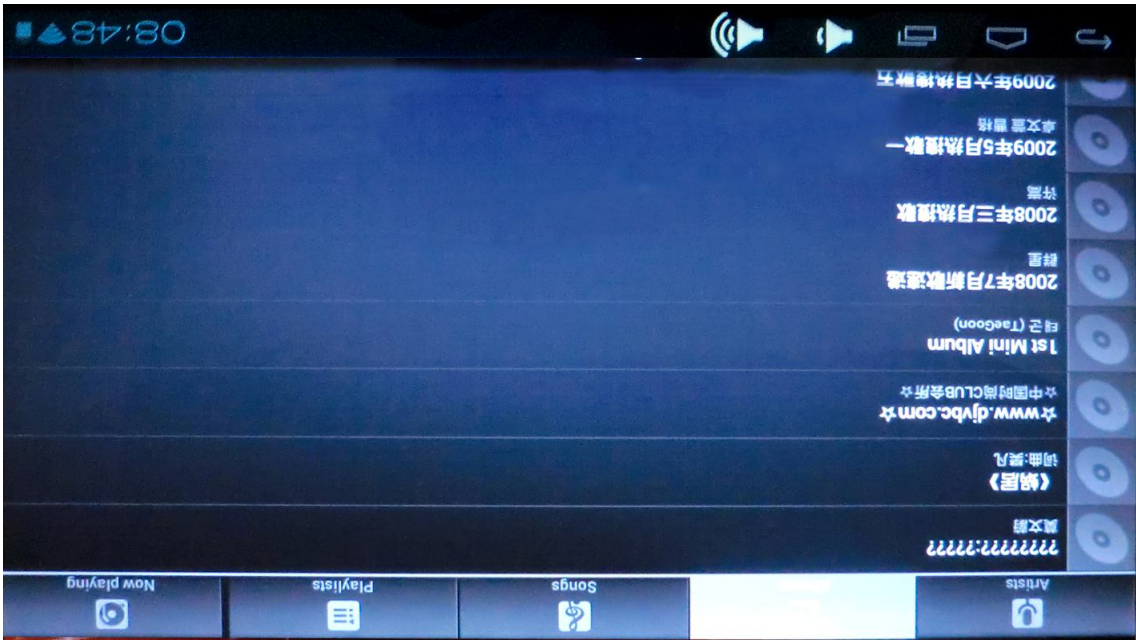

  Vous pouvez utiliser une clé USB ou une carte SD pour écouter des fichiers audio ou naviguer sur le réseau et télécharger des fichiers audio afin de les écouter.  
Sélectionnez l'étiquette correspondante, vérifiez l'interface et ses éléments "Artists", "Album" et "Songs" etc. pour écouter le morceau, comme montré ci-dessous:




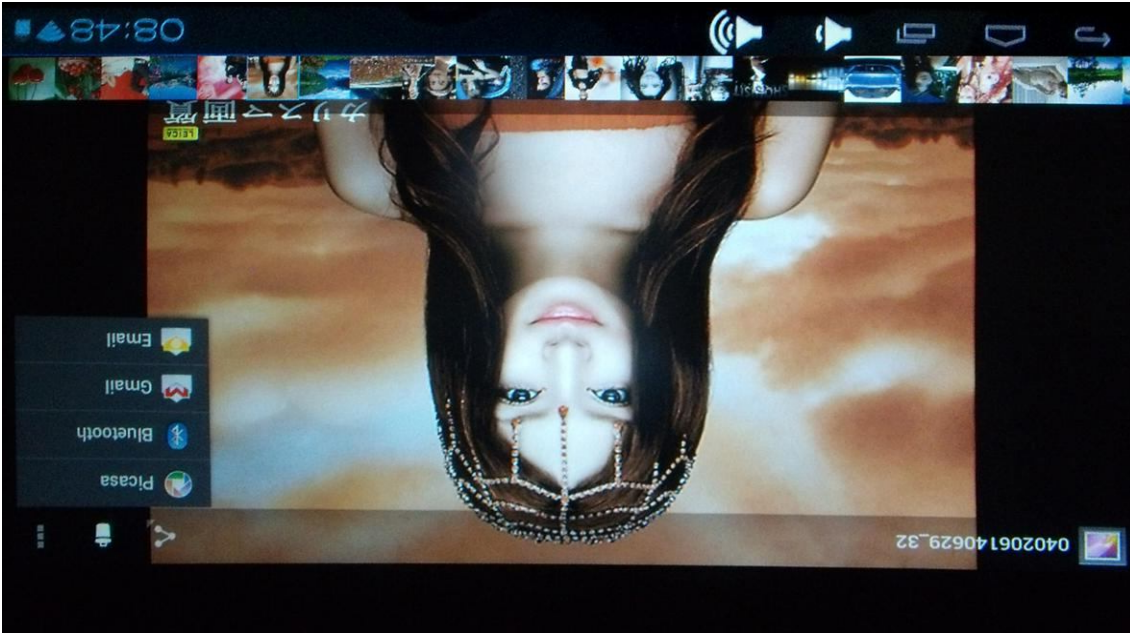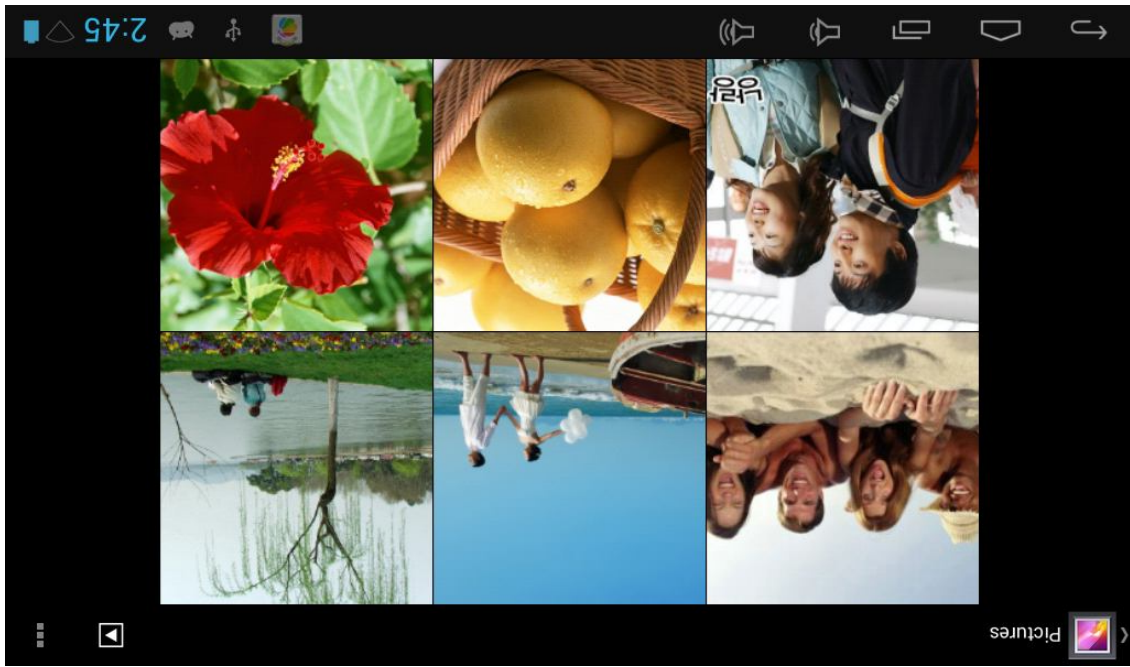

## 12.6.Gmail:

 Grâce à cette icône, vous pouvez vous connecter à votre compte, comme montré ci-dessous:



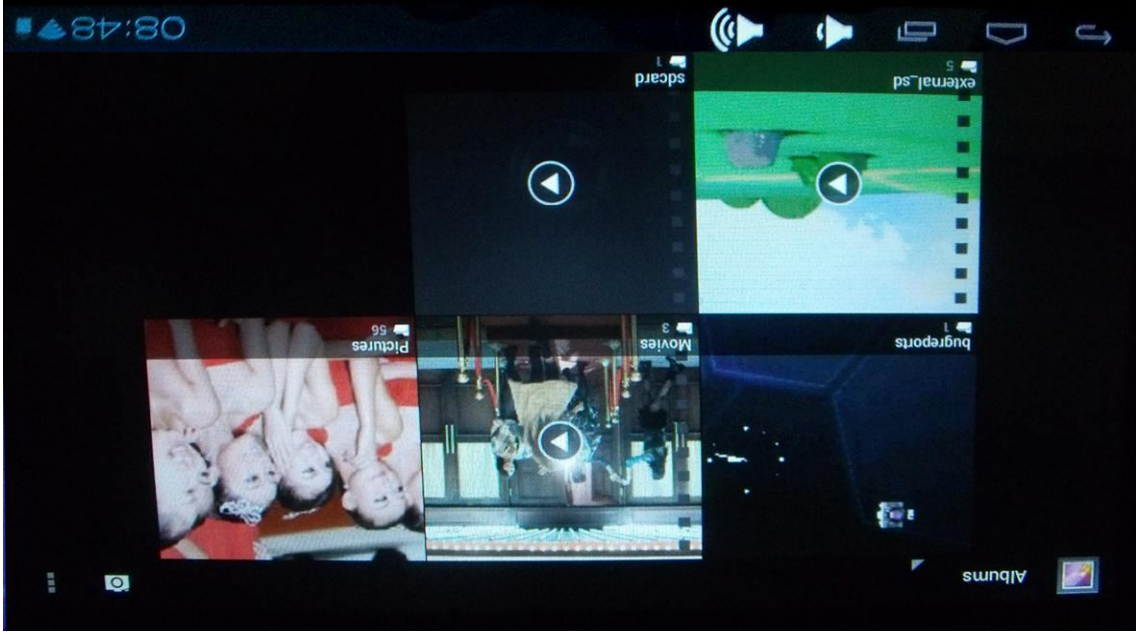


Sélectionnez le fichier vidéo et entrez dans l'interface de lecture vidéo, sélectionnez "Play" (lire), "Stop" (stop), "fast forward" (avance rapide), "rewind" (rembobiner), "progress" (progression) ou d'autres boutons de commande pour contrôler le programme de diffusion, comme montré ci-dessous.




Sélectionnez l'image puis entrez dans l'interface de l'image pour accéder à la configuration de l'image telle que "slide show" (diaporama), "edit" (éditer), comme montré ci-dessous :

 Dans la colonne "Name", saisissez le nom que vous voulez afficher dans la liste de mail a l'apparence suivante : e message sortant puis cliquez sur "Next" pour entrer dans l'interface mail. Chargement automatique du mail, la liste de mail a l'apparence suivante :

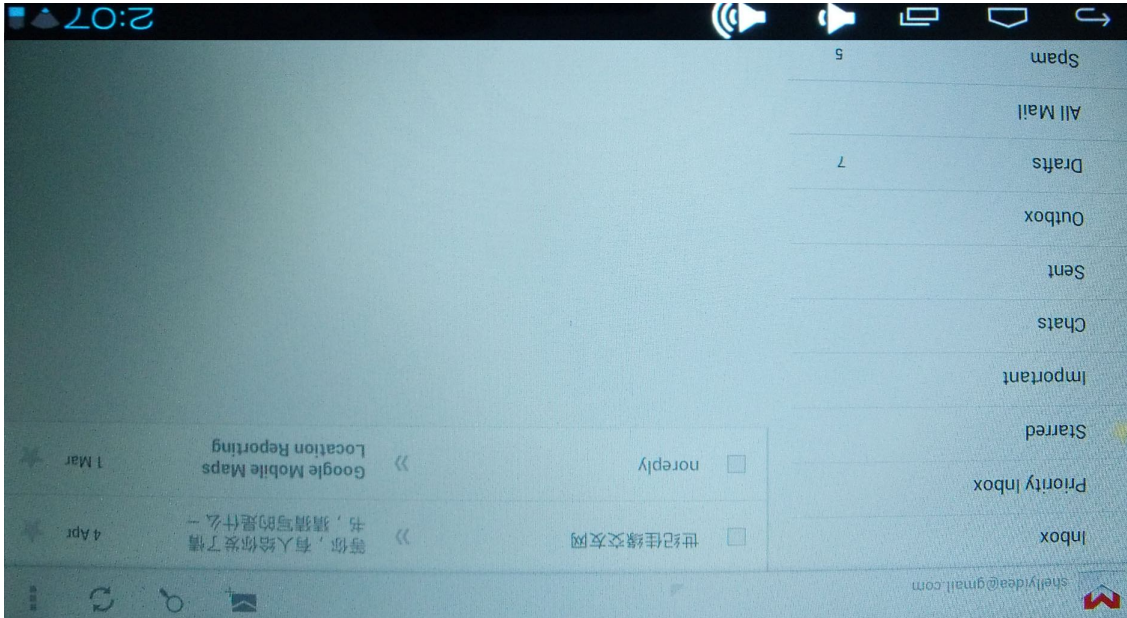

#### 12.4.Explorer:

 Cliquez sur l'icône "Explorer" dans le menu principal pour voir toutes les fichiers ou les informations sur les périphériques externes ou la mémoire interne, comme montré ci-dessous :

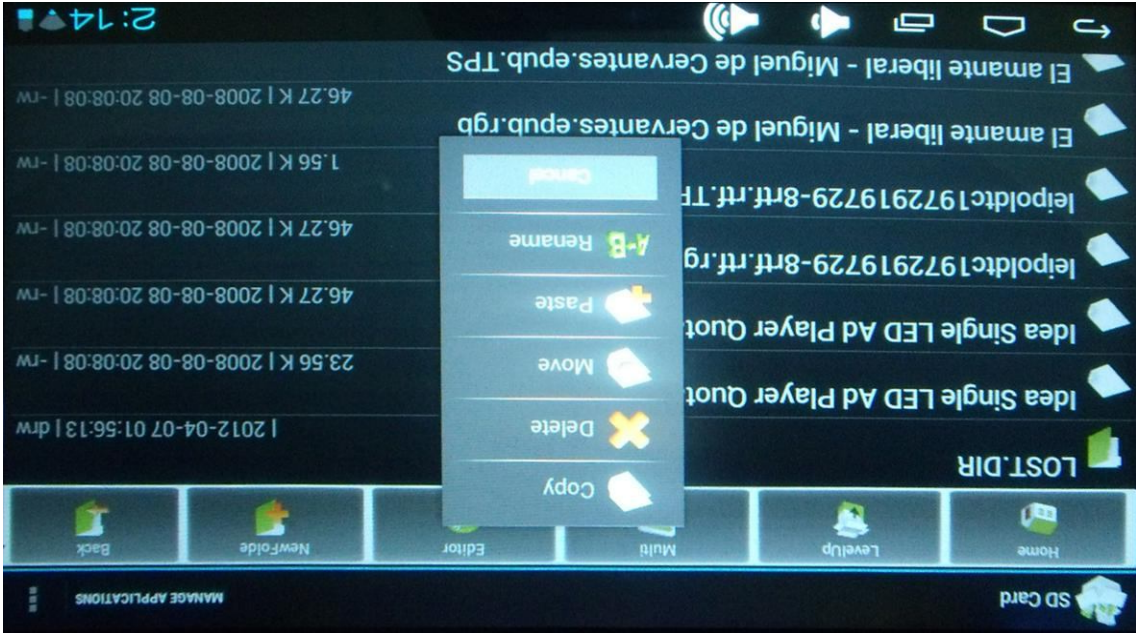

Note: vous pouvez éditer les fichiers que vous voulez à partir de cette interface, par exemple: supprimer, déplacer, coller, renommer, annuler etc.

#### 12.5. Galerie:

Cliquez sur l'icône "Gallery" dans le menu principal pour accéder à l'interface suivante qui répertorie tous les fichiers vidéo et images. Comme montré ci-dessous :



ici, nous utiliserons le type de compte POP3. Les paramètres de service entrant apparaissent comme suit :

Account setup

### Incoming server settings

Username	sales9@ideaworldhk.com
Password	.....
POP3 server	pop3.ideaworldhk.com
Security type	None
Port	110
Delete email from server	Never

Previous Next

En fonction des informations de chaque fournisseur d'email, déterminez les différents paramètres tels que :  
Serveur POP3: par défaut "126.com", et doit être remplacé par "pop.126.com"  
Numéro de port "110"  
Sélectionnez "Next" pour accéder aux paramètres du serveur d'acceptation d'inspection » si l'installation est correcte. Sélectionnez « Next » pour entrer dans l'interface personnalisée des informations de compte :

Account setup

Your account is set up and email is on its way!

 
Give this account a name (optional)

shellyidea@gmail.com

Your name (displayed on outgoing messages)

This field can't be blank.


Next

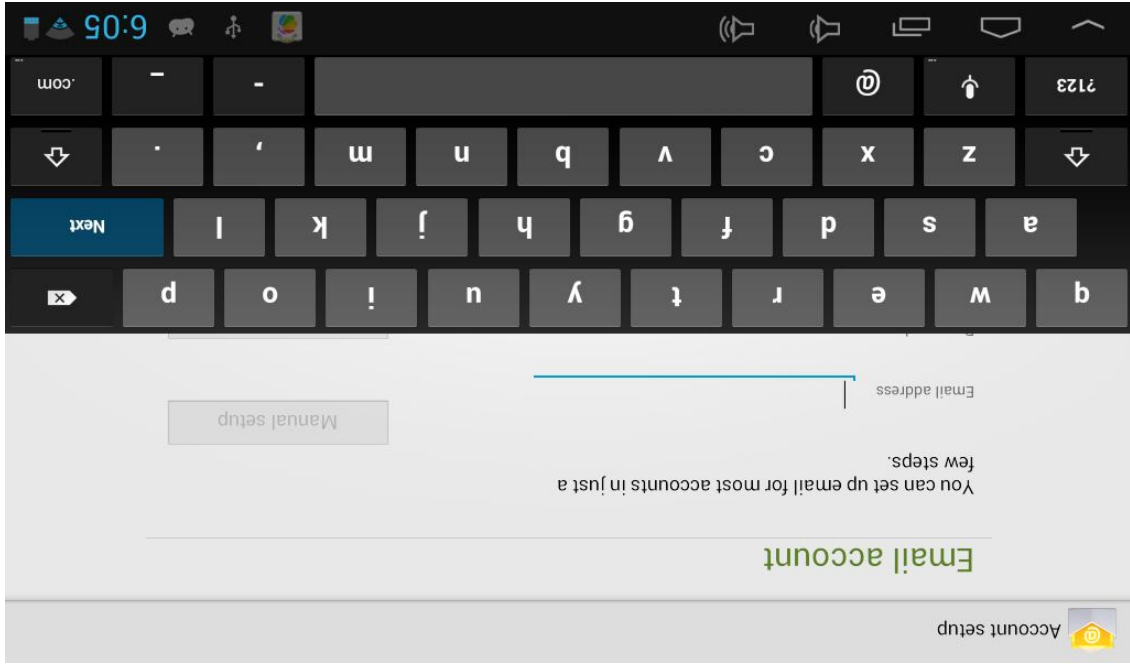



Note: avant d'utiliser le guide, assurez-vous que le réseau est actif.  
Nous utiliserons comme exemple l'email suivant shellyidea@gmail.com:


Dans la barre d'adresse email, saisissez votre email valide : [idea@gmail.com](mailto:idea@gmail.com)  
Dans le champ mot de passe, saisissez votre mot de passe valide : \* \* \* \* \*

  Vous pouvez choisir la configuration manuelle, l'interface de sélection du type de compte apparaît comme suit :

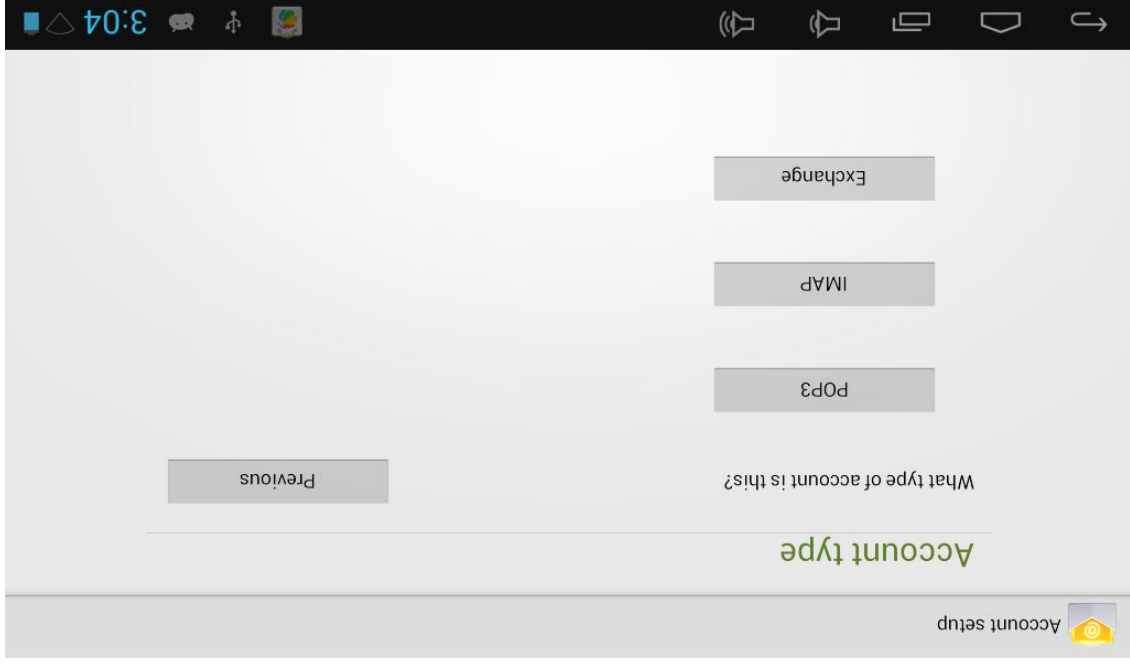

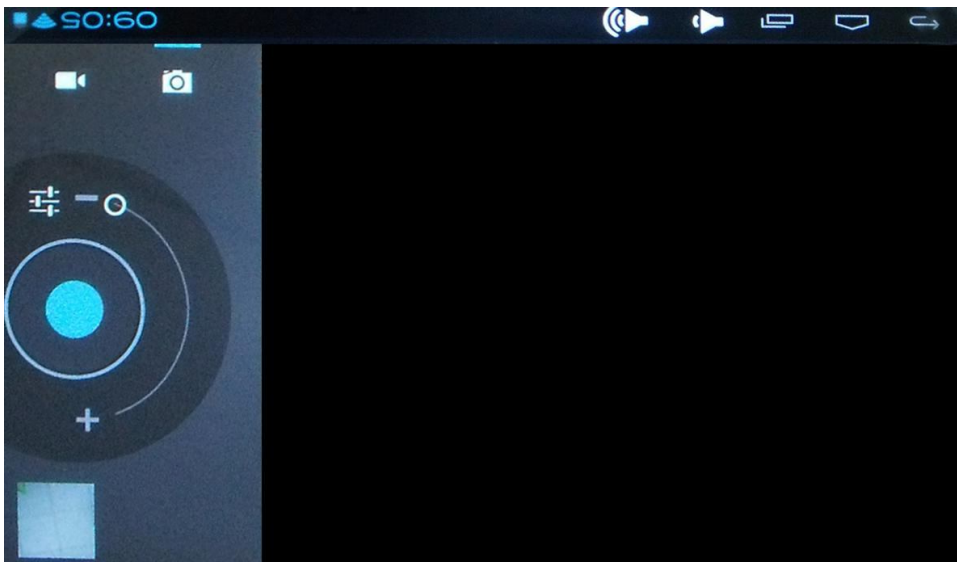

 Cliquez sur  sur l'interface pour passer à une autre interface, comme montré ci-dessous :

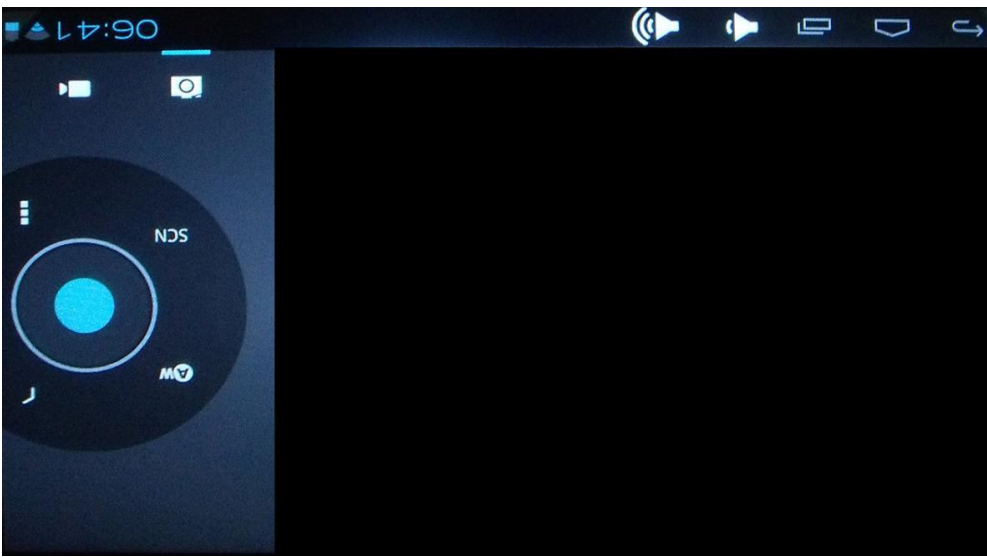

Vous pouvez cliquer sur l'icône  pour passer en mode caméra

### 12.3. E-mail:

Cliquez sur l'icône "e-mail" dans le menu principal pour saisir l'email du client. E-mail applications accompany with email settings guide, it can add the common Web email service providers (e.g. Gmail, Yahoo, Hotmail et 163 etc ) un compte email POP3 ou IMAP externe, comme montré ci-dessous :



 
## 12. Introduction au programme principal :

### 12.1 Navigateur:

Navigateur page Web :

Lorsque le réseau est connecté, ouvrez le Navigateur et saisissez l'URL pour naviguer sur une page Web, ou via la barre de recherche du bureau principal pour entrer sur le site et ouvrir la page Web.

L'angle supérieur droit comprend une icône que vous devez toucher pour paramétrer la page Web, comme montré ci-dessous :

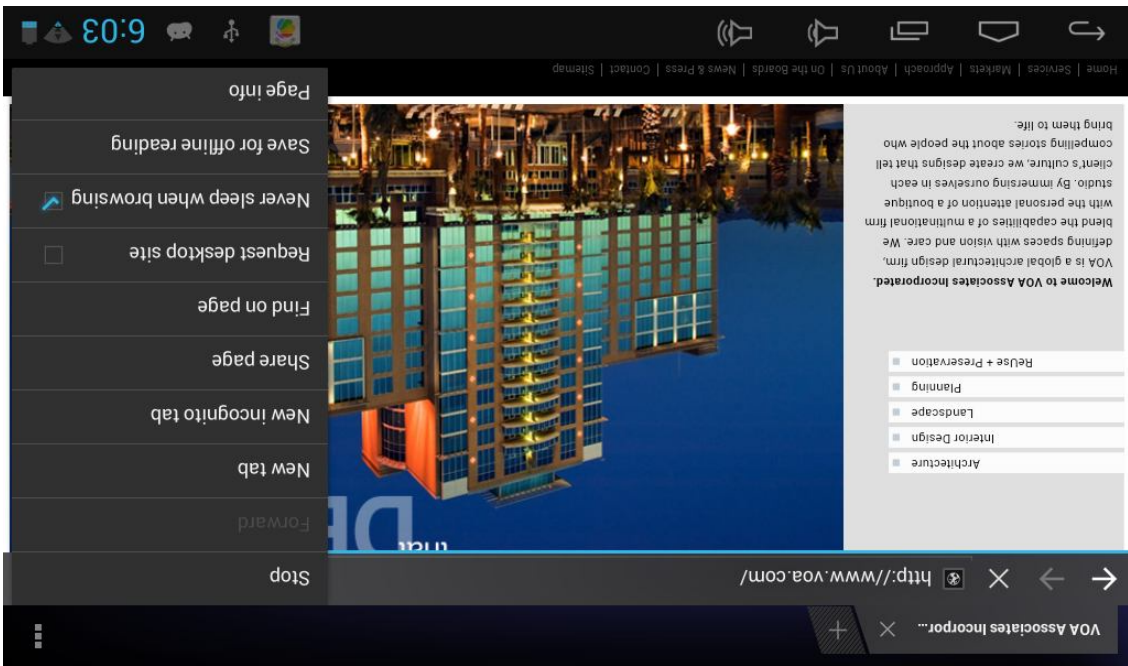

Vidéo en ligne :

Vous pouvez vous rendre sur "Android market" ou choisir un autre moyen de télécharger un logiciel de lecture vidéo en ligne, une logiciel de lecture TV en ligne, une logiciel de musique en ligne, puis l'installer sur l'appareil. Une fois le logiciel installé, vous pouvez regarder une vidéo ou la télévision en ligne et écouter une radio en ligne.


Vous pouvez également télécharger un logiciel d'application en réseau tiers, y compris la navigation des pages Web, le lecteur vidéo, le client du site Web, la messagerie instantanée et d'autres logiciels

### 12.2.Caméra:

 
Cliquez sur l'icône "Camera" dans le menu principal et accédez à l'interface principale "camera"main, appuyez sur le point centrale au milieu du cercle pour prendre une photo comme montré ci-dessous:

## 11. Widgets


Vous pouvez sélectionner "widget" sur une autre page du menu principal pour afficher les applications dans les widgets, comme montré ci-dessous :

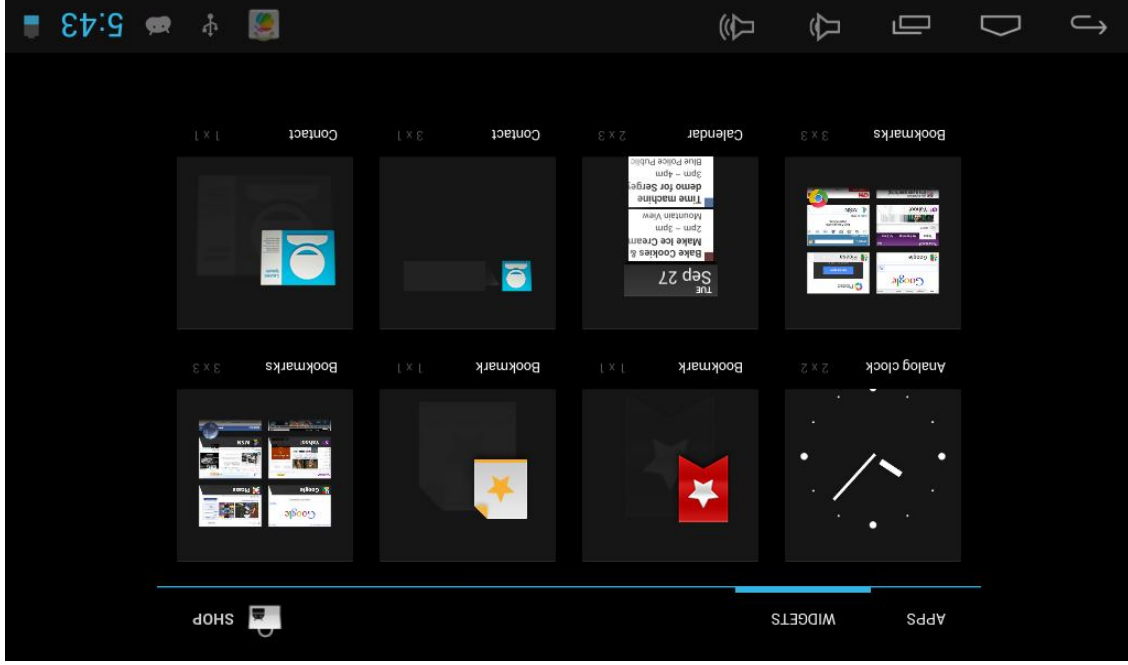

 Touchez de manière prolongée l'élément dans le widget pour le copier sur l'interface principale. Remarque : Si vous n'avez plus besoin de l'icône, touchez l'icône de manière prolongée sur l'interface principale pour la supprimer.

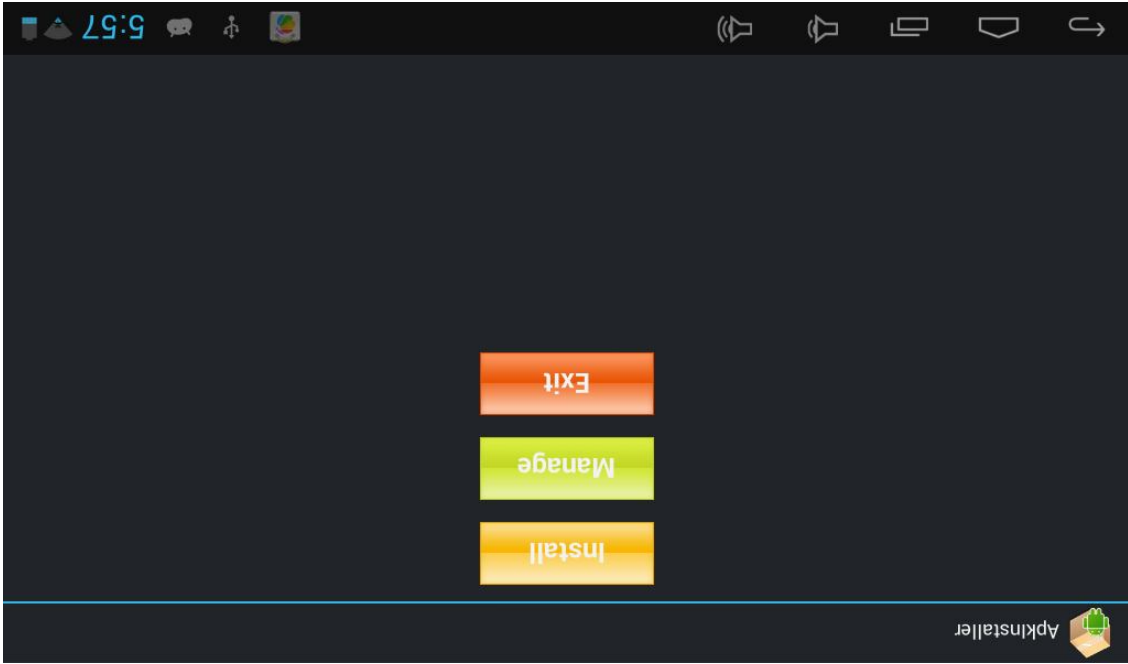

 Cliquez sur "Install" sur l'interface et choisissez le logiciel APK dans la mémoire interne ou la carte TF, comme montré ci-dessous :

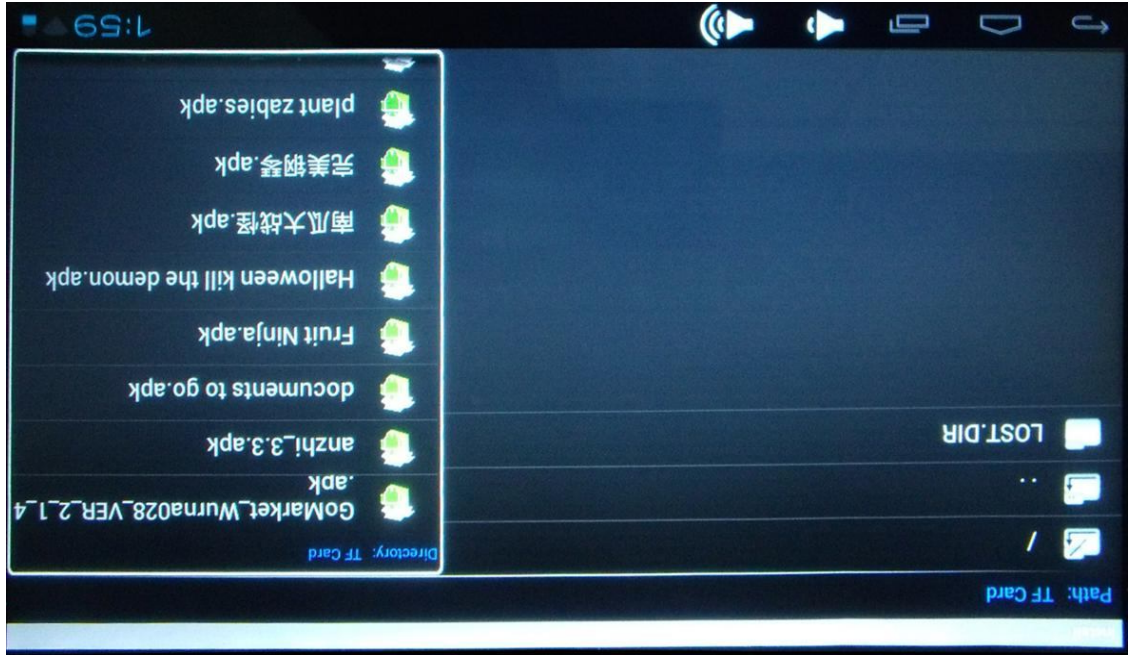



#### 10.4. Désinstallation d'une l'application

Désinstallation d'une application: vous pouvez utiliser les outils de gestion de logiciel tiers ou le logiciel de gestion de l'application Android intégrés.

Sélectionnez "Settings" / "Apps", puis sélectionnez les applications installées correspondantes pour vérifier les informations du programme, désinstaller le programme et les autres opérations, comme montré ci-dessous:



  Choisissez le logiciel que vous voulez installer, choisissez le logiciel que vous voulez installer:

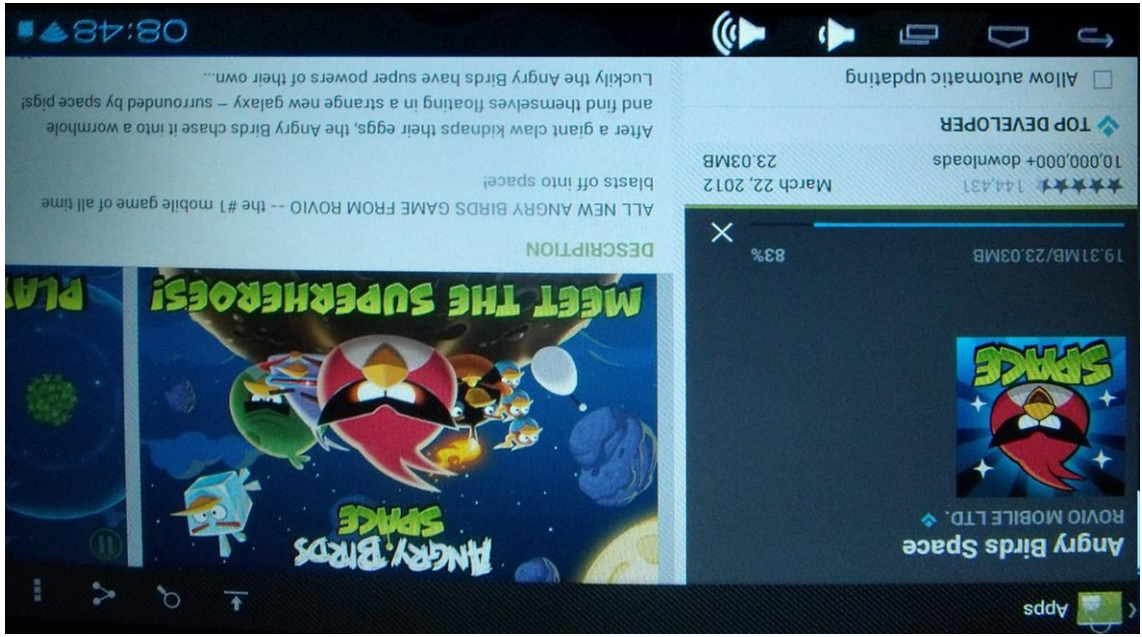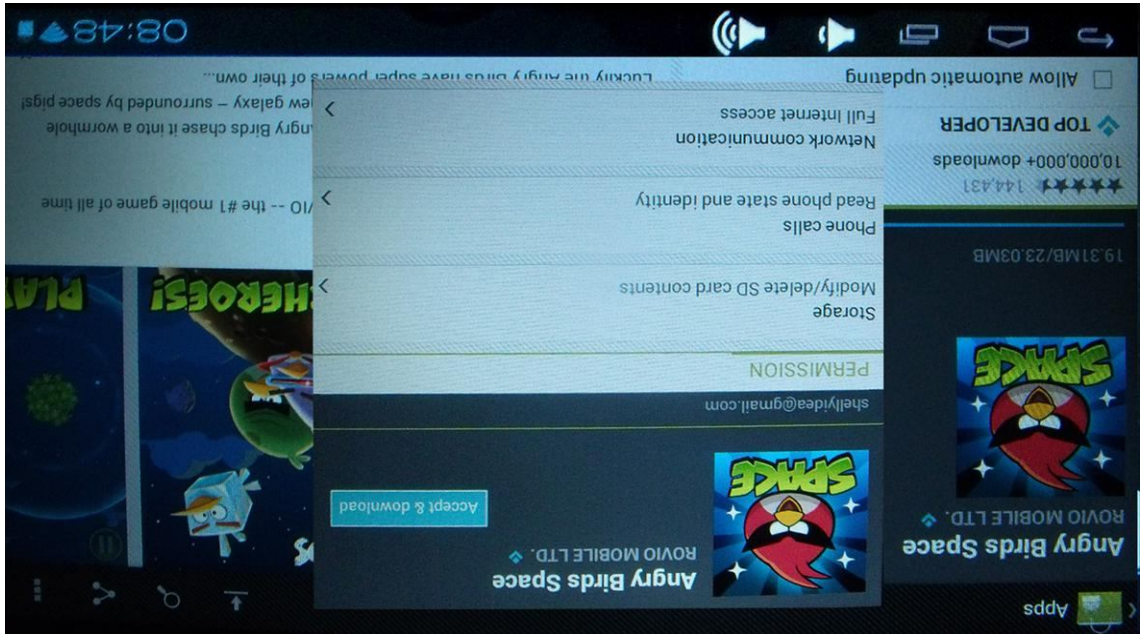


Une fois le logiciel téléchargé, il sera automatiquement installé. Une fois l'installation terminée, vous trouvez cette icône dans le menu principal.

Remarque: Après la première utilisation, utilisez l'icône "Market" qui portera un autre nom "Play Store".

### 10.3. Installation depuis l'icône "ApkInstaller"

 Cherchez et ouvrez l'icône "ApkInstaller" sur l'interface du menu, comme montré ci-dessous:

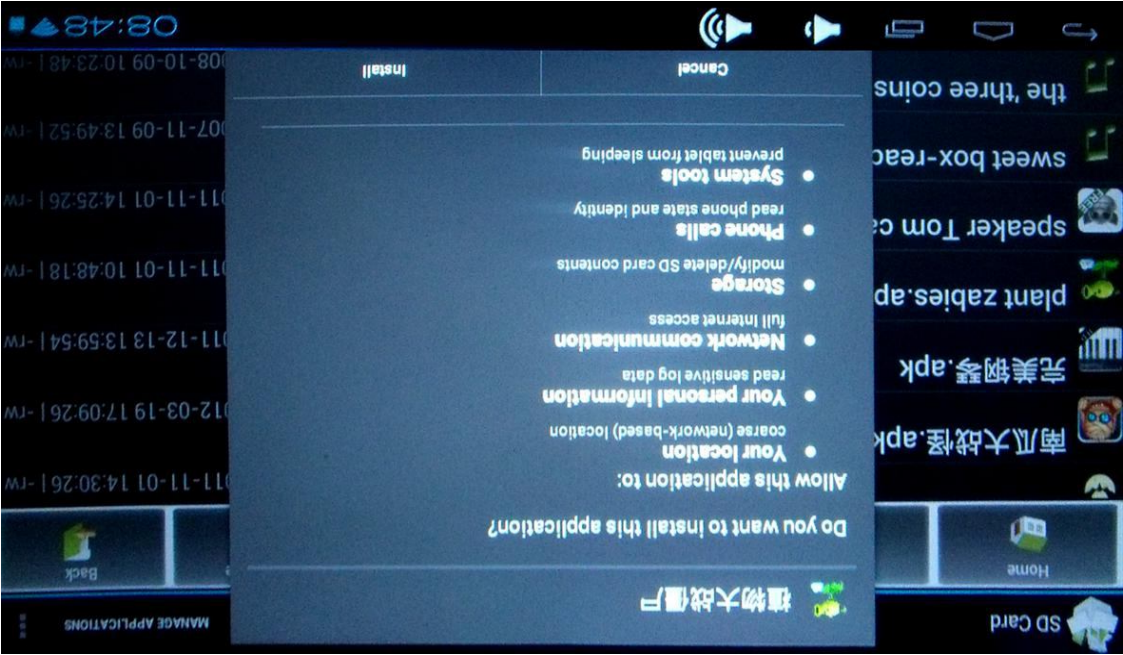


Note: Le mode d'installation par le disque U amovible (USB) est identique au mode d'installation depuis la carte TF (Micro SD).

## 10.2. , installation de l'application depuis "Android market"

 Vous devez d'abord vous rendre sur "marché". Pour cela vous devez souscrire à un compte g-mail. Une fois le compte créé, assurez-vous qu'Internet est disponible.


Après avoir souscrit au marché, vous trouverez de nombreux logiciels, comme montré ci-dessous:

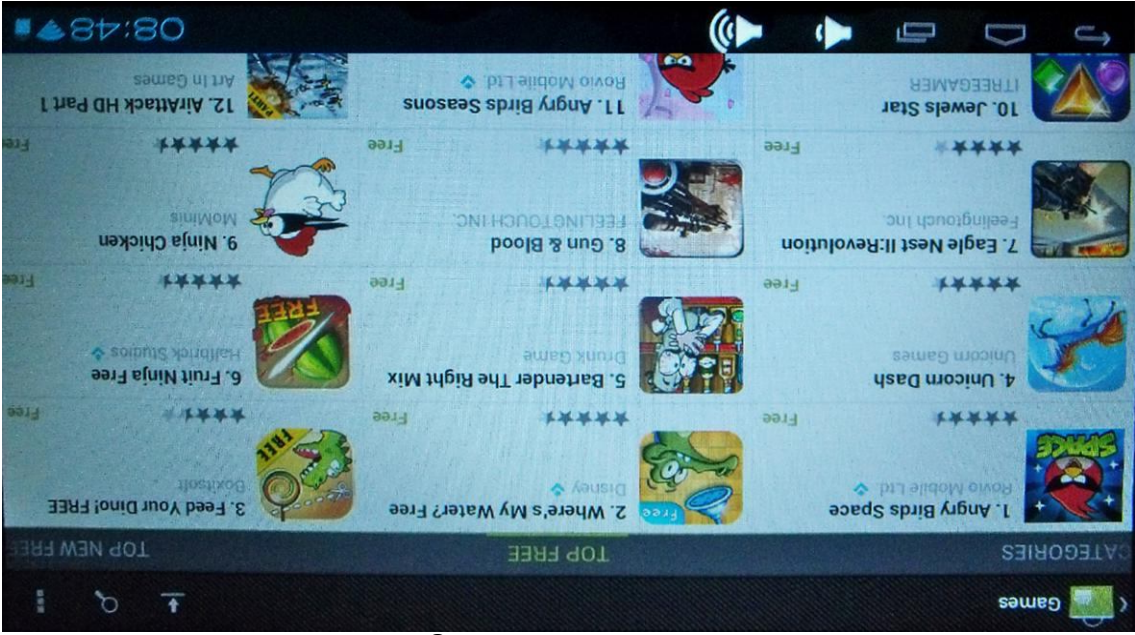





## 10.1. Installation du programme logiciel APK depuis la carte TF

 Insérez la carte TF qui contient le logiciel que vous voulez installer.

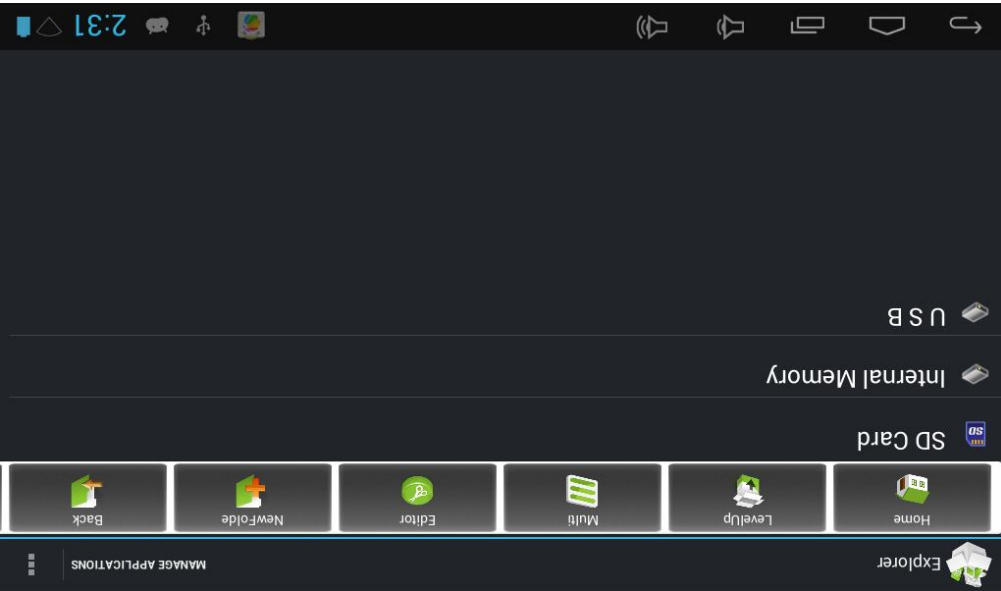


  Choisissez "SD card" pour chercher le fichier APK du logiciel à installer, comme montré ci-dessous

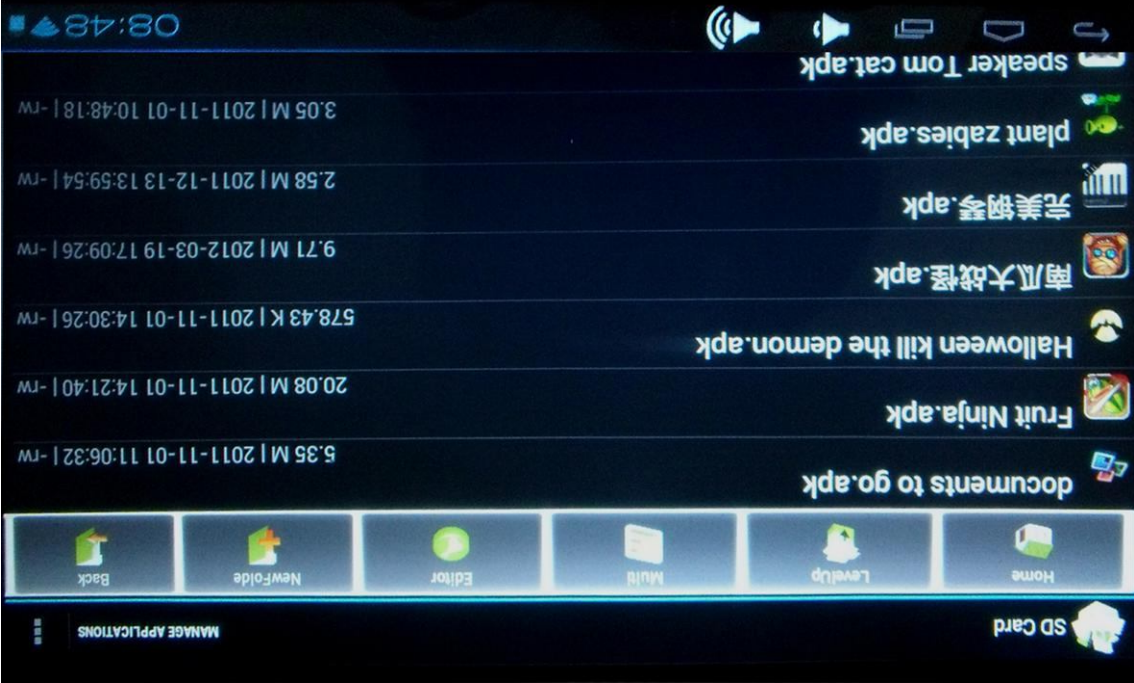

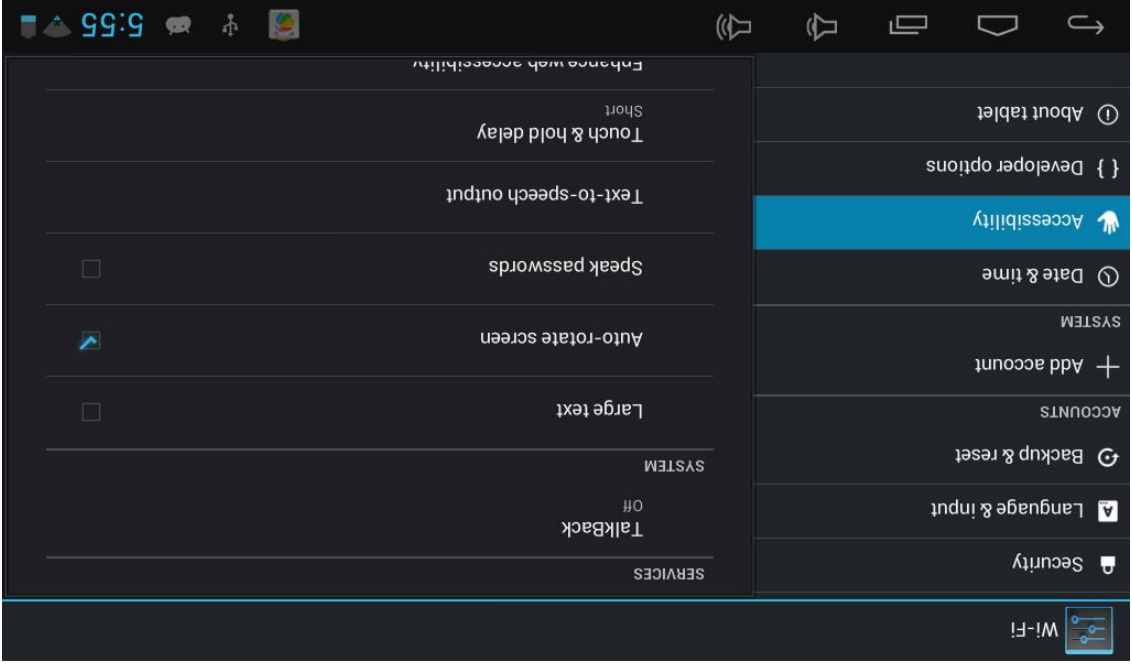

 Cliquez sur l'icône "Developer options". Vous pouvez configurer les données dans cette colonne, comme montré ci-dessous :

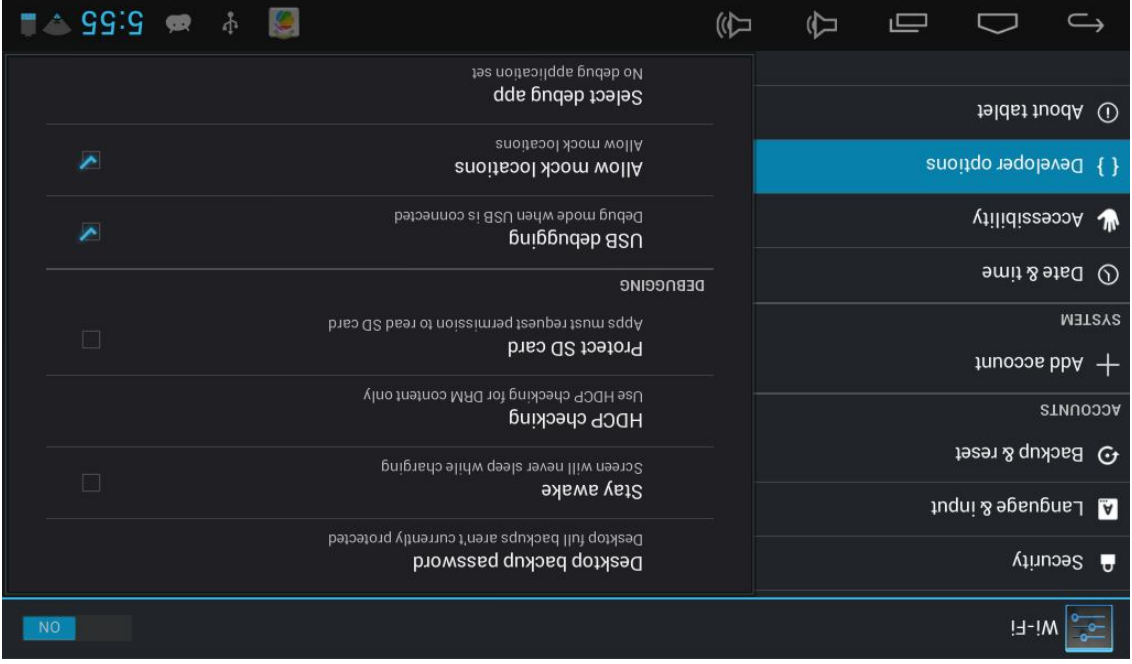

## 10. Installation, de-installation et exécution d'une application

Installation Android : plusieurs méthodes permettent d'installer les applications, par exemple installation par USB, des installations de support de programmes tiers (carte TF), par les périphériques de l'appareil. Vous pouvez aussi effectuer une installation en ligne via "Android Market" ou télécharger et installer via l'ordinateur, ou via un navigateur. Nous vous présentons ici l'installation au moyen d'un installateur d'Appli par la carte SDF et l'installation en ligne par le "Android Market"

Vérifiez d'abord que "Unknown sources" sous l'onglet "Security" de l'icône "Setting" est sélectionnée.

 
**Attention :**

notez qu'une fois que vous avez rétabli les paramètres usine par défaut, tous les applications et les données seront effacées


**9.4. Système**

Dans cette colonne, vous pouvez configurer et afficher la Date et l'heure, l'Accessibilité, les options du Développeur, A propos de la tablette. Cliquez sur chaque élément pour le configurer à votre gré. Par exemple:


Cliquez sur l'icône "Date&time". Vous pouvez configurer la date et l'heure de manière automatique, comme montré ci-dessous :

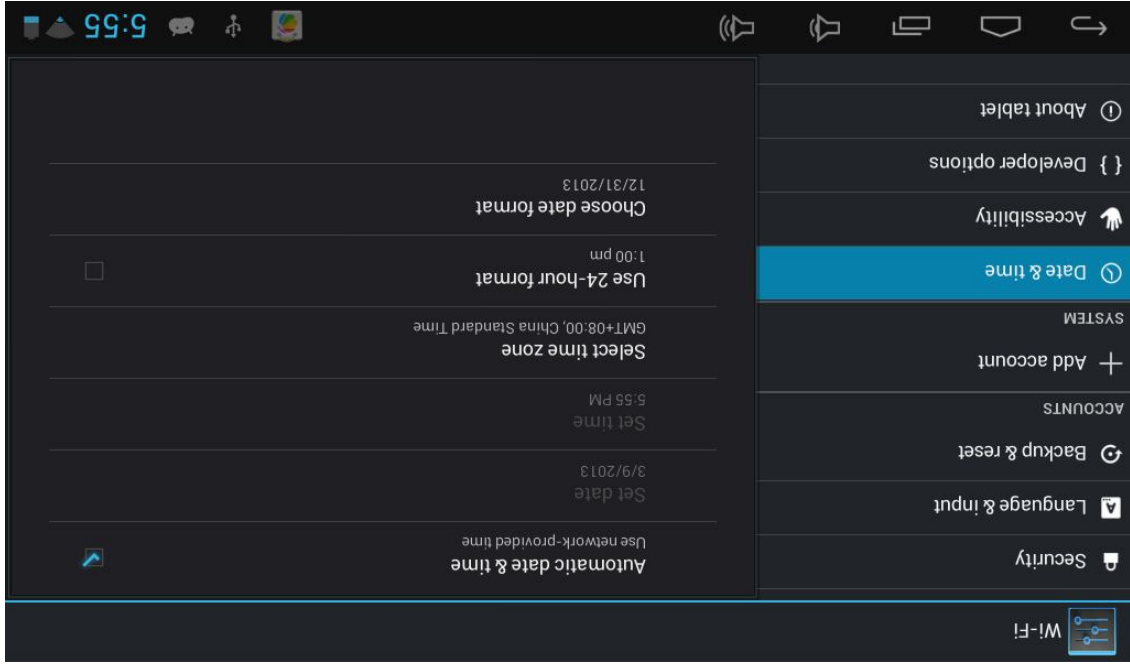

 Vous pouvez aussi choisir de régler l'heure manuellement, puis cliquez sur "set". Si le nombre saisi est correct, le système utilisera les nouveaux paramètres. Cliquez sur l'icône "Accessibilité". Vous pouvez configurer l'accessibilité comme montré ci-dessous :

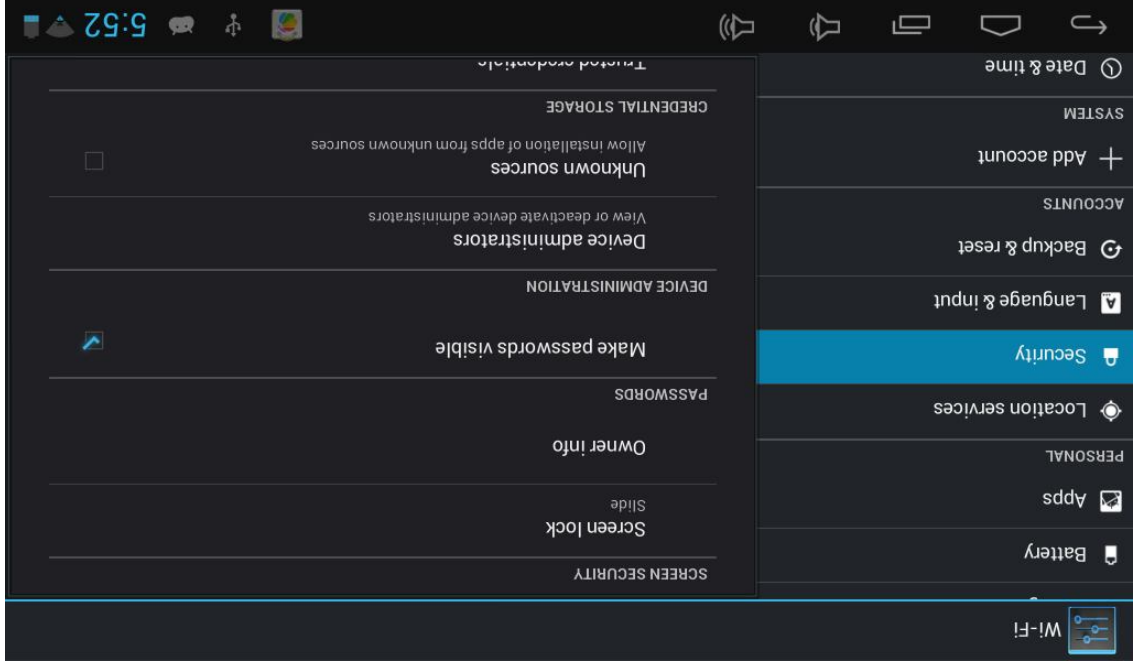

 
Cliquez sur l'icône "Language&input" pour configurer la langue et faire défiler les informations. Vous pouvez configurer le mode de saisie dans la colonne "keyboard&input method". Vous pouvez configurer le mode de recherche dans la colonne "Speech",comme montré ci-dessous:

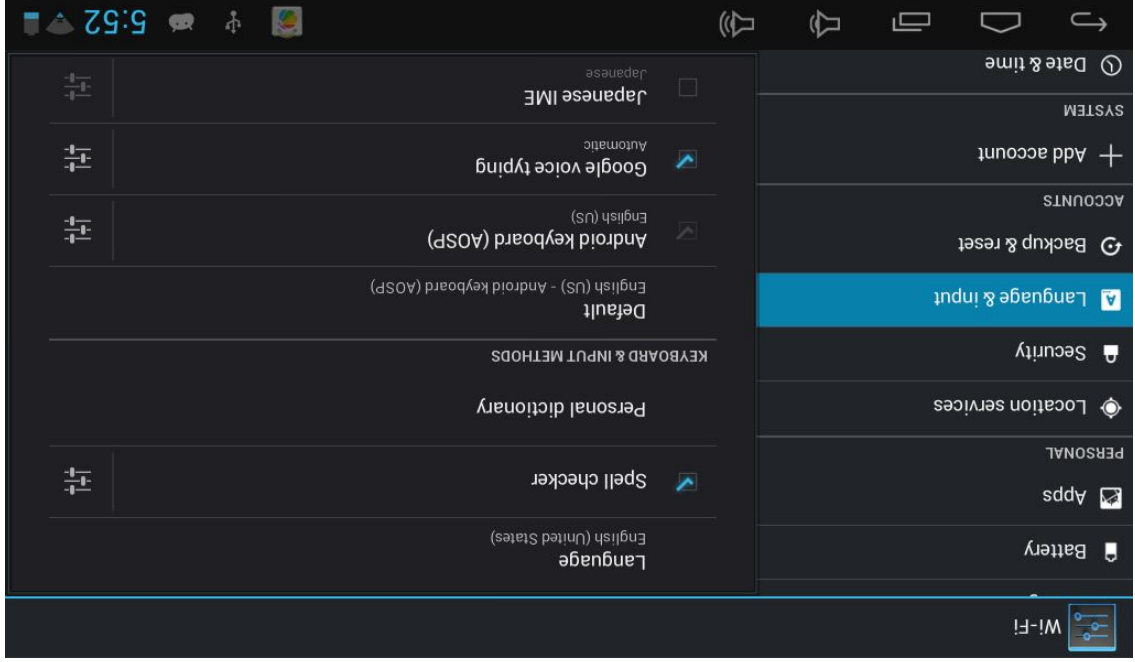

Cliquez sur l'icône "Backup&reset". Vous pouvez sauvegarder vos données et rétablir les paramètres usine par défaut, comme montré ci-dessous :



 
Cliquez sur l'icône "Apps" pour afficher toutes les applications, comme téléchargées, sur la mini carte SD, en cours, toutes, comme montré ci-dessous :

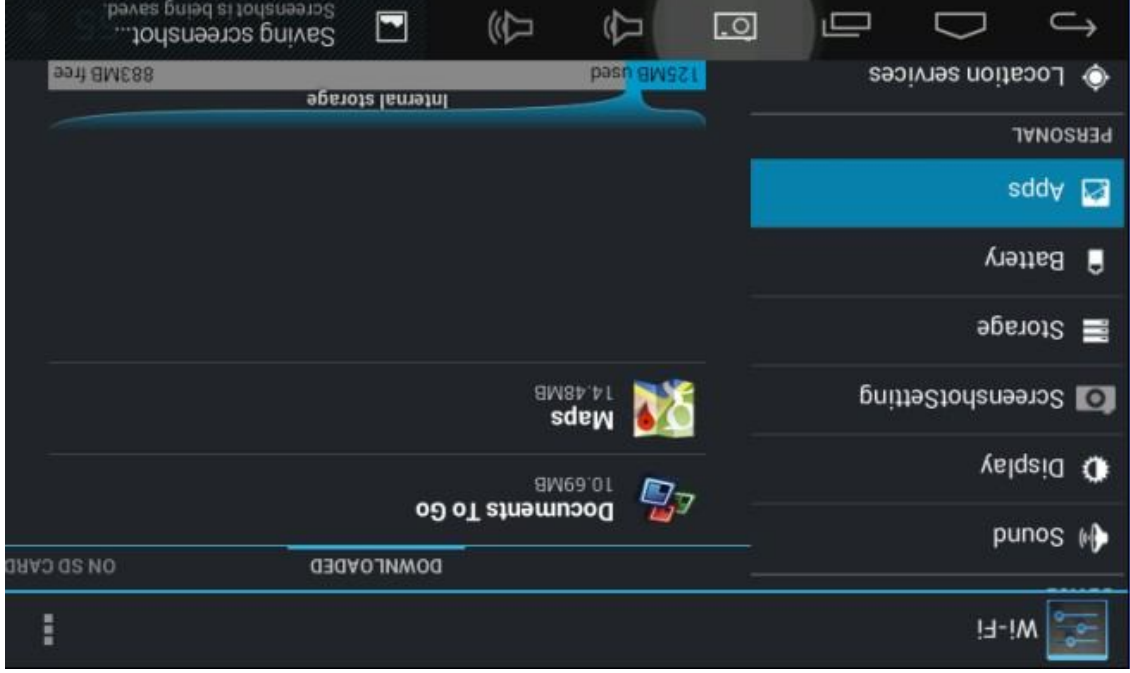


### 9.3. Personnel

 Dans cette colonne, vous pouvez configurer et afficher les services de location, la sécurité, la langue et la saisie, la sauvegarde et la réinitialisation. Cliquez sur chaque élément pour le configurer à votre gré. Par exemple : Cliquez sur l'icône "Security" pour afficher le niveau de sécurité et faire défiler les informations, comme montré ci-dessous :




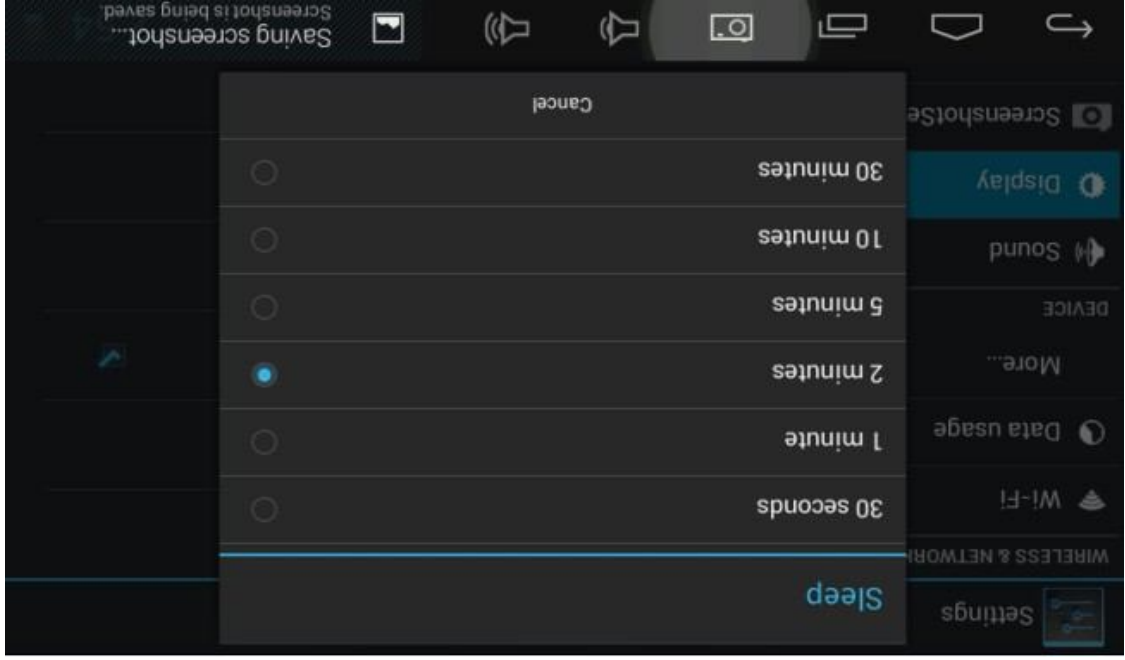

 
Remarque: pendant la diffusion d'une vidéo, la fonction veille est automatiquement indisponible.  
Cliquez sur l'icône "Storage" pour afficher les dispositifs et le stockage externe, comme montré ci-dessous

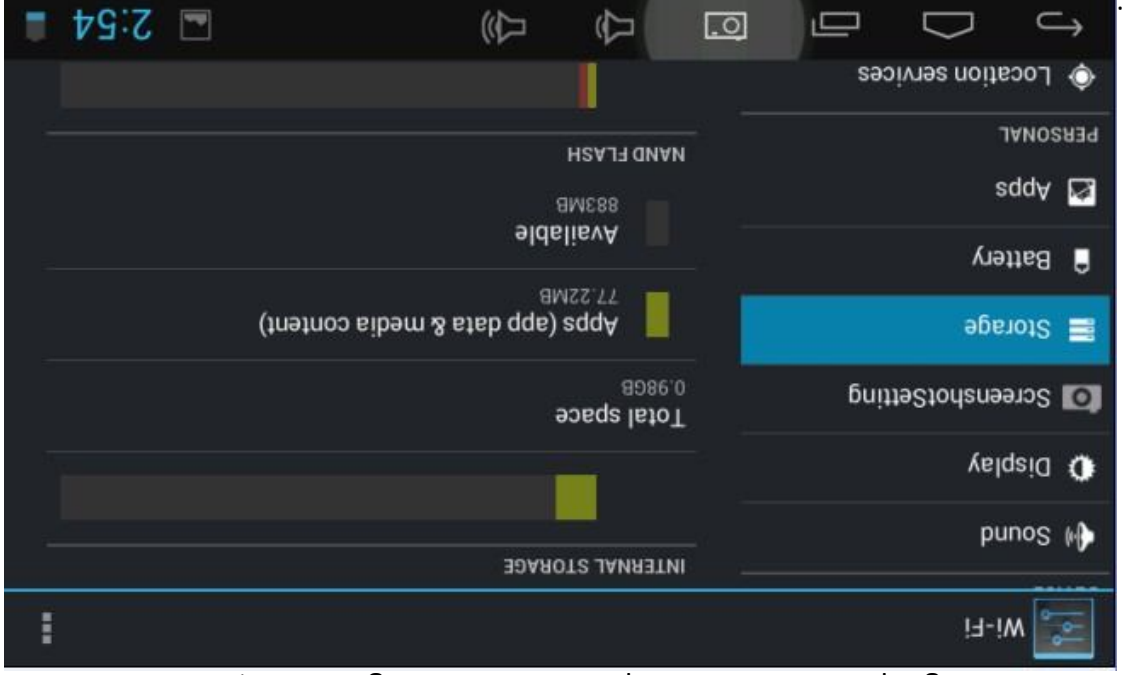

 Cliquez sur l'icône "Batterie" pour afficher le niveau de la batterie comme montré ci-dessous

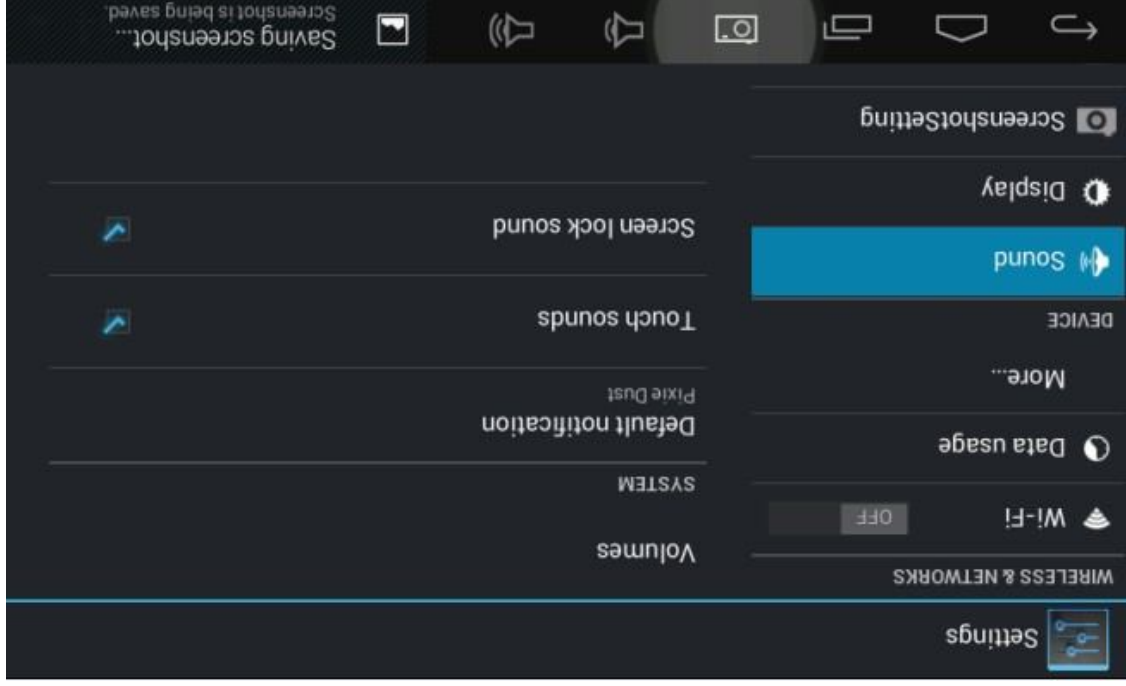


 Cliquez sur l'icône "Display" et réglez l'écran la tablette comme montré ci-dessous.

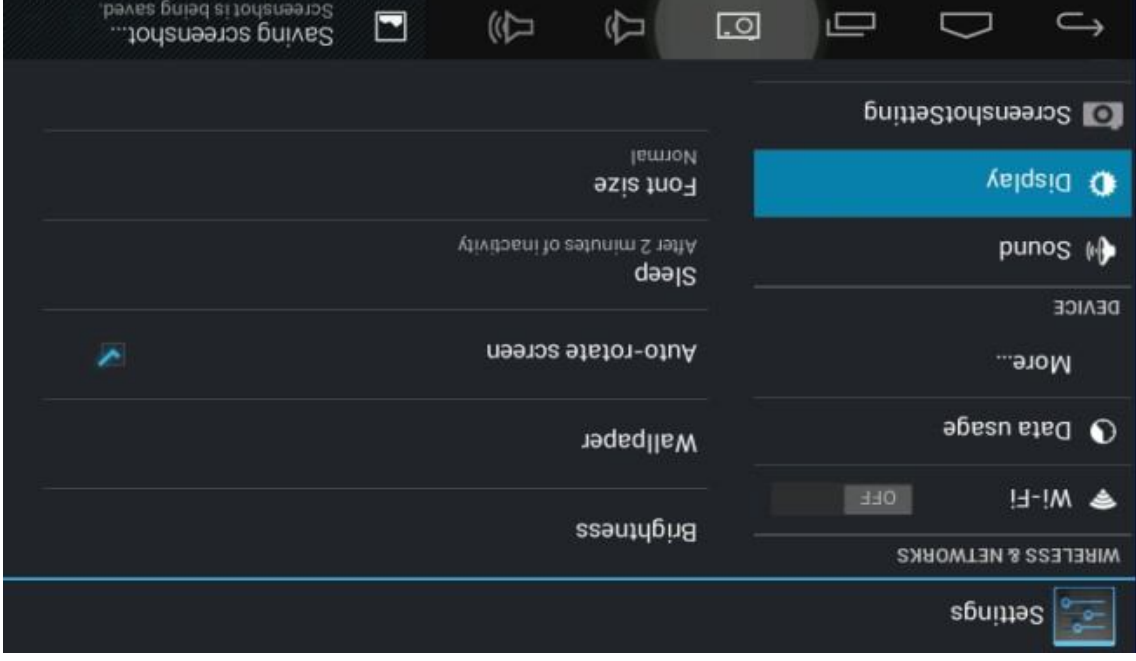


Mise en veille: la durée avant le verrouillage automatique de la veille d'écran.  
Sur l'interface de l'écran "Sleep", choisissez la durée de verrouillage qui apparaît comme suit:

 Cliquez sur "Data usage" (utilisation des données) pour connaître les informations, comme montré ci-dessous :

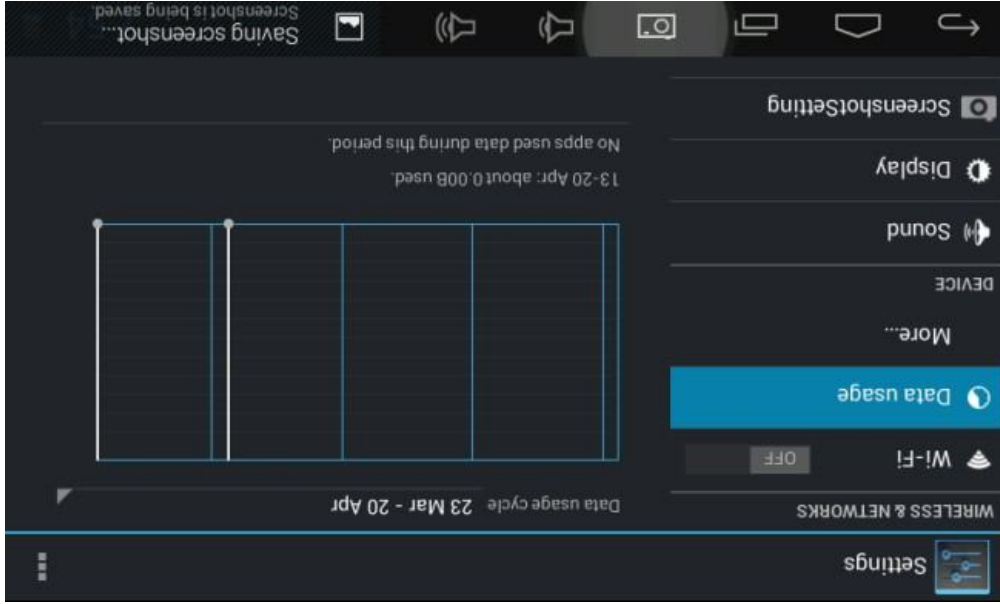


 Touchez l'icône "More" (Plus) pour voir les autres paramètres, comme montré ci-dessous :

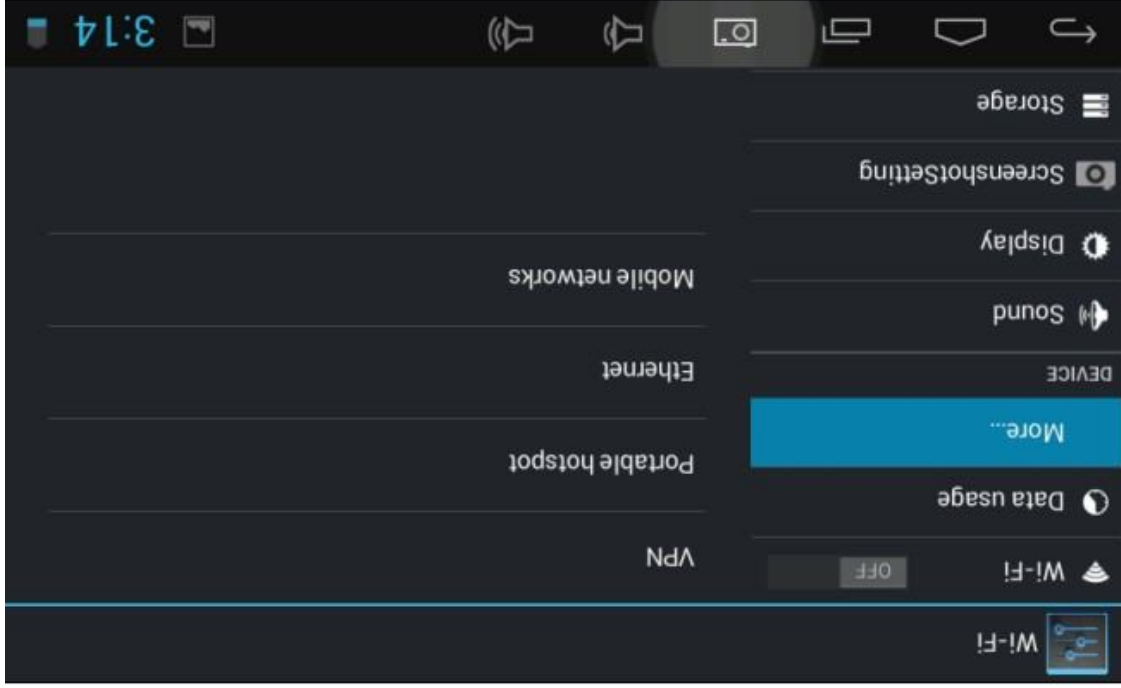

## 9.2. Configuration de l'appareil

 Dans cette colonne, vous pouvez configurer et afficher le Son, l'Ecran, le Stockage, la Batterie, les Apps. Cliquez sur chaque élément pour le configurer à votre gré. Par exemple : Cliquez sur l'icône "Sound" et réglez le son comme montré ci-dessous

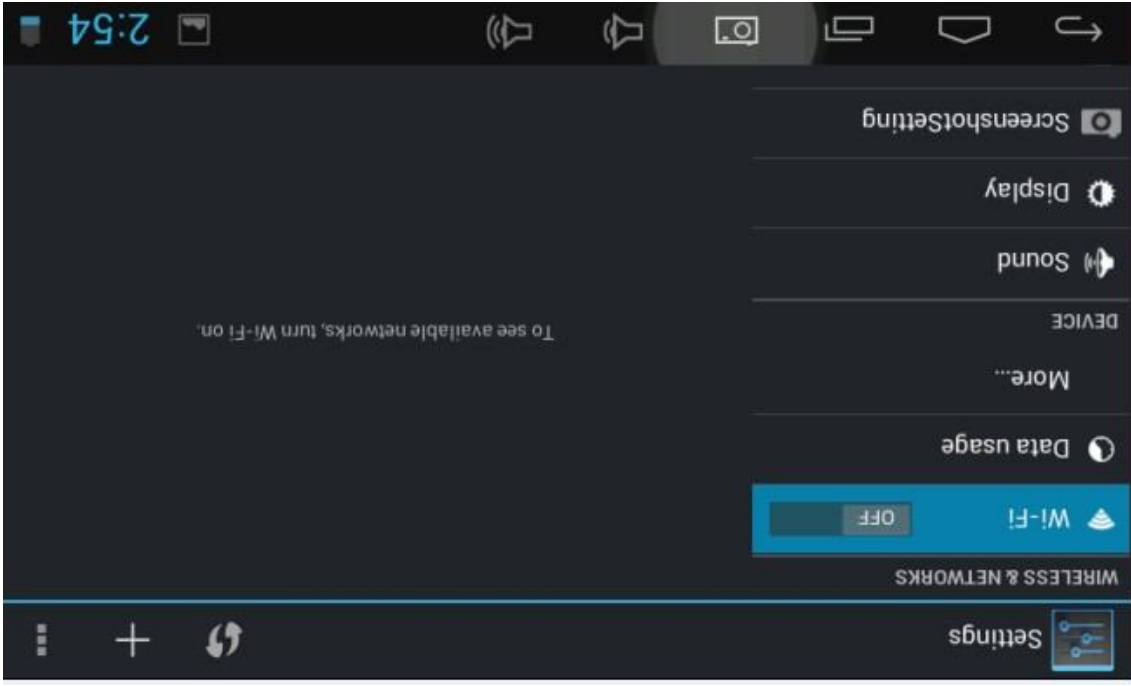


Cliquez sur l'icône "Settings" dans le menu principal puis sur la colonne "Wi-Fi". Vous pouvez choisir Wi-Fi montré sur l'interface, comme ci-dessous :

### 9.1. Sans fil & réseau:

 - \* Sans fil & réseau:
- \* Son & Ecran
- \* Date & Heure
- \* Autres fonctions

Sélectionnez les éléments appropriés pour faire l'opération de votre choix, par exemple :

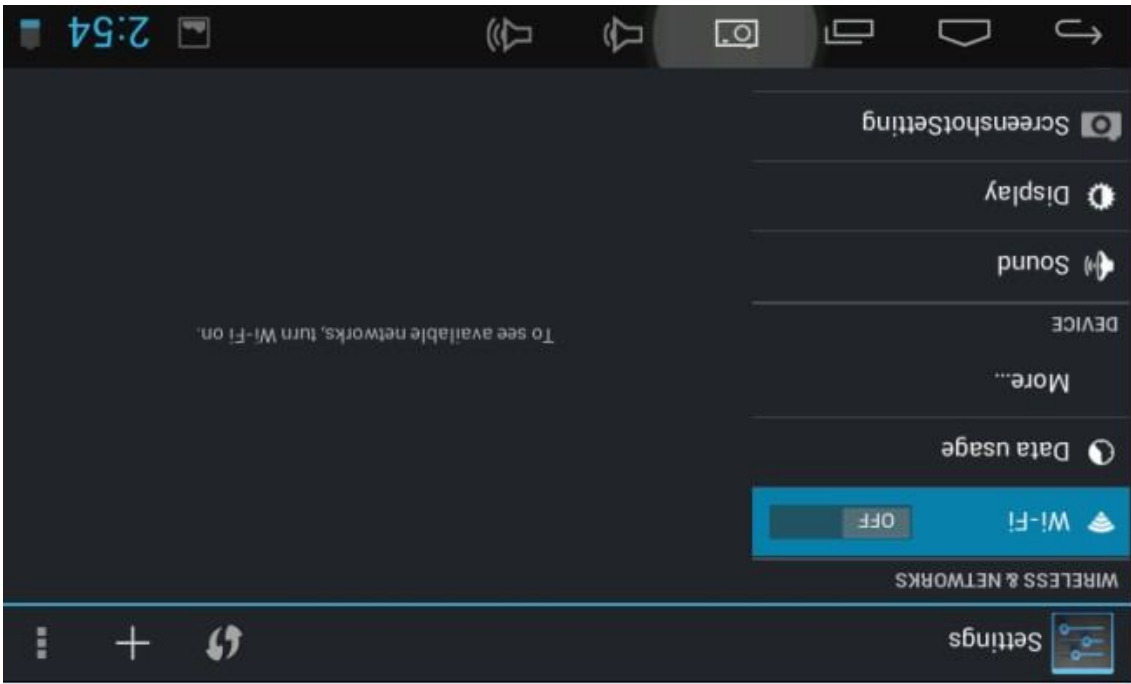


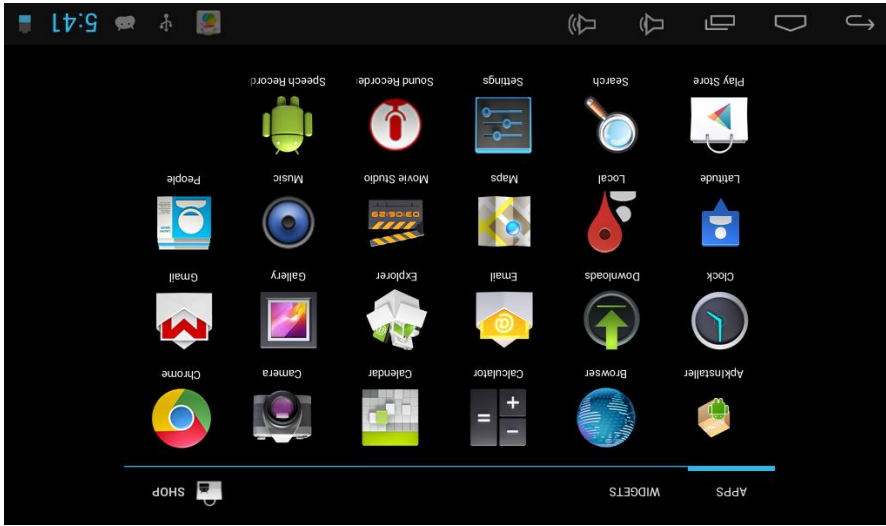 
La barre d'état permet d'afficher l'état du réseau du système en cours, le niveau de la batterie, la durée d'application et d'autres informations.

Google search icon is used by typing keywords to do the Internet search. La balise du menu principal se trouve dans l'angle supérieur gauche de l'écran, cliquez dessus puis faites votre recherche Internet.

L'icône d'étiquette menu se trouve dans l'angle supérieur droit de l'écran. Touchez l'icône pour aller sur l'interface principale de toutes les applications.

## 8. Menu principal

Faites glisser l'icône  pour déverrouiller l'interface. Appuyez sur l'étiquette " menu principal" en haut à droite pour accéder à l'interface du menu, comme montré ci-dessous :



Dans le menu principal, vous pouvez configurer le système, opérer l'application existante, installer une nouvelle application et lancer la calibration tactile, écouter de la musique, regarder des vidéos, naviguer sur le web, jouer à des jeux et autres applications.

 
## 9. Configuration du système:

Cliquez sur l'interface du menu principal de l'icône "Settings" (Configuration), puis ouvre l'interface de configuration du système, vous pouvez faire défiler vers le haut et vers le bas pour choisir l'élément que vous voulez configurer, comme montré ci-dessous :



## 7.2. Arrêt:


Appui long sur la touche Power (marche/arrêt) puis les options contextuelles s'affichent sur le bureau. Choisissez l'option Mise à l'arrêt, puis cliquez sur Ok comme montré ci-dessous.

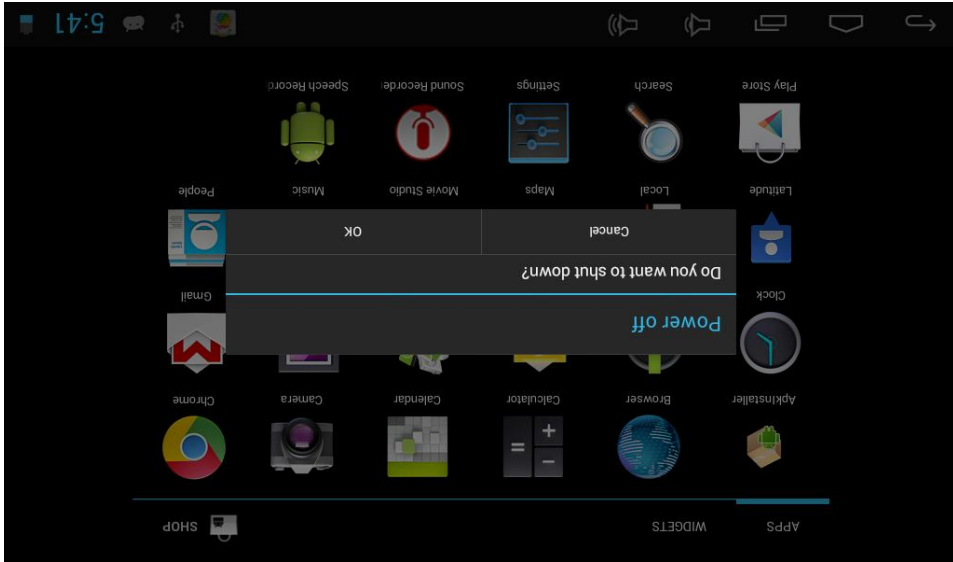





## 7.3. Mise en veille

 Lorsque le système est en mode de fonctionnement normal, une courte pression sur la touche Power permet d'accéder à l'état de veille, l'écran sera fermé. Une autre courte pression sur la touche Power pour reprendre le mode normal. Pour réduire la consommation électrique, vous pouvez utiliser cette fonction quand vous n'utilisez pas l'appareil.

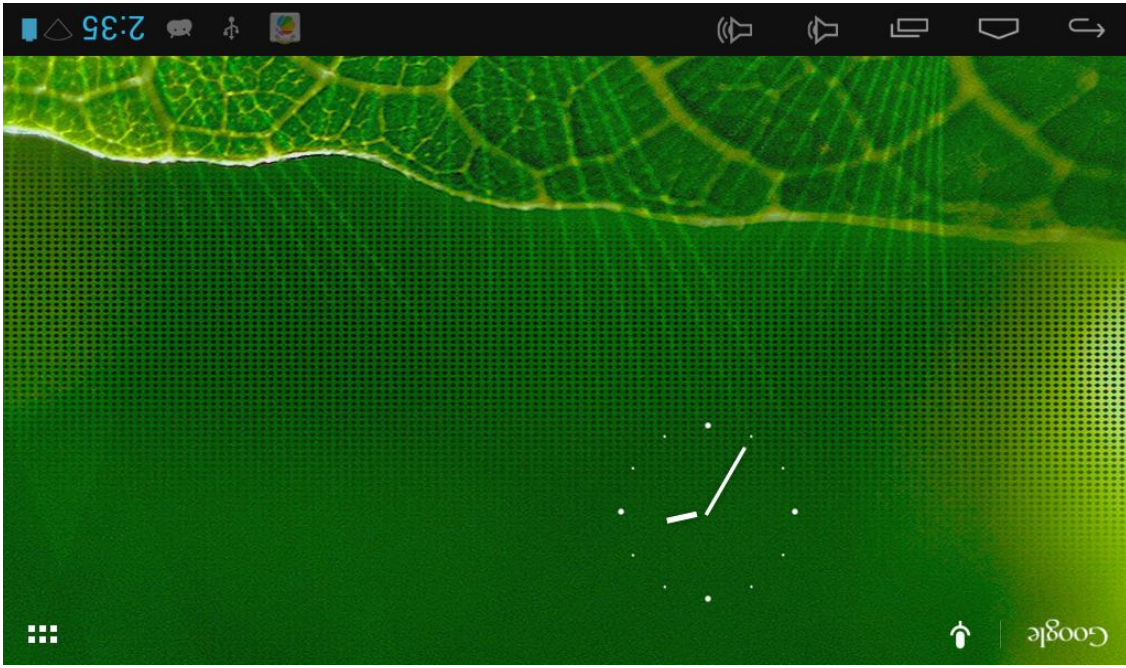 Une fois le système sous tension, vous voyez le bureau Android 4.1 (ci-dessous). Le bureau par défaut se compose d'une icône de recherche Google, d'une barre d'état et d'une icône d'étiquette menu.



#### Définition de fonctions

1. "+": Hausse du volume
2. "-": Baisse du volume
3. "⏻": Bouton marche/arrêt, état de mise à l'arrêt actif, appui long sur le bouton marche/arrêt et le système entre en mode Démarrage, état marche, appui long sur le bouton marche/arrêt et le système entre en mode mise à l'arrêt, état marche, appui court pour verrouiller l'interface.
4. : Cette icône permet de revenir à l'interface précédente
5. : Dans n'importe quelle interface, touchez l'icône pour revenir à l'interface principale.
6. : Touchez cette icône pour afficher les applications récentes que vous avez utilisées.
7. : Faites glisser cette icône vers la droite de l'interface pour déverrouiller ce périphérique, faites glisser vers la gauche de l'interface caméra.

 
#### 6. Utilisation et préparation de la tablette

 
Chargement de la batterie  
Avant la première utilisation de la tablette, rechargez la batterie.  
1. Utilisez l'adaptateur AC pour charger l'appareil.  
2. Pour recharger la batterie complètement, branchez-la pendant 4 heures minimum.

#### 7. Démarrage et mise à l'arrêt:

##### 7.1. Démarrage:

Appui long sur la touche marche/arrêt et le système passe en mode Démarrage, comme montré ci-dessous:  
Logo de démarrage du processus de démarrage.  
Le système est lancé et accède au mode Android.  
Puis accès au menu de démarrage et écran d'accueil

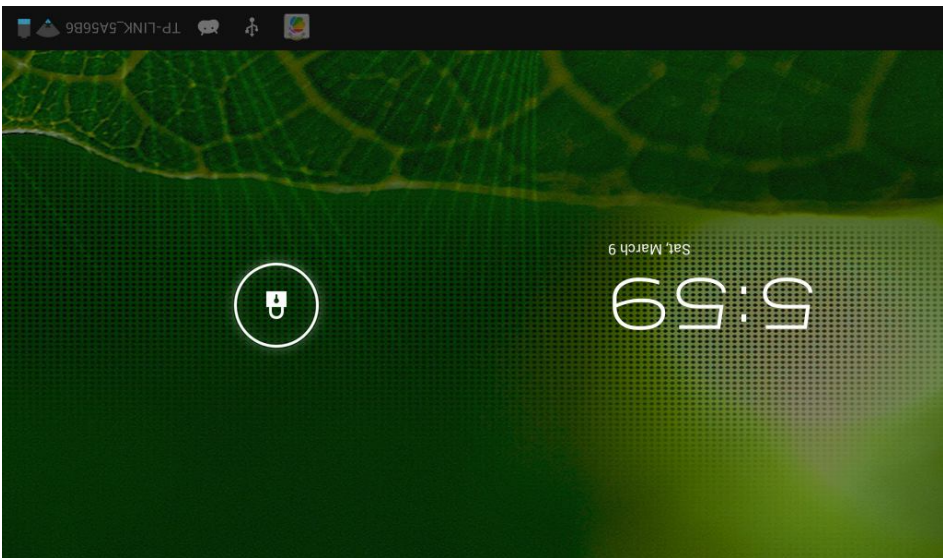

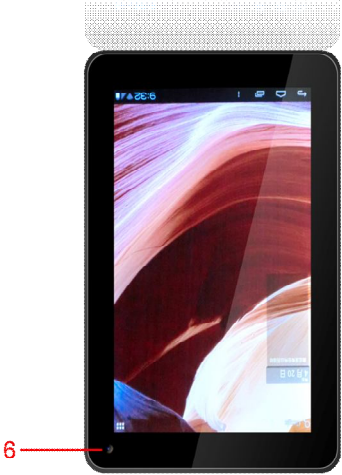

Description et fonction des touches			
1	Marche/Arrêt	2	Connexion casque
3	Port USB	4	Alimentation DC
5	Slot TF Card	6	Volume +/-
7	Réinitialisation	8	Haut-parleur
9	Caméra		

3. Spécifications techniques

Paramètres de la tablette PC DV137		
Processeur	Rockchip2926 ARM Cortex A9 1.2Ghz	
Memoire	RAM 512MB DDR3	
Stockage	4GB Nand Flash Prise en charge carte TF externe, maximum 32Go	
Wifi	IEEE 802.11 b/g/n network	
sortie vidéo	AVI ( H.264, DIVX, XVID, rm, rmvb, MKV, WMV, MOV, MP4 ( H.264, MPEG, DIVX, XVID), MPEG, MPG, FLV. HD 2160P max	
Photo	JPG, JPEG, GIF, BMP, PNG	
Audio	Connecteur jack 3.5mm	
	Son stéréo haute fidélité	
	Microphone intégré	
Ecran	Capacité de sortie maximum des écouteurs 40mW	
	Taille	Ecran tactile TFT 5 points LCD 7"
	Résolution	800*480
O.S	Couleur	Noir
	System	Google Android 4.1.1 integrity system
	Support	Installation et application du format APK ,vibration .....
Batterie	Batterie intégrée au lithium polymère 2200 mAh	
Accessoires	Adaptateur (DC5 V/2A) Notice d'utilisation Câble USB Câble OTG	

4. Fonctions principales:

La fonction OTG: transmission de données et affichage des fichiers via la connexion du disque amovible, du mobile HDD etc.  
Wifi: accès multiples au réseau, profitez de la vie en réseau à tout moment et n'importe où..  
Fonction vibreur

Compatible avec l'installation et l'application du format APK, plusieurs logiciels à télécharger à partir du "marché des applications" ou du réseau PC.  
Compatible aux formats audio MP3、M4A、WMA、APE、FLAC、AAC、WAV、AMR、OGG etc. et une partie des paroles au format LRC.

Décodage vidéo full HD (1080P、720P、480P) , formats vidéo: : MKV、AVI、RM/RMVB、WMV、3GP、MOV、MP4、ASF、MPG、DAT、VOB、FLV etc  
Format: JPG、JPEG、BMP、PNG etc.

Compatible carte Micro SD (TF card ),de 128MB à 32GB max..

## 1. Remarques:

- \* Ce produit est un appareil électronique de haute précision, veuillez ne pas le démonter de façon arbitraire.
- \* Évitez les coups et les collisions.
- \* Évitez d'utiliser cet appareil dans les milieux suivants : température faible et forte, humidité, poussière, champ magnétique fort et exposition prolongée au soleil.
- \* Essayez l'appareil avec un coton humide mais non mouillé ; l'usage d'autres produits chimiques est interdit. Ce produit ne doit pas être exposé aux éclaboussures ou déversements et aucun objet rempli de liquides, tels que des vases, ne doit être placé sur l'appareil.
- \* L'usage prolongé des écouteurs et un volume élevé peuvent causer des dommages auditifs permanents.
- \* Ne pas utiliser les écouteurs en traversant une rue, en conduisant une moto ou sur un vélo pour éviter les accidents de la route.
- \* Utiliser uniquement une batterie, un chargeur et les accessoires autorisés, l'usage de tout autre type de produit constituerait une infraction à la garantie et pourrait être dangereuse.
- \* Eliminer les déchets du produit ou des accessoires conformément à la réglementation locale en matière d'environnement.
- \* Si vous avez des questions sur la façon d'utiliser l'appareil, contactez votre revendeur ou le service après-vente de notre société.
- \* La société ne peut être tenue responsable de la perte de mémoire causée par des dégâts, une réparation ou toute autre cause, veuillez donc à suivre les instructions d'utilisation et faire des sauvegardes régulièrement.

## 2. Accessoires:

Tablette PC  
Chargeur 5V 2A  
Notice d'utilisation  
Câble USB  
Câble OTG



Vous venez d'acquérir un produit de la marque DOMOCLIP et nous vous en remercions. Nous apportons un soin particulier au design, à l'ergonomie et à la simplicité d'usage de nos produits. Nous espérons que ce produit vous donnera entière satisfaction.

## Tables des matières

1. Remarques:	3
2. Accessoires:	3
3. Spécifications du matériel	4
4. Fonctions principales	4
5. Description:	5
6. Utilisation MLD et préparation	6
7. Démarrage et mise à l'arrêt:	6
7.1. Démarrage:	6
7.2. Mise à l'arrêt:	7
7.3. Veille:	7
8. Menu principal:	8
9. Configuration du système:	9
9.1. Sans fil & réseaux:	9
9.2. Configuration de l'appareil:	11
9.3. Personnel:	14
9.4. Système	15
10. Installation, déploiement, exécution et application	17
10.1. Installation du programme logiciel APK depuis la carte TF	17
10.2. Installation de l'application depuis le "marché"	18
10.3. Installation depuis l'icône "ApkInstaller"	20
10.4. Désinstallation de l'application	21
11. Widgets:	22
12. Introduction au programme principal:	22
12.1. Navigateur:	22
12.2. Caméra:	23
12.3. E-mail:	24
12.4. Explorer:	26
12.5. Galerie:	27
12.6. Gmail:	29
12.7. Lecteur de musique:	29
12.8. Enregistrement	30
12.9. Marché (Play Store)	31
13. Papiers peints:	34
13.1. Papier peint à partir de l'icône Settings	34
13.2. Papier peint à partir de l'icône "Gallery"	34
13.3. Papier peint à partir de l'interface mère	35
14. Périphérique externe:	36
14.1. Connexion USB	37
14.2. Utilisation OTG	37
14.3. Clavier et souris	37
15. Méthodes de connexion au réseau:	37
15.1. Réseau WIFI	37
15.2. Réseau Ethernet	38
15.3. Réseau externe 3G	38
16. Traitement des problèmes courants:	38

# Tablette PC 7 " Android



Référence :  
Date :  
Version :  
Langue :

DV137  
08/07/2013  
1.2  
Français / Anglais