

# Haier



Tablette tactile W800  
Manuel utilisateur

## **Introduction**

Nous vous remercions de votre confiance en choisissant cette tablette PC Windows.

Le manuel utilisateur vous permettra de vous familiariser avec votre appareil et avec ses différentes fonctions. Nous vous y présentons une description rapide des fonctions de base de votre tablette en quelques images.

## **Table des matières**

I. Précautions d'emploi	03
II .Eléments clés et fonctionnalités	07
III.Introduction au Bureau	08
1.Écran de démarrage Windows 8.1	08
2.Introduction au défilement des images	08
3.Introduction aux différentes applications	10
4.Colonne des menus	11
5.Application double écran	13
IV. Opérations de base	14
1. Mise en veille, redémarrage, mise hors tension	14
2. Gestion des paramètres de sécurité	14
3. Actualiser et réinitialiser le système	14

## **I. Précautions d'emploi**

- Ce produit est uniquement disponible dans les régions situées au-dessous de 2 000 mètres d'altitude hors régions tropicales.
- Ne pas soumettre l'appareil à des chocs ou à des chutes violentes.
- Ne pas exposer l'appareil à des températures excessivement froides ou chaudes, ni à des environnements extrêmement poussiéreux ou humides. Il est recommandé d'utiliser cet appareil à des températures comprises entre 5 °C et 35 °C. Ne pas exposer l'appareil à la lumière directe du soleil.
- **Évitez les décharges électriques, le feu et les explosions :**
  - N'utilisez pas de prises et de cordons d'alimentation endommagé(e) s ou les prises électriques mal fixées.
  - Ne touchez pas le cordon d'alimentation avec les mains mouillées ou ne déconnectez pas le chargeur en tirant sur le cordon.
  - Ne tordez pas ou n'endommagez pas le cordon d'alimentation.
  - N'utilisez pas votre appareil avec les mains mouillées ou lorsque celui-ci est en cours de chargement.
  - Ne provoquez pas de court-circuit avec le chargeur ou l'appareil.
  - Ne laissez pas tomber le chargeur ou l'appareil et ne les exposez pas aux chocs.
  - Ne rechargez pas la batterie avec un chargeur non approuvé par le fabricant.
  - N'utilisez pas votre appareil pendant un orage car l'appareil peut mal fonctionner et les risques de décharge électrique peuvent augmenter.
  - Ne manipulez pas la batterie lorsque celle-ci coule ou est endommagée.
- **Manipulez et jetez l'appareil et le chargeur avec précaution:**
  - Utilisez exclusivement une batterie et un chargeur homologués par Haier et spécialement conçus pour votre appareil. L'utilisation d'une batterie et d'un chargeur incompatibles peut provoquer des blessures graves ou endommager votre appareil.
  - Ne jetez jamais la batterie ou l'appareil au feu.
  - Ne posez jamais la batterie ou l'appareil à l'intérieur ou au-dessus d'appareils chauffants, tels que des fours à micro-ondes, des cuisinières ou des radiateurs. En cas de surchauffe, ils pourraient exploser.

- N'écrasez ou ne perforez jamais l'appareil. Évitez d'exposer l'appareil à une pression externe élevée qui risquerait d'entraîner un court-circuit interne et une surchauffe.
- Éviter d'utiliser l'appareil près de champs magnétiques ou électrostatiques forts.
- **Protégez l'appareil, la batterie et le chargeur de tout dommage :**
  - Évitez que la batterie entre en contact avec des objets métalliques, car cela risquerait de provoquer un court-circuit entre les bornes + et – de la batterie et de l'endommager de manière temporaire ou permanente.
  - N'utilisez jamais une batterie ou un chargeur endommagé(e).
- **Prenez des précautions lorsque vous êtes exposé aux lumières artificielles**
  - Lorsque vous utilisez votre appareil, ne laissez pas la pièce dans laquelle vous vous trouvez dans l'obscurité et ne rapprochez pas trop l'écran de vos yeux.
  - L'exposition à la luminosité de l'écran lors du visionnage prolongé de vidéos ou de jeux peut entraîner des maux de tête. En cas de sensations d'inconfort, cessez immédiatement d'utiliser l'appareil.
- **Toute réparation doit être réalisée par un technicien agréé :** le recours aux services d'un technicien non agréé risque d'entraîner des dégâts sur l'appareil et d'annuler la garantie du fabricant.
- Ne cherchez pas à démonter, réparer ou modifier l'appareil de votre propre chef sous peine d'annuler la garantie.
- **N'utilisez pas votre appareil à proximité d'un stimulateur cardiaque :**
  - Maintenez une distance minimale de 15 cm entre votre appareil et un stimulateur cardiaque pour éviter toute interférence.
  - Pour minimiser les risques d'interférence avec un stimulateur cardiaque, utilisez l'appareil sur le côté opposé à l'implant.
- Éteignez votre appareil lorsque vous vous trouvez dans un avion
- Éteignez l'appareil dans les lieux présentant des risques d'explosion.
- Ne pas utiliser la tablette dans des endroits très chauds ou à proximité de gaz inflammables (par exemple, dans une station essence).

- Si vous utilisez une prothèse auditive, contactez votre fabricant afin d'obtenir plus d'informations sur les interférences.
- N'utilisez pas votre appareil dans un hôpital ou à proximité d'équipements médicaux en raison des interférences qu'il pourrait produire.
- Votre appareil peut provoquer des interférences avec les équipements automobiles.
- Lors de l'utilisation de la tablette, respecter les lois et règlements qui s'y rapportent, respecter le droit à la vie privée et les droits légitimes d'autrui.
- Tenez l'appareil éloigné de l'humidité ou de tout autre liquide. Si de l'eau (ou autres liquides) s'introduit dans l'appareil, éteignez immédiatement la tablette et nettoyez-la.
- N'utilisez pas de produits chimiques pour nettoyer votre tablette sous peine de favoriser la corrosion. Nettoyez-la avec un chiffon ou un tissu sec.
- Nous ne serons en aucun cas tenus responsables d'une quelconque perte de données liée à une mauvaise utilisation de l'appareil ou à un accident, et nous ne serons pas non plus responsables de toute perte de données indirecte liée à cette mauvaise utilisation ou accident.
- Veuillez toujours à sauvegarder vos données ou documents importants pour prévenir toute perte de données.
- Tenir la tablette et ses accessoires hors de portée des enfants. Ne pas laisser la tablette à un enfant sans surveillance.
- Respecter rigoureusement les explications fournies dans ce manuel lors de l'utilisation du câble USB, sous peine d'endommager votre tablette ou votre ordinateur.
- Éteindre la tablette près d'un équipement électronique de grande précision pour éviter tout dysfonctionnement de l'équipement électronique.
- N'utilisez pas l'appareil en traversant la rue, à vélo ou au volant d'un véhicule.



- À pleine puissance, l'exposition de votre oreille à un volume élevé peut endommager votre audition. N'écoutez pas le lecteur audio de manière excessive. Une écoute prolongée peut endommager votre audition.
- Vous devez faire preuve d'une extrême prudence ou interrompre l'écoute de votre lecteur audio dans des situations potentiellement dangereuses dues à une obstruction de l'audition.
- Ce produit prend en charge les dispositifs de clé 3G de la plupart des marques sur le marché. Nous vous recommandons fortement de tester différentes marques de clé 3G avant d'effectuer tout achat, car les différences entre les marques peuvent s'avérer importantes.

- **Les bons gestes de mise au rebut de ce produit** (Déchets d'équipements électriques et électroniques) :



Le symbole DEEE figurant sur le produit ou sur son emballage indique qu'il ne doit pas être jeté en fin de vie avec les autres déchets ménagers. Les particuliers sont tenus de se séparer de tous leurs déchets d'équipements électriques ou électroniques dans un point de collecte spécifié en vue de leur recyclage. La collecte isolée et la récupération appropriée de vos déchets d'équipements électriques ou électroniques au moment de leur mise au rebut nous permettront de préserver les ressources naturelles. De plus, le recyclage approprié des déchets d'équipements électriques et électroniques assurera la sécurité de la santé humaine et de l'environnement.

Débarressez-vous des composants électroniques tels que les batteries dans des containers appropriés en respectant les instructions liées au recyclage.

- Attention : l'appareil risque d'exploser si la batterie est remplacée par une batterie qui ne serait pas équivalente.
- Pour les équipements devant être branchés, la prise de courant doit être installée à proximité de l'équipement et doit être facilement accessible.

- **Informations sur la signification du marquage de conformité CE :**

 


Le marquage CE indique que le produit répond aux principales exigences de la Directive européenne 93/68/EEC applicable aux procédures d'évaluation de la conformité.

- Ce guide de démarrage rapide et les logiciels qui y sont liés peuvent être modifiés sans préavis. Vous pouvez télécharger les dernières mises à jour du logiciel sur [www.haier.com](http://www.haier.com). Si ce guide de démarrage rapide ne correspond pas exactement à la tablette que vous avez sous les yeux, veuillez toujours vous référer à ce qui est indiqué dans la tablette.

## I.1. Principales fonctions et définition

Présentation des touches/ports :

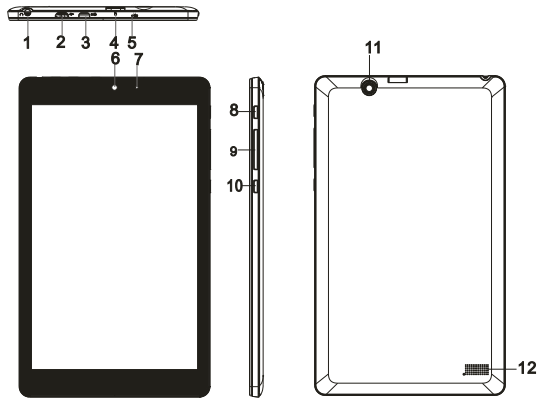

- ① Port pour casque et micro : ce port transmet les signaux sonores de la tablette vers le haut-parleur ou le casque audio.
- ② Port micro USB : vous pouvez lire toutes vos données sur USB.
- ③ Interface mini HDMI : interface multimédia haute définition.
- ④ Port de carte Micro SD : le lecteur de carte micro SD supporte le format Micro SD et Micro SDHC.
- ⑤ Port microphone
- ⑥ Caméra CCD avant : permet de prendre des photos et de les enregistrer.
- ⑦ Indicateur de charge.
- ⑧ Touche Marche : appuyez sur le bas de cette touche pour allumer/éteindre l'écran de votre tablette. Vous pouvez également appuyer sur cette touche pour mettre votre appareil en veille ou quitter le mode veille.
- ⑨ Volume -/volume + : permet d'abaisser/relever le volume.
- ⑩ Touche Windows : appuyez sur cette touche pour revenir au menu Démarrer.
- ⑪ Caméra CCD arrière : permet de prendre des photos et de les enregistrer.
- ⑫ Haut-parleur : le haut-parleur intégré vous permettra d'accéder au son de votre tablette sans avoir à brancher un casque ou tout autre appareil.

Remarque :

- 1 Les deux appareils ne permettent pas de zoomer ni de détecter les visages.
- 2 Le port micro USB ne permet pas de se connecter à un ordinateur ou bien de partager de l'alimentation électrique avec un objet connecté via le port USB
- 3 Lorsque vous utilisez la tablette pour la première fois, ou lorsque celle-ci a été inactif pendant une longue période, l'utilisateur doit charger la batterie pendant plus d'une demi-heure avant de l'allumer, afin de garantir la stabilité du système d'exploitation.



### III. Introduction au Bureau

1. Démarrage de Windows 8.1 : de nombreux programmes apparaissent sur l'écran de démarrage. Ces programmes applicatifs sont disposés sous forme de « magnets ». Vous pouvez facilement y accéder en cliquant dessus.

Vous devrez au préalable vous connecter à votre compte Microsoft pour que vos applications fonctionnent correctement.



#### 2. Défilement des images

Faire glisser vers la droite



Faire glisser de la gauche vers la droite  
pour démarrer l'application

Faire glisser vers la gauche



 
Faire glisser de la droite vers la gauche  
pour faire apparaître le menu colonne

Réduire la taille de l'image




Rapprochez vos deux doigts sur l'écran pour réduire l'image

Agrandir la taille de l'image

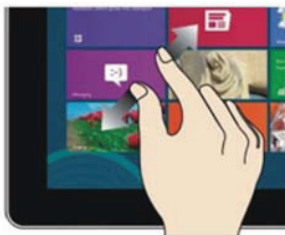


Écartez vos deux doigts sur l'écran pour agrandir l'image

 Faire glisser vers le bas

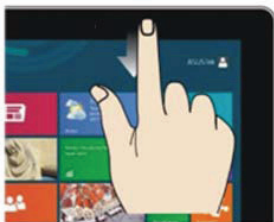

Sur l'écran d'accueil, faites glisser vos doigts du haut de l'écran pour visualiser tous les programmes.

 Faire glisser latéralement

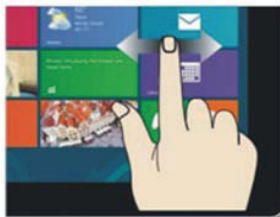

Sur l'écran d'accueil, faire glisser à gauche et à droite pour déplacer les images.


Faire glisser vers le haut




Sur l'écran d'accueil, faites glisser votre doigt du bas vers le haut pour accéder à toutes les interfaces applicatives (API).

### 3. Introduction aux interfaces applicatives

 
Outre les interfaces applicatives déjà présentes sur l'écran d'accueil, vous pouvez ajouter d'autres applications et notamment les programmes d'application logicielle liés à votre tablette PC.

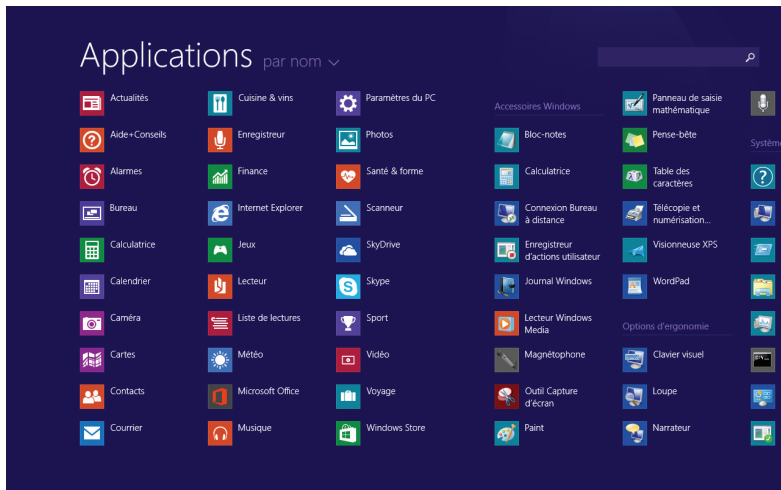

 Si vous souhaitez ajouter plusieurs programmes applicatifs sur la page d'accueil, veuillez-vous référer au schéma ci-dessous. Pour ce faire, appuyez légèrement sur l'icône de l'application (1) et maintenez-la appuyée pendant environ une seconde, puis laissez-la glisser, et sélectionnez (2) pour l'intégrer à l'écran d'accueil.

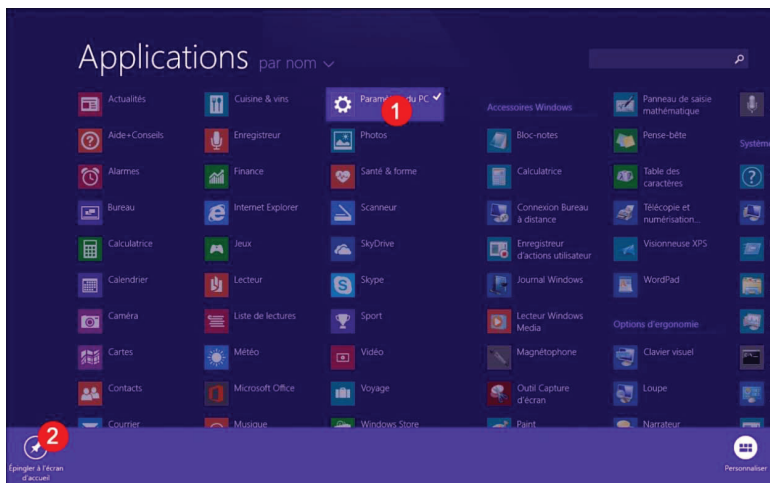


 Inversement, si vous souhaitez annuler ou supprimer une application de l'écran d'accueil, appuyez légèrement sur l'icône de l'application (1) et maintenez-la appuyée pendant environ une seconde, puis laissez-la glisser, et sélectionnez (2) pour supprimer le programme de l'écran d'accueil.

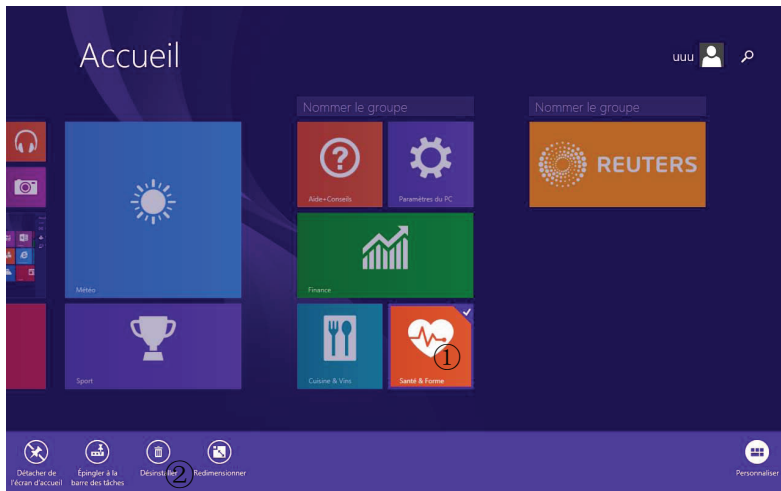

#### 4. Colonne des menus

 Glissez votre doigt de la gauche vers la droite de l'écran pour faire apparaître la colonne menu qui contient les menus suivants : [Démarrer, Périphériques, Paramètres, Partager et Recherche.]

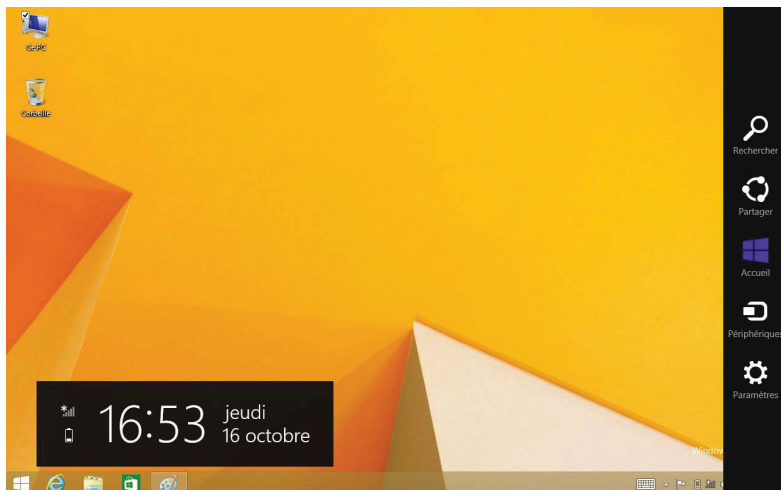

Glissez votre doigt de la gauche vers la droite de l'écran pour faire apparaître la colonne menu qui contient les menus suivants : Démarrer, Périphériques, Paramètres, Partager et Recherche.



Vous permet de rechercher des fichiers et programmes applicatifs contenus dans la tablette.



Vous permet de partager un programme via des réseaux sociaux ou par e-mail



Vous permet de revenir à l'écran d'accueil. À partir de l'écran d'accueil, vous pouvez utiliser cette fonction pour revenir à l'application la plus récemment ouverte.

 


Vous permet de lire, d'écrire et de partager des fichiers, de vous connecter à un écran ou à une imprimante externe.




Vous permet de configurer votre tablette PC.


Menu Recherche

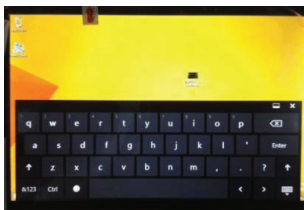


Menu Partage

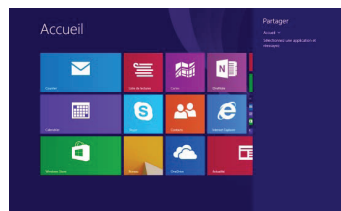 

Menu Périphériques

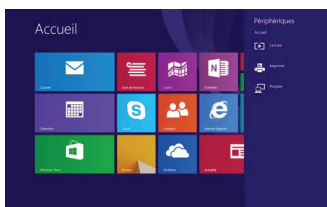 


Menu Paramètres

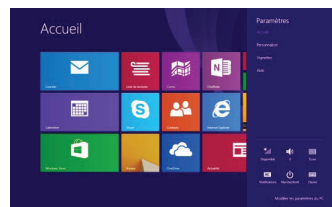 


## 5. Application double écran

Sur l'ordinateur (schéma 1), faire glisser la barre vers l'intérieur en partant du côté gauche de l'écran et maintenez-la. Puis relâchez votre doigt lorsque la double interface apparaît.

 Comme indiqué sur le schéma 2, appuyez grâce à la touche de partition sur la ligne de partition du milieu et faites glisser de gauche à droite pour afficher les proportions des deux écrans.

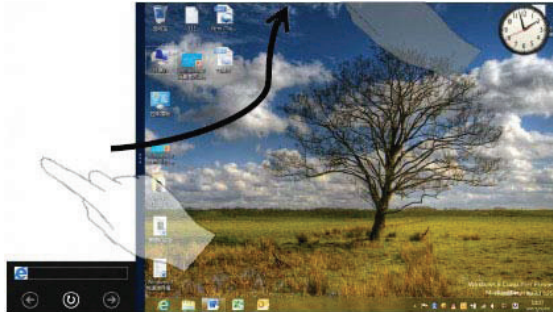


(Schéma 1)

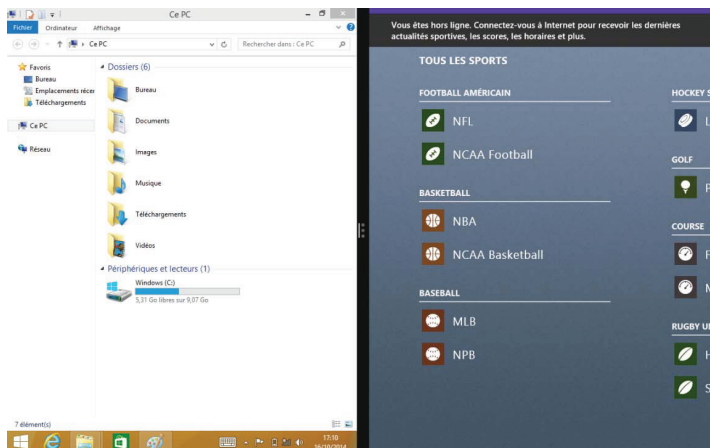 

(Schéma 2)


#### IV. Opérations de base
 
##### 1. Mise en veille, redémarrage, mise hors tension

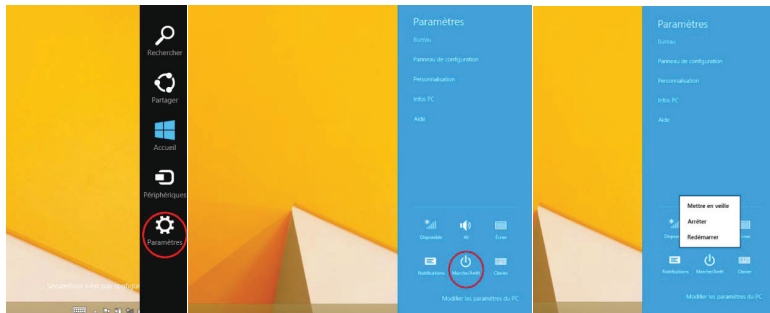

##### 2. Gestion des paramètres de sécurité

 Configuration de l'utilisateur et du mot de passe

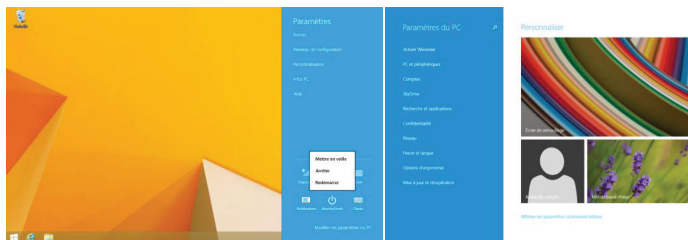

Méthode pour une configuration rapide :

Appuyez sur la touche « configuration » dans la colonne des menus et sélectionnez « Modifier les paramètres de l'ordinateur. » Sélectionnez « Utilisateur » sur la gauche et cliquez sur « Créer un compte local » dans « Votre compte » sur le côté droit. Après avoir saisi le mot de passe du Windows Live Id Account, saisissez le nom d'utilisateur, le mot de passe, confirmez le mot de passe et l'invite du mot de passe.

##### 3. Actualiser et réinitialiser le système

Dans la colonne menu :

1) Glissez votre doigt de la gauche vers la droite de l'écran pour faire apparaître la colonne menu.

2) Toucher Paramètres → Modifier les paramètres du PC → Mise à jour et récupération → Récupération





3) Sélectionnez le mode de récupération adéquat dans le menu.

 
Utiliser la touche de raccourci

Dans le mode qui permet d'éteindre la tablette, l'utilisateur peut appuyer et maintenir les

touches Power et Vol- en même temps pour redémarrer l'appareil et entrer dans le mode de récupération pour tenter de réparer ou faire un reset du système.

Après le redémarrage de la tablette, l'utilisateur arrivera sur l'écran suivant afin de choisir une option du mode de récupération:

-  Continuer - Sortie sans rien faire et continuer à utiliser Windows 8.1
-  Utiliser un périphérique - Actualiser le système en utilisant un périphérique USB, connexion réseau, ou le DVD Windows de récupération.
-  Résoudre les problèmes - Actualiser ou réinitialiser votre tablette ou utiliser des outils avancés.
-  Éteignez votre tablette - Ne rien faire et éteindre la tablette.

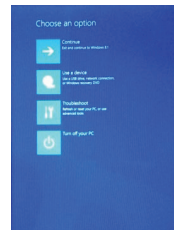



## **Introduction**

Thank you for your choosing the new Tablet PC.

This guide serves to enable users to get to know and familiar with our product as soon as possible. Here we have made a brief introduction to the key layout and definitions in figures and words.

## Contents

I.	Safety Precautions .....	18
II.	Key Feature and Functionality .....	21
III.	Introduction to Desktop .....	22
	1. Windows8.1 Start Screen .....	22
	2. Image Slide Application.....	22
	3. Apps Introduction.....	23
	4. Charm Menu Column.....	24
	5. Double Screen Application.....	25
IV.	Basic Operations .....	26
	1. Dormancy, Restart, and Power off .....	26
	2. Security Management .....	26
	3. Refresh or Reset the system .....	26
V.	WEEE and CE Information .....	27

## I . Safety Precautions

- Do not subject the device to severe impact or drop it from heights.
- Do not use the device in extreme hot or cold, dusty or damp conditions. Do not expose it to direct sunlight.
- Avoid using the device near strong magnetic fields.
- Normal functioning of the product may be disturbed by ESD. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.
- Keep the device away from water and other liquids. In the event that water or other liquids enter the device, power off the product immediately and clean the device.
- Do not use chemicals to clean the device in order to avoid corrosion. Clean it with a dry cloth.
- Do not install this equipment in a confined space such as a book case or similar unit. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to environmental aspects of battery disposal.
- Use the apparatus in moderate climates.
- We are not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
- Do not attempt to disassemble, repair or modify the product. This will invalidate the warranty.
- If the device will not be used for an extended period of time, please charge the battery at least once per month to maintain battery life.
- Charge the battery if:
  - a) The battery level icon displays ☐ (An empty battery)
  - b) The device powers off automatically when restarted.
  - c) There is no response when pressing keys with keys unlocked and battery full.
- Do not interrupt the connection when the device is being formatted or transferring files. Otherwise, data may be corrupted or lost.
- When the device is used as a portable HD, please use only per the instructions. Otherwise, permanent data loss could occur.
- Please use and install data using the attachments/accessories provided and only according to the manufacturer's instruction.
- Please refer to the information on the bottom of the device for electrical and safety information before installing data or operating the device.
- To reduce the risk of fire or electric shock, do not expose this device to rain or moisture. The device should not be exposed to dripping or splashing. Never place objects filled with liquids, such as vases, on the device.
- There is danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type.
- The battery (battery or batteries or battery pack) should not be exposed to excessive heat such as sunlight, fire or the like.

- Please follow responsible procedures for battery disposal.
- If the power adaptor disconnected from the device, the device will remain operable as long as the battery has sufficient charge.
- The power adaptor is a CLASS II apparatus with double insulation, and no external ground is provided.
- Safety symbol explanation:



- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- To reduce the risk of electric shock, do not remove the cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the device.
- Correct Disposal of this product. This marking indicates that this product should not be disposed of with other household waste in the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To dispose of your used device, please use the return and collection systems available in your area or contact the retailer where the product was purchased. They can take this product for safe environmental recycling.
- This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
- CE in which countries where the product may be used freely: Germany, UK, Italy, Spain, Belgium, Netherlands, Portugal, Greece, Ireland, Denmark, Luxembourg, Austria, Finland, Sweden, Norway and Iceland.

### Listening Cautions

- This product respects the current regulations for limiting the output volume of consumer audio devices to a safe level. By listening to your device with headphones or earbuds at high volumes, you run the risk of permanent damage to your ears. Even if you get used to listening at high volumes and it seems normal to you, you still risk the possibility of damaging your hearing. Reduce the volume of your device to a reasonable level to avoid permanent hearing damage. If you hear ringing in your ears, reduce the volume or shut off your device. This device has been tested with the supplied earphones. In order to preserve your hearing, it is advised that you use only the following headphone models: the earphones supplied with your device, or any other headphones that respect the current regulations. Other types of headphones

may produce higher volume levels. (At full power ,the prolonged listening of the walkman can damage the ear of the use)

 
- Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations created by obstructed hearing.
- Even if your headphones or earphones are the open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.
- Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. What sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting the volume of your device at a safe level BEFORE your hearing adapts.

To establish a safe volume level:

- a. Start your volume control at a low setting.
- b. Slowly increase the sound until you can hear it comfortably and clearly, and without distortion. Once you have established a comfortable sound level, leave it there.

*This manual may not reflect your actual device's operation. All information is subject to change without prior notification. Please follow your actual device's operational procedures.*

II. Key Layout and Definitions

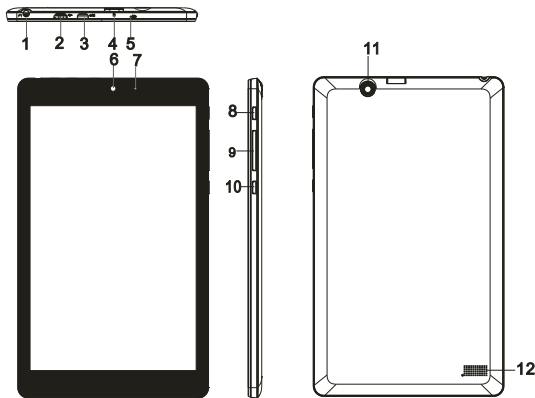

Feature	Functionality
1. Audio port (3.5 mm)	Connect a headset, headphones, microphones, or other audio equipment to listen to stereo sound, record audio, or make web phone calls.
2. Micro-USB port	• Connect the supplied power adapter to provide power to the tablet and charge the battery.
	Connect USB devices, via an optional USB conversion cable, for transferring data, music, photos, videos, and so on.
3. HDMI port	Connect HD television via optional HDMI cable, for switching the display to wider screen.
4. Micro SD card slot	Reads and writes files stored on a Micro SD card.
5. Microphone	Records sounds.
	Provides sound input while making calls using web-based apps.
6. Front-facing camera	Capture a front view picture or record videos.
	Use while making video calls.
7. Charging indicator	Indicates the battery-charge status.
8. Power button	Press and hold to turn the tablet on or off.
	Press to turn the display on or off.
9. Volume+/- buttons	Press to increase/decrease volume
10. Windows button	Press to open the Windows Start screen.
	Press for quick access to the most recently used app or most recently viewed screen.
11. Rear camera	Captures pictures or videos.
12. Speaker	Provides audio output.

**Note:**

- Both cameras do not support zoom, face tracking.
- The Micro-USB port does not support connecting to a computer or power sharing to connected USB devices.
- When using the tablet for the first time, or after it has been idle for a long time, user should charge the battery for over half an hour before turning it on, so as to guarantee the stability of its system.

### III. Introduction to Desktop

1. Windows 8.1 start image: On the start screen, you can see many programs fixed in the image. These application programs are displayed in the form of “magnet”. As long as you click them, you can easily visit them.

You need to log on your Microsoft account before the application program completely runs.



#### 2. Image slide applications

Slide to right



 
Slide to the right from the left side of the screen to start the application program in running.

Slide to left




Slide to the left from the right side of the screen to start Charm menu column.

Reduce

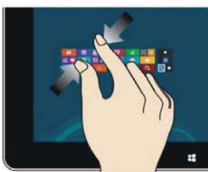

On the touch screen, narrow two fingers to reduce the image.

 Enlarge

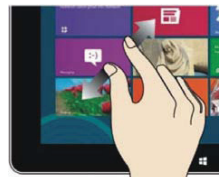

On the touch screen, widen two fingers to enlarge the image.

Slide downward



In start screen, slide from the top of the screen to view all application programs

Slide with finger



In start screen, slide finger right / left to move the image.


Slide upward



In the start screen, slide upward from the bottom of the screen to visit all application program (APPS) interfaces.


### 3. Introduction to app Interface

 Besides the application programs already fixed on the start screen, you can also start other application programs in all application programs, such as other software application programs attached to the Tablet PC.

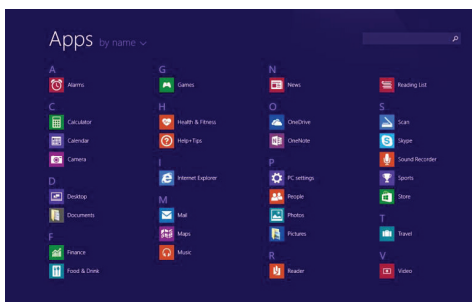




 If you want to fix more application programs on the start interface, see the operation in the figure below, (1) lightly touch, press and hold the application program magnet for about one second and then let go, and select (2) to fix to the start screen.

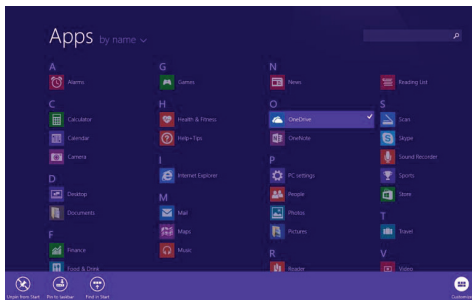

 Conversely, if you want to cancel or delete a certain application in the start screen, (1) lightly touch, press and hold the application program magnet for about one second and then let it go and run, and select (2) attribute column to cancel the programs such as fixation and deletion and then it can be completed.

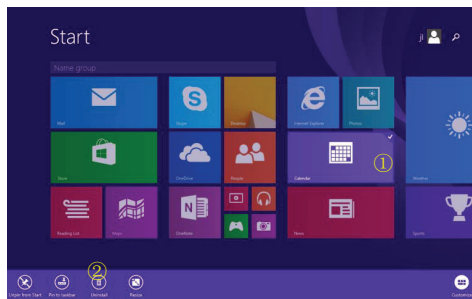

#### 4. Charm menu column

Slide it to the left from the right side of the screen to start Charm menu column, including: Start, Device, Setup, Share, and Search Program.



Slide it to the left from the right side of the screen to start Charm menu column, including: Start, Device, Setup, Share, and Search Program.



Can let you search the files and application programs in the Tablet PC.



Can let you share the program through social exchange website or e-mail.



Can return to the start screen. From the start screen, you can also use this function to return the application program that is opened in the latest.



 
 
Can let you read, write and share files, connect external screen or printer with the device connected to the Tablet PC.



Can let you set up the Table PC.



Search menu

Share menu

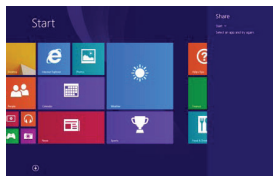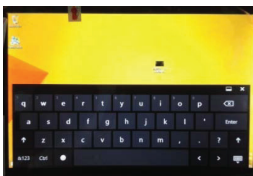

Device Menu

  
Set up Menu

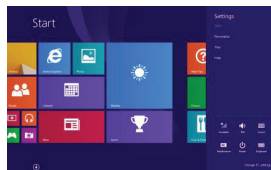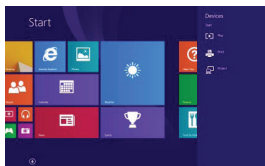


## 5. Dual-Screen Application

On my computer in (Figure 1), slide it inward from the left side of the screen, drag it and hold. Let go when seeing double interfaces appear.

 In (Figure 2), press the partition button on the middle partition line and drag right and left to partition the display proportion of the double screens.

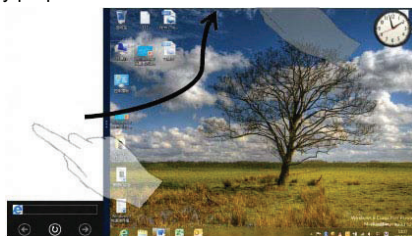

(Figure 1)

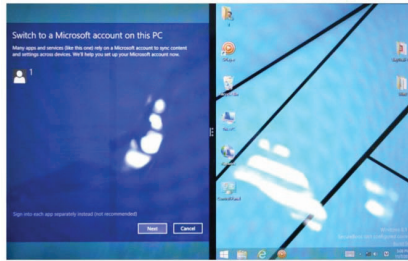 

(Figure 2)


## IV. Basic Operations
 
### 1. Dormancy, restart and power off



### 2. Security Management

#### User and password setup

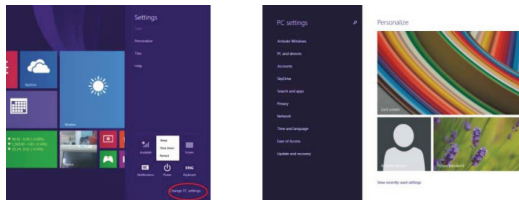

#### Method for quick setup:

Click the “Setup” button in “Charm” setup, and select “Change computer setup”. Select “User” on the left and click “Create local account” in “Your account” on the right side. After inputting the password of Complete Windows Live Id Account, input username, password, confirm password and password prompt.





### 3. Refresh or reset the system

 
Use the Charm menu:

- 1) Swipe-in from the right edge of the display to access Charms.
- 2) Touch **Settings** → **Change PC settings** → **Update and recovery** → **Recovery**.
- 3) Select a proper Recovery mode from the menu. Use the shortcut keys:

In shutdown status, user can press and hold Power and Vol- buttons at the same time to boot the device and enter Recovery mode, for the purpose of repairing or resetting the system.

After booting the tablet, user will come to the following screen to choose an option of the recovery mode:

-  Continue – Exit without doing anything and continue to Windows 8.1 system.
-  Use a device- Refresh the system by using a USB device, network connection, or Windows recovery DVD.
-  Troubleshoot- Refresh or reset your PC or use advanced tools.
-  Turn off your PC- do nothing and turn off the tablet.

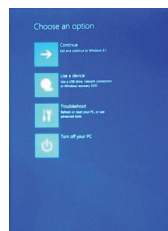

## V.WEEE and CE Information

Information about the meaning of Logo WEEE (Waste Electrical and Electronic Equipment):



The WEEE logo on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment.

Dispose of electronic waste, such as batteries according to the instructions.

Caution: risk of explosion if battery is replaced by an incorrect type.

For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

Information about the meaning of marking CE:



That means that the product answers to essential requirements of the European Directive 93/68/EEC applicable in the conformity assessment procedures.

This quick start guide and software related thereto may be changed without notice. You could download the latest software on [www.haier.com](http://www.haier.com). If this quick start guide does not exactly match the tablet you have before, please always refer to what is stated in the tablet.

# Haier *CE - Declaration of Conformity*

## Haier International(HK) Limited

Room B4 of Floor 21 ,No.3 Tower Building , Chinese  
Technology Research Park, China Technology Exploitation  
Institute; Gaoxin South first street No.009, Nanshan District,  
Shenzhen City, Guangdong Province.

Product Description: Tablet PC

Product Model Name: W800

Declare that the above is in conformity with the provisions  
of the Council Directives:1999/5/EC(R&TTE) + 2006/95  
/EC(LVD) + 2014/30/EU(EMC)

Applied/Complied Harmonized Standards:

LVD directive : EN60950-1 : 2006 + A11:2009  
+A1:2010 + A12:2011+A2: 2013

EMC directive : EN55022: 2010 + AC:2011  
EN61000-3-2:2006+A1:2009 + A2: 2009  
EN61000-3-3 : 2013  
EN55024: 2010

R&TTE directive: EN 62479:2010  
ETSI EN 301 489-1 V1.9.2  
ETSI EN 301 489-17 V2.2.1  
ETSI EN 300 328 V1.8.1

**Haier International(HK) Limited**

**Date of issue: November 1, 2014**

*For and on behalf of*  
**Haier International (HK) Limited**  
**海爾國際(香港)有限公司**

*Authorized Signature(s)*

PM : Helen

# Haier

## **Haier Information Technology (Shenzhen) Co.,Ltd**

---

Manufacturer address: Room B4 of Floor 21 ,No.3 Tower Building ,  
Chinese Technology Research Park, China Technology Exploitation  
Institute; Gaoxin South first street No.009, Nanshan District, Shenzhen  
City, Guangdong Province.