





kobo touch 2.0


Great Expectations

Mrs. Pocket was sitting on a garden chair under a tree, reading, with her legs upon another garden chair; and Mrs. Pocket's two nurse-maids were looking about them while the children played. "Mamma," said Herbert, "this is young Mr. Pip." Upon which Mrs. Pocket received me with an appearance of amiable dignity.

"Master Alick and Miss Jane," cried one of the nurses to two of the children, "if you go a bouncing up against them bushes you'll fall over into the river and be drowned, and what'll your pa say then?"

At the same time this nurse picked up Mrs. Pocket's handkerchief, and said, "If that don't make six times you've dropped it, Mum!" Upon which Mrs. Pocket laughed and said, "Thank you, Flopson," and settling herself in one chair only, resumed her book. Her countenance immediately assumed a knitted and intent expression as if she had been reading for a week, but before she could have read half a dozen lines, she fixed

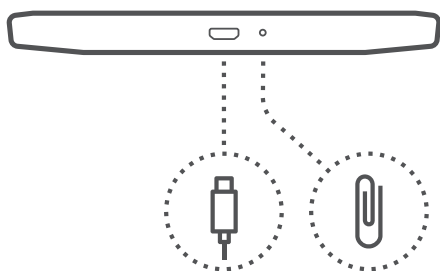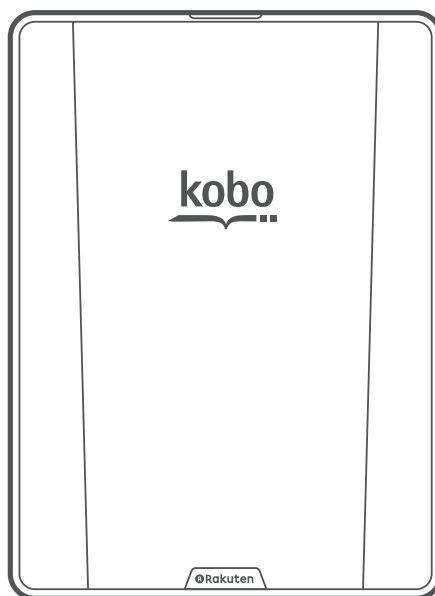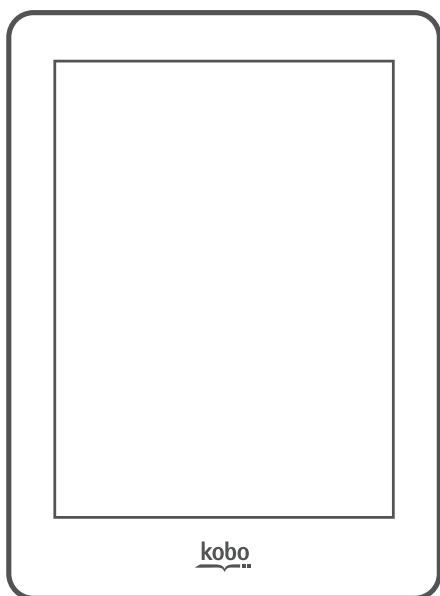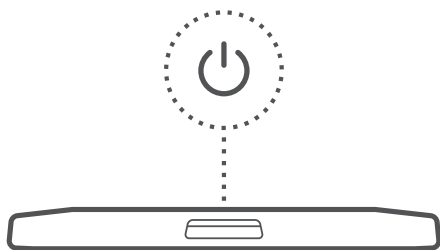

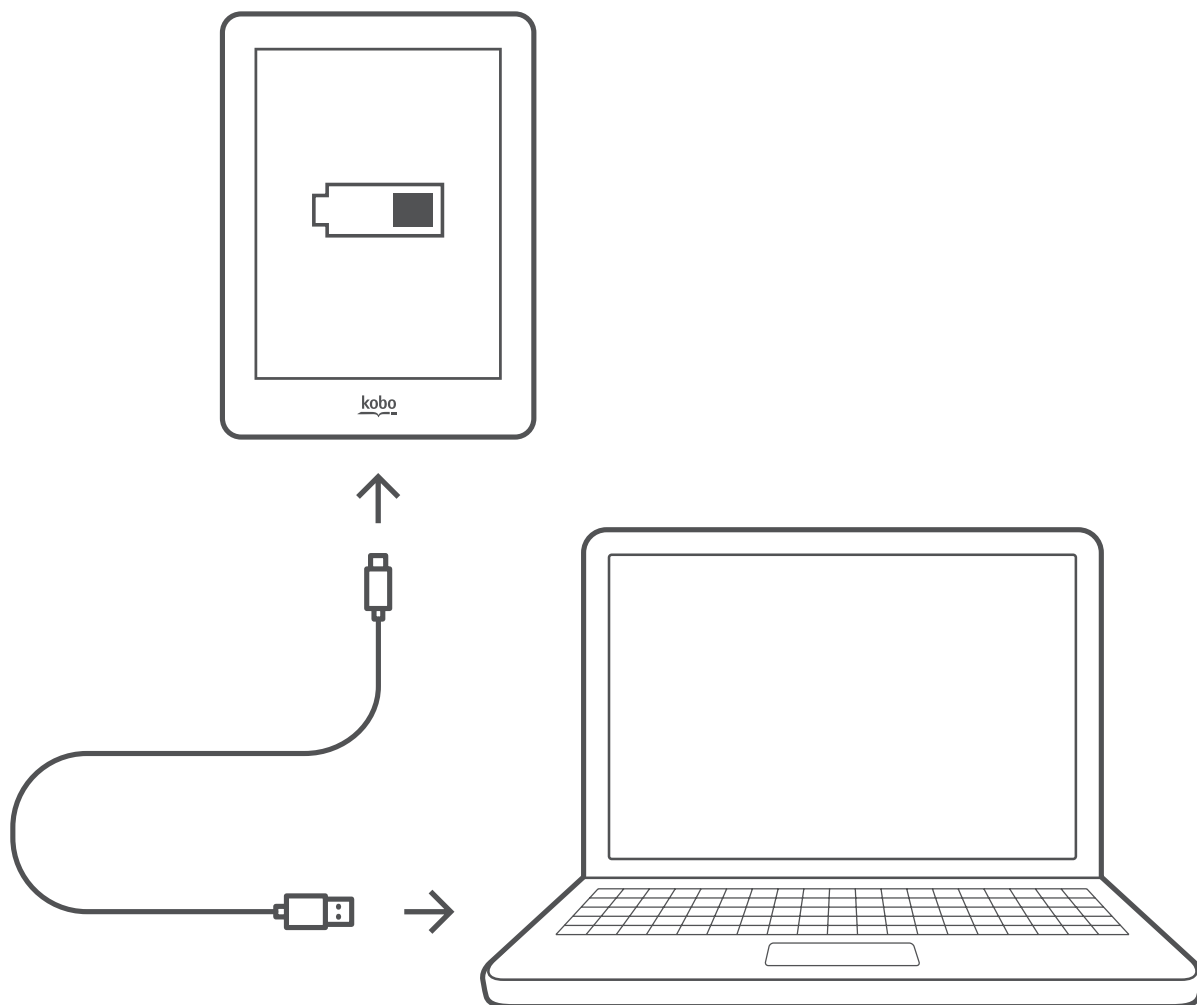

1

Charge by connecting to your computer.

Chargez la liseuse en la connectant à l'ordinateur.

コンピュータに接続して充電してください。

Carica connettendo al computer.


Carregue o seu eReader ligando-o ao computador.

Carregue conectando ao seu computador.

Carga el lector conectándolo a un ordenador.

Laden Sie den eReader über die Computerverbindung.

Laad de eReader op met je computer.

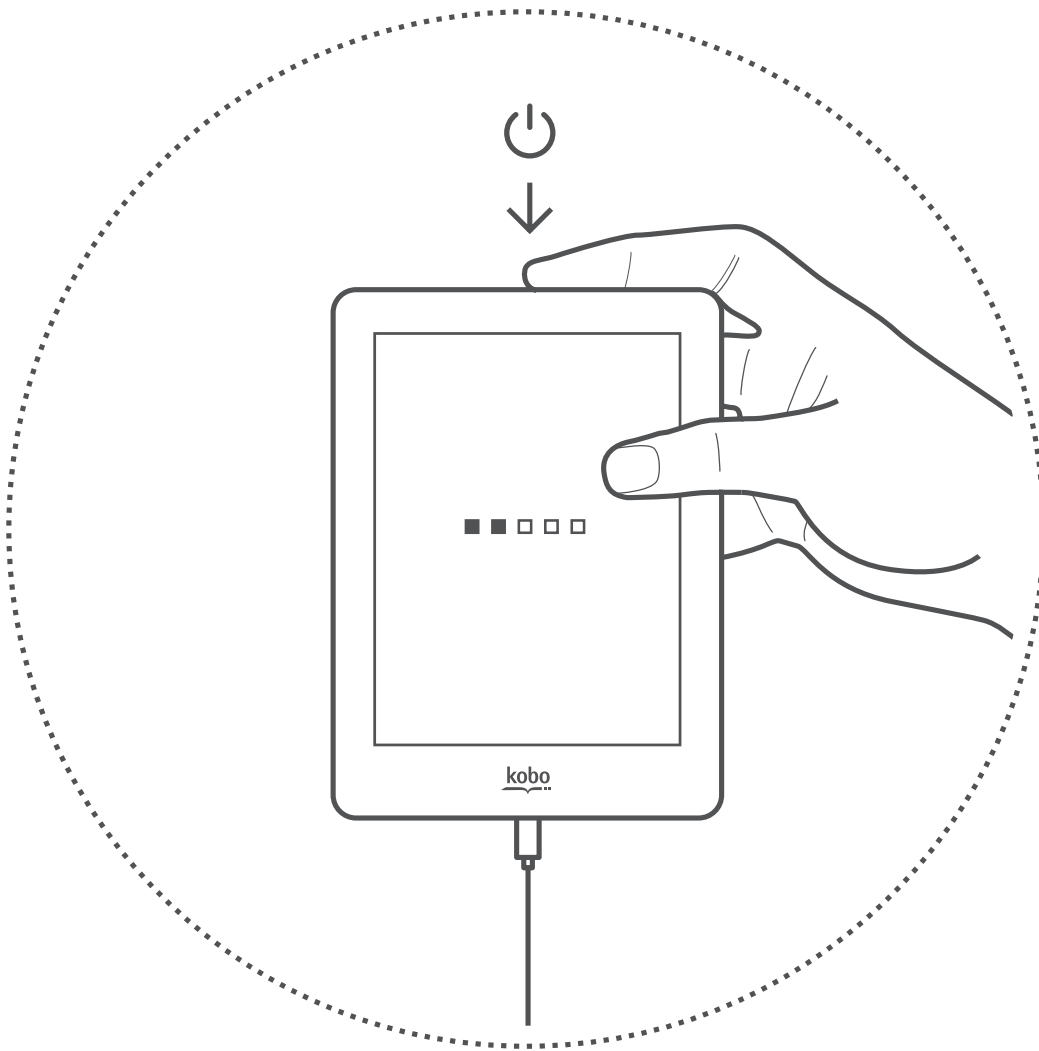

2

Press and hold the power button to start.

Appuyez sur le bouton d'alimentation pour commencer.

電源ボタンを長押しします。

Tieni premuto il tasto di accensione per iniziare.


Mantén pulsado el botón de encendido para iniciar.

Prima sem largar o botão de ligar/desligar para ligar.

Para iniciar, mantenha o botão de ligar/desligar pressionado.

Halten Sie den An-/Ausschalter gedrückt, um zu beginnen.

Houd de aan/uit-knop ingedrukt om op te starten.

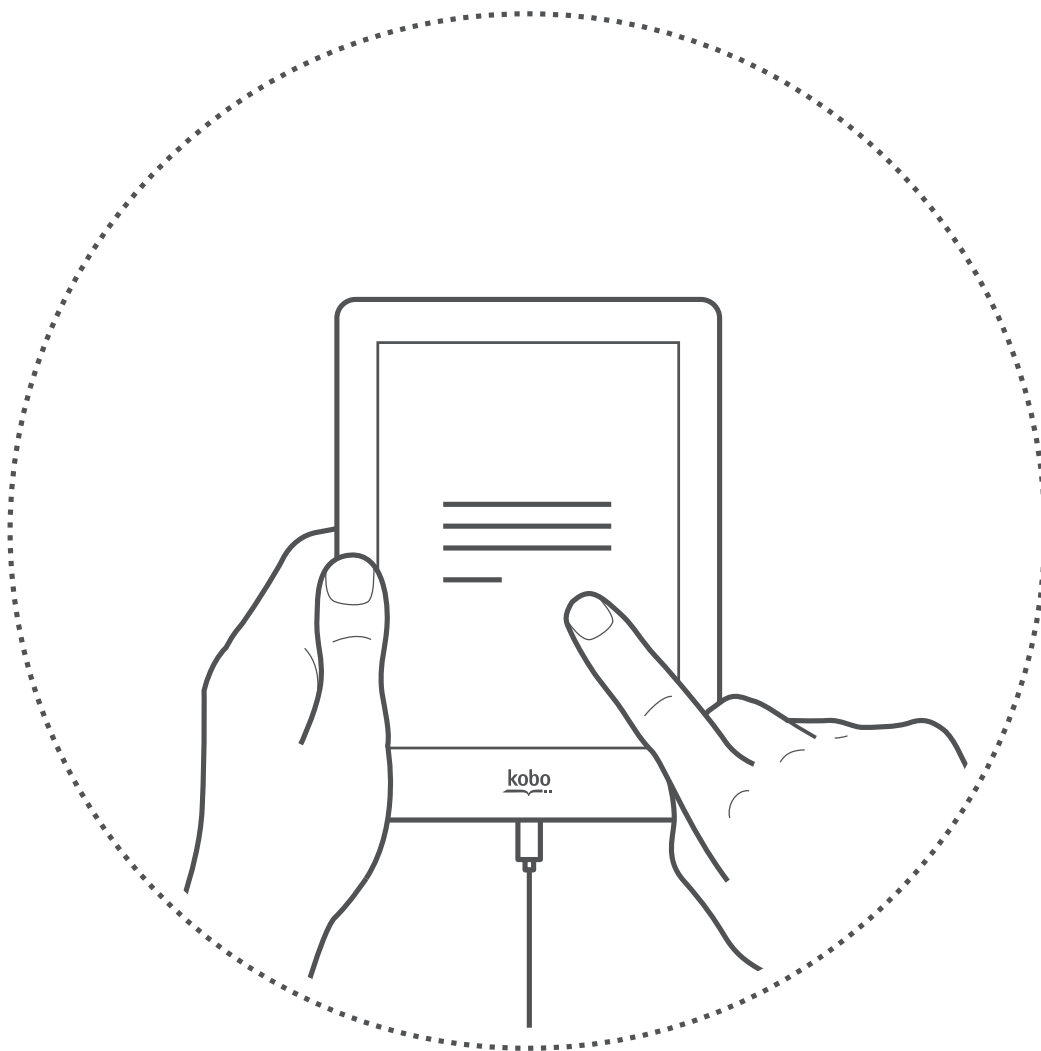

3

Follow the setup instructions on screen.

Suivez les instructions d'installation sur l'écran.

画面のセットアップ手順にしたがってください。

Segui le istruzioni.


Siga as instruções no ecrã para configurar.

Siga as instruções de configuração na tela.

Sigue las instrucciones de configuración.

Folgen Sie der Setup-Anleitung auf dem Bildschirm.

Volg de instructies op het scherm.

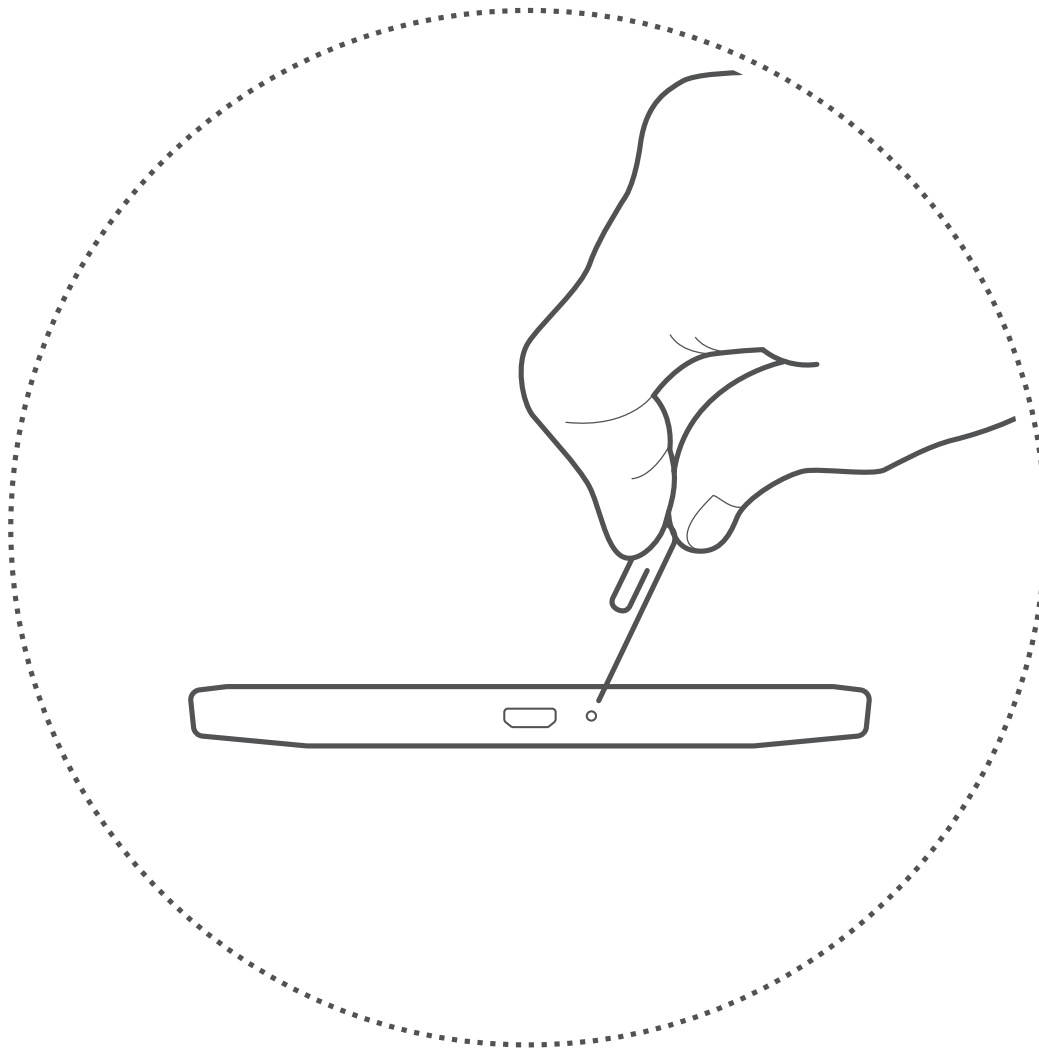

To reset your eReader, insert a paper clip.

Insérez un trombone pour réinitialiser votre liseuse.

リセットするには、ピン等でピンホールのリセットボタンを押してください。

Per eseguire il reset dell'eReader usare una graffetta.


Para restaurar o seu eReader, insira um clipe.

Para reiniciar o seu eReader, insira um clipe de papel.

Para reiniciar tu eReader, inserta un clip.

Büroklammer einstecken für ein Reset Ihres eReaders.

Voer een paperclip in om uw eReader te resetten.

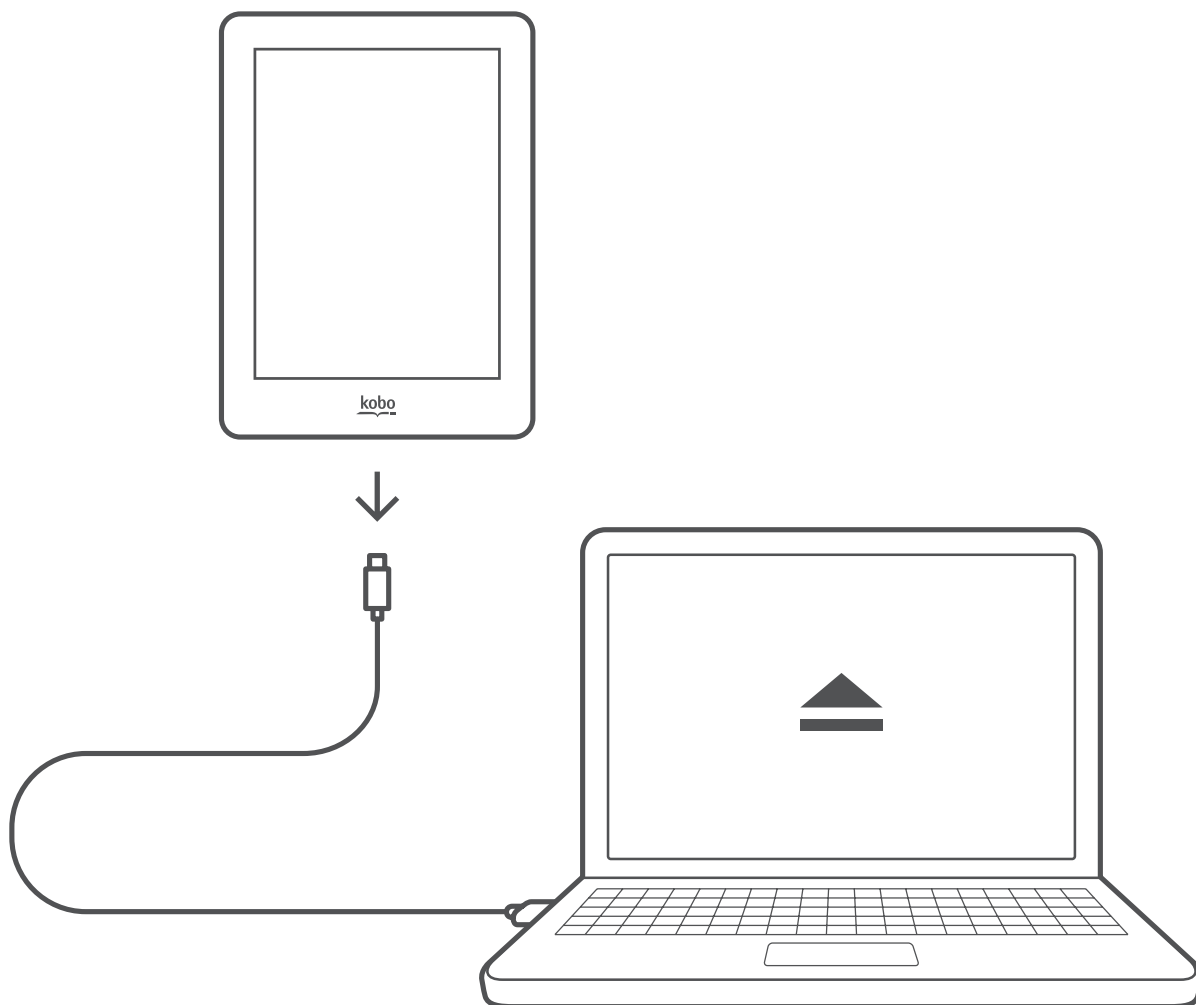

Eject your eReader before unplugging the USB cable.

Éjecter votre liseuse avant de débrancher le câble USB.

ケーブルを抜く前に PC 接続を解除してください。

Espelli l'eReader prima di scollegare il cavo USB.

Expulsa el lector antes de desenchufar el cable USB.

Remova o seu eReader antes de desligar o cabo USB da tomada.

Remova o seu eReader antes de desligar o cabo USB.

Werfen Sie den eReader aus, bevor Sie die USB-Verbindung trennen.

Werp de eReader uit voor je kabel losmaakt.



kobo.com/help