 


Quick Start Guide

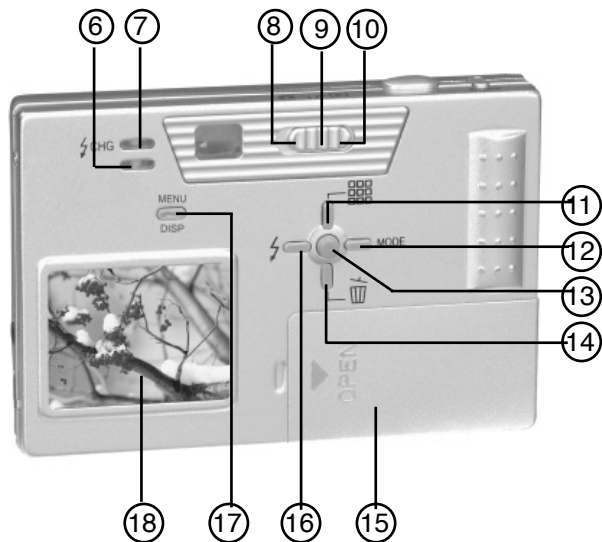

1. **POWER** button
2. **SHUTTER** button
3. **Flash**
4. **Viewfinder**
5. **Lens**
6. **Function light**
7. **Charging light**
8. **REC mode**
9. **Mode switch**
10. **PLAY mode**
11. **UP button**
12. **RIGHT button**
13. **OK button**
14. **DOWN button**
15. **Battery cover**
16. **LEFT button**
17. **MENU/DISP button**
18. **LCD screen**
19. **TV jack**
20. **USB port**



Quick Start

- Unpack the carton and take out your camera.
- Slide to open the battery compartment cover and load 2 AAA batteries (**recommend using the recharged batteries**) following the marked.
- Close the battery compartment cover.

Take Pictures

- Press the **POWER** button to turn on your camera.
- Turn the mode switch to **REC** position.
- Target your subject in the LCD or in the viewfinder. If the LCD is off, please press the **DOWN** button to turn on.
- Press the **RIGHT** button to select the desired snap mode.
- Press the **LEFT** button to select the desired flash mode.
- Adjust the distance, and center your subject in the LCD, then press the **SHUTTER** button to capture a picture.

 
View Pictures

- Press the **POWER** button to turn on your camera.
- Turn the mode switch to **PLAY** position.
- Press the **LEFT/RIGHT** buttons to iterate through your pictures.
- Press the **UP** button to enter thumbnail mode (9 pictures will be displayed on the LCD).
- In thumbnail mode, you can press the **LEFT/RIGHT** buttons to select the desired picture, and press **UP** button to display it singly on the LCD.


Download Pictures to PC

- Turn the mode switch to **PLAY** position.
- Plug in the USB cable to the PC USB port and your camera USB port.
- Your camera will enter the "**Mass Storage**" mode. And the removable disk will appear in your PC.
- Now you can download the pictures in your camera to your PC (if your PC's OS is windows 98, you must install the camera driver in your PC firstly).

Le Guide rapide de Commencement

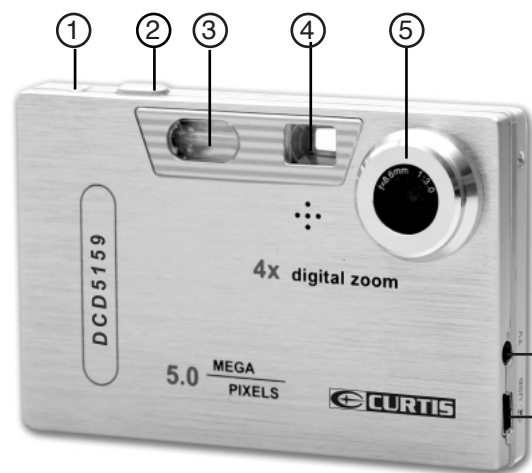

 1. Bouton d'ALIMENTATION
2. Bouton d'Obturbateur
3. Flash
4. Viseur
5. Lentille
6. Lampe de fonction
7. Lampe de Charger
8. Mode de REC
9. Commutateur de mode
10. Mode de lecture

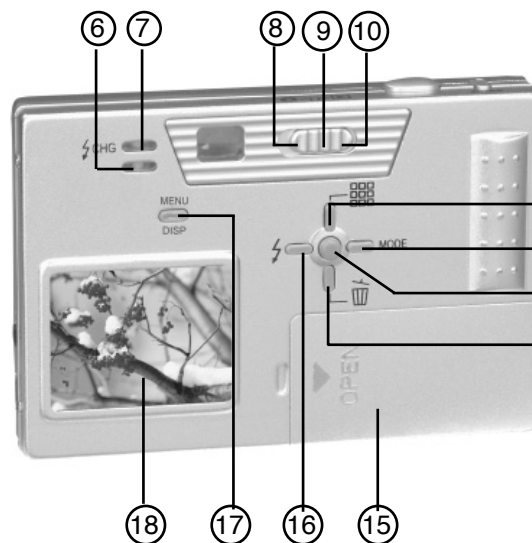

11. Bouton Haut
12. Bouton Droit
13. Bouton OK
14. Bouton BAS
15. Couverture de pile
16. Bouton GAUCHE
17. Bouton de MENU/DISP
18. L'écran d'affichage à cristaux liquides
19. Cric de télévision
20. Port USB

Le commencement rapide

- Déballer la boîte et sort votre appareil photo.
- Ouvrir la couverture de compartiment de pile et charge 2 piles de AAA (**recommande utilisant les piles rechargeées**) suivant le marqué.
- Fermer la couverture de compartiment de pile.

Prendre des Images

- Appuyer le bouton d'Alimentation pour allumer votre appareil photo.
- Tourner le commutateur de mode à la position de REC.
- Cibler votre sujet dans l'affichage à cristaux liquides ou dans le viseur. Si l'affichage à cristaux liquides est éteint, s'il vous plaît appuyer le bouton BAS pour l'allumer.
- Appuyer le bouton OK pour choisir le mode de capture désiré.
- Appuyer le bouton GAUCHE pour choisir le mode de Flash désiré.
- Ajuster la distance, et centrer votre sujet dans l'affichage à cristaux liquides, alors appuyer le bouton d'Obturbateur pour capturer une image.

Pour regarder des photos

- Appuyer le bouton d'ALIMENTATION pour allumer votre appareil photo.
- Tourner le commutateur de mode à la position de lecture.
- Appuyer les boutons de GAUCHE/DROITE pour itérer par vos photos.
- Appuyer le bouton HAUT pour accéder le mode d'ongle du pouce (9 images seront affichées sur l'affichage à cristaux liquides).
- Dans le mode d'ongle du pouce, vous pouvez appuyer les boutons GAUCHE/DROIT pour choisir la photo désirée, et la presse le bouton HAUT pour l'afficher séparément sur l'affichage à cristaux liquides.

Télécharger les photos à PC

- Tourner le commutateur de mode à la position de Lecture.
- Brancher le câble de USB au port de USB DE PC et votre port de USB d'appareil photo.
- Votre appareil photo accédera le mode « Mémoire Massif ». Et le disque amovible apparaîtra dans votre PC.
- Maintenant vous pouvez télécharger les photos dans votre appareil photo à votre PC (si le système d'exploitation de votre PC est des fenêtres 98, vous devez installer le pilot d'appareil photo dans votre PC premièrement).