




Guide de démarrage rapide

GPS GS170

Guide de démarrage rapide

1.1 Caractéristiques de l'appareil

Vue de face

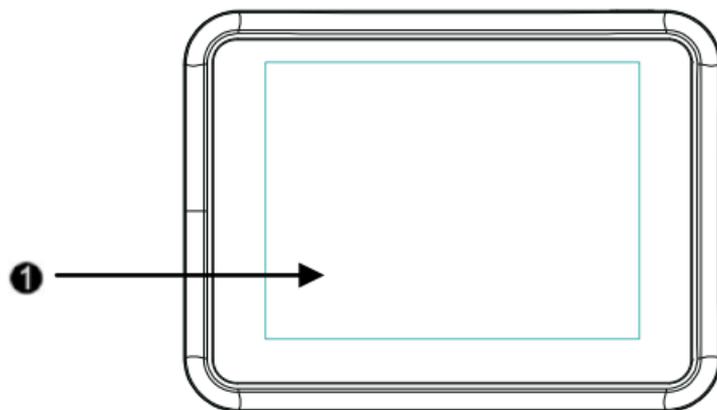


1 **Ecran tactile**

Affiche l'image envoyée par l'appareil.

Appuyez sur l'écran pour sélectionner une commande ou entrer une information.

Vue de dos

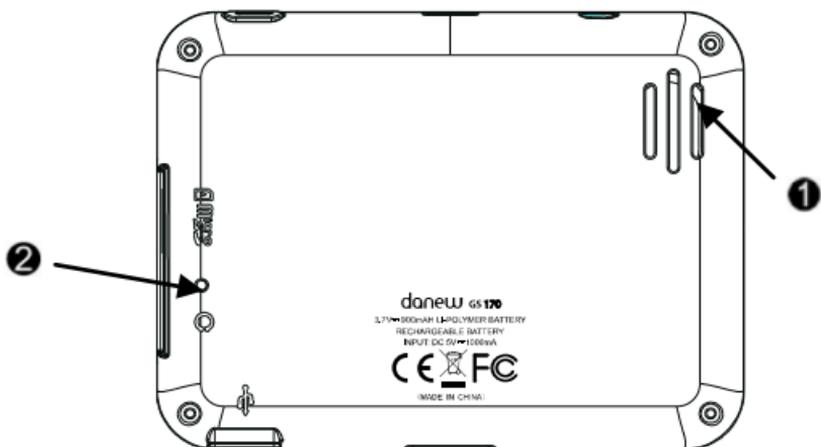


① Haut-parleur

Emet la musique, le son, les voix

② Bouton reset

Remise à zéro du système


Vue de dessus

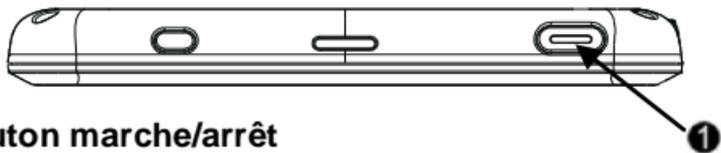

① Bouton marche/arrêt

Allume et met l'appareil en veille/arrêt.

Vue de côté

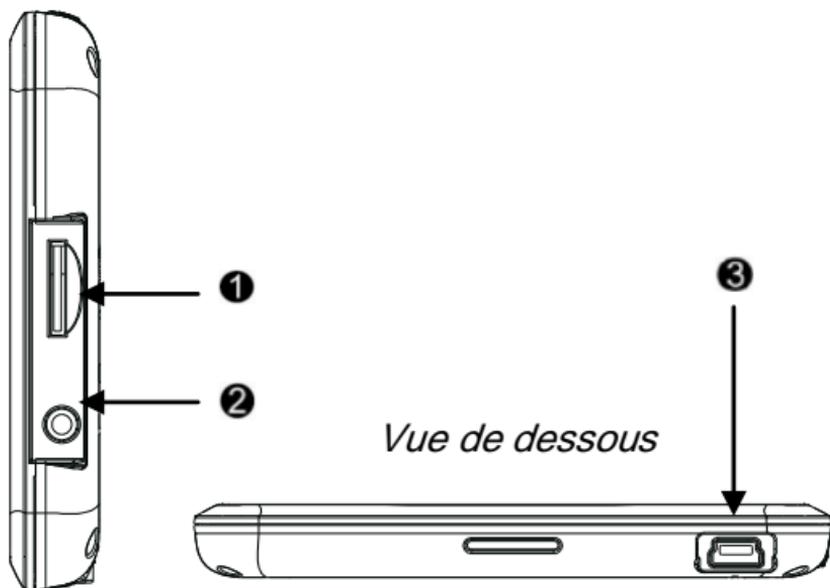

❶ Slot Micro-SD

Accepte les cartes Micro-SD pour le transfert de fichiers (audio, vidéo, photo...)

❷ Prise casque (jack 2,5 mm)

Permet de connecter un casque audio

❸ Port mini-USB

Permet de connecter le câble USB (synchronisation ou recharge)

1.2 Mise en route de l'appareil

1. Appuyez sur Marche/arrêt pendant quelques secondes.

2. Votre appareil s'allumera automatiquement.

Connectez le chargeur allume-cigare.

3. L'écran d'accueil apparaît.

4. Le menu principal apparaît comme ci-dessous.

Vous pouvez maintenant utiliser votre appareil.



5. Chargez entièrement la batterie avant la première utilisation de l'appareil.

1.3 Utilisation du GPS dans votre véhicule

Un support de voiture ainsi qu'un chargeur allume-cigare sont fournis avec l'appareil.

Le support de voiture est muni d'un bras avec ventouse et d'un support réceptionnant le GPS.

Le GPS peut mettre quelques minutes à réceptionner les satellites lors d'une première utilisation.

Attention : Ne jamais attacher le support devant un Airbag ou à un endroit qui pourrait gêner la vision du conducteur.

1.4 Avertisseur de radars sur GPS

Transformez votre GPS en avertisseur de radars en achetant le coupon de mise à jour dans la rubrique « Alerte radars » sur le site www.danew.com



Pour le manuel complet, rendez vous sur le site
www.danew.com

Pour des questions techniques, contactez la hotline
technique en France :

Tél : 0899 782 728




Quick start

GPS GS170

Quick start

1.2 Device features

Front components

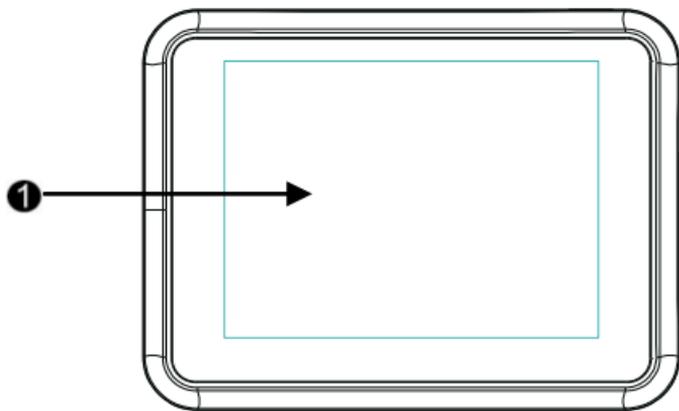


1 Touch screen

Displays the output of your device.

Tap the screen with your fingertip to select menu commands or enter information.

Back components

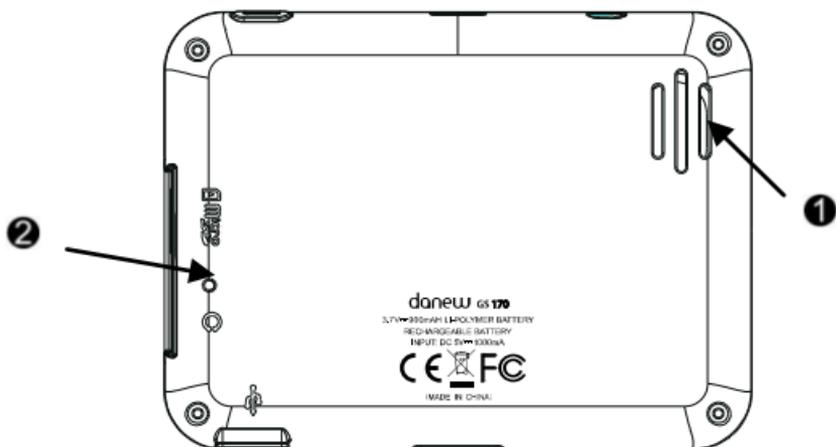


1 Speaker

Sends out music, sound and voices

2 Reset button

Restart system.


Top components

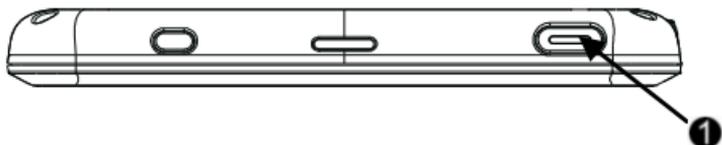

1 ON/OFF button

Turns on and off the device (standby, by pressing briefly)

Side components

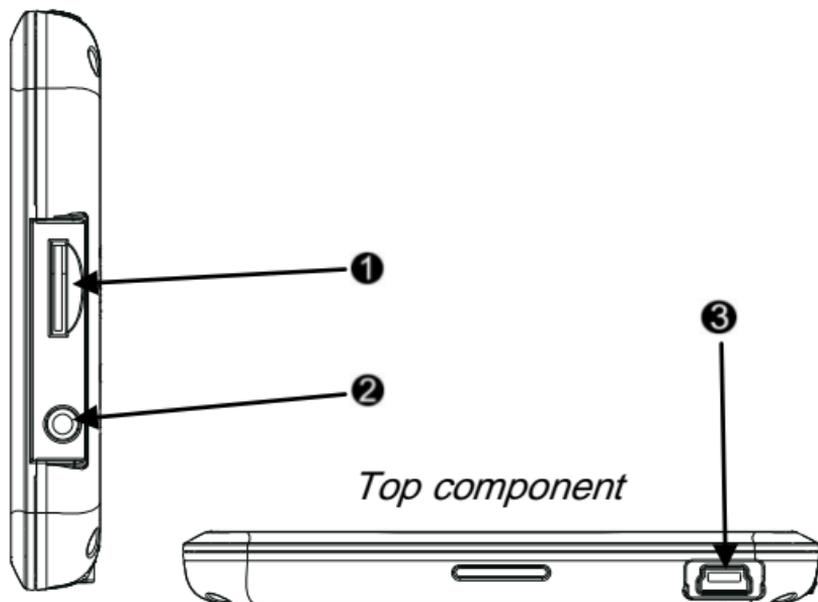

❶ MicroSD card Slot

Accepts a microSD card for accessing data such as MP3 music.

❷ Headphone connector (jack 2,5 mm)

Connects to stereo headphones

❸ Mini-USB connector

Connects to the USB cable.

1.2 Performing the initial Start Up

1. Press the ON/OFF button for several seconds.

2. Your device will automatically turn on.

Connect the car charger.

3. The opening screen appears.

4. Then, the main menu appears as shown below.

You can now use your device



5. Fully charge the battery before using your device the first time.

1.3 Using your device in a vehicle

A car holder and a car charger are supplied with your device.

The car holder consists of a bracket and a stand. The GPS may take a few minutes to find its current location initially.

Caution: Never place the holder where the driver's field of vision is blocked, or in front of airbags.

1.4 GPS Speedcamera locator

Turn your GPS into a speed camera locator. Please visit our website www.danew.com



For full manual, please visit our website:

www.danew.com

For technical issues, please contact us on our hotline:

Tel: 0899 782 728 (In France)